TOSHIBA

FILE NO. 140-200334

SERVICE MANUAL

COLOR TELEVISION/ VIDEO CASSETTE RECORDER/ DVD VIDEO PLAYER

MW27FN1R

MW27FN1CR

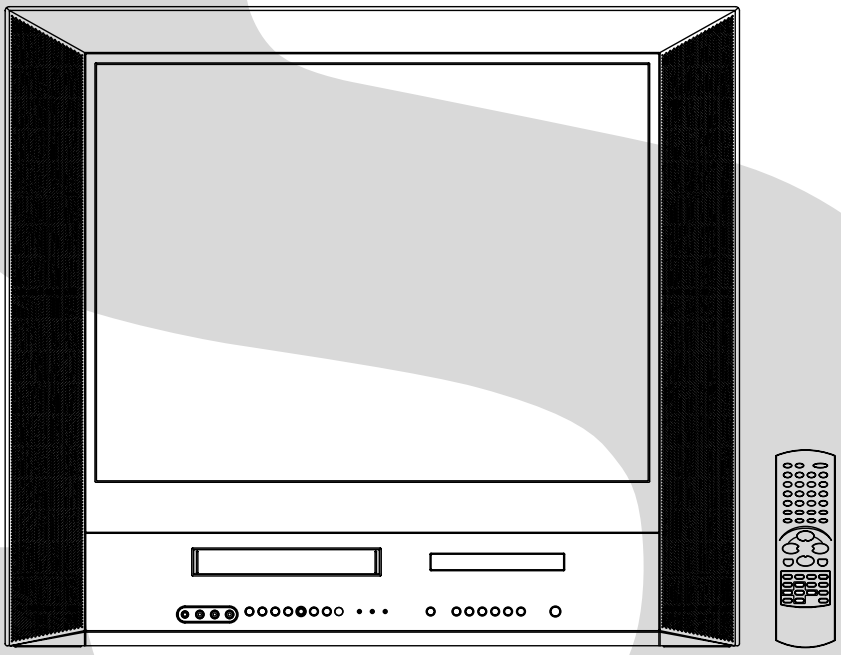

DOCUMENT CREATED IN JAPAN, Aug., 2003

CAUTION

THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM.

TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS SERVICE MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.

USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

Location of the required Marking
The rating sheet and the safety caution are on the rear of the unit.

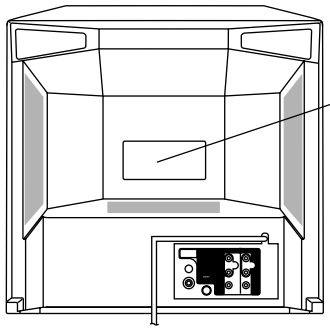

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT SAFEGUARDS

1. **READ INSTRUCTIONS**
   All the safety and operating instructions should be read before the unit is operated.
2. **RETAIN INSTRUCTIONS**
   The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS**
   All warnings on the unit and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS**
   All operating and use instructions should be followed.
5. **CLEANING**
   Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **ATTACHMENTS**
   Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.
7. **WATER AND MOISTURE**
   Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
8. **ACCESSORIES**
   Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

PORTABLE CART WARNING
(symbol provided by RETAC)

S3126A

8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. **VENTILATION**
   Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the unit, and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **POWER SOURCES**
    This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION**
    This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
12. **POWER-CORD PROTECTION**
    Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. **LIGHTNING**
    To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.
14. **POWER LINES**
    An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
15. **OVERLOADING**
    Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
16. **OBJECT AND LIQUID ENTRY**
    Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.
17. **OUTDOOR ANTENNA GROUNDING**
    If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
18. **SERVICING**
    Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled, or objects have fallen into the unit.
c. If the unit has been exposed to rain or water.
d. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
e. If the unit has been dropped or the cabinet has been damaged.
f. When the unit exhibits a distinct change in performance, this indicates a need for service.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.
Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

24. DISC TRAY

Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

25. CONNECTING

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

26. SOUND VOLUME

Reduce the volume to the minimum level before you turn on the product. Otherwise, sudden high volume sound may cause hearing or speaker damage.

27. SOUND DISTORTION

Do not allow the product output distorted sound for a longtime. It may cause speaker overheating and fire.

28. HEADPHONES

When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

29. LASER BEAM

Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.

30. DISC

Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.

31. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

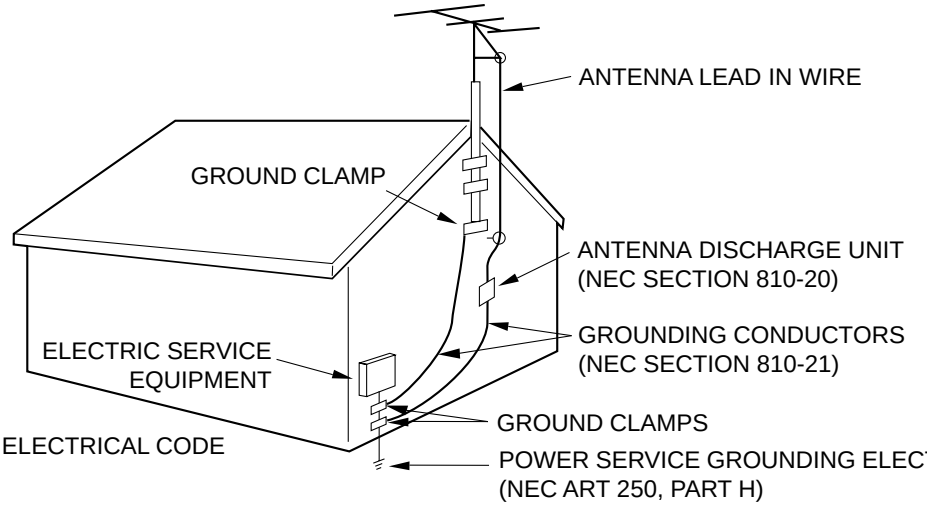

S2898A

TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the TV/DVD/VCR block from the main unit and the **Fig. 1** below can be seen. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Remove the screw ① of the Deck Chassis and remove the Loading Motor.
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape. **(Refer to Fig. 2)**
4. Rotate the Clutch Ass'y either of the directions to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

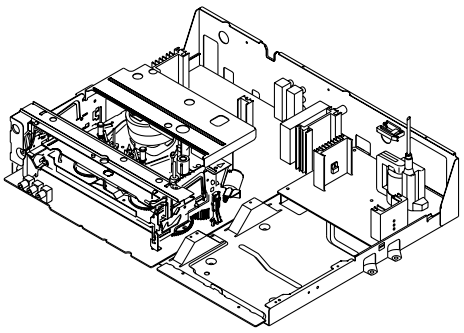

Fig. 1

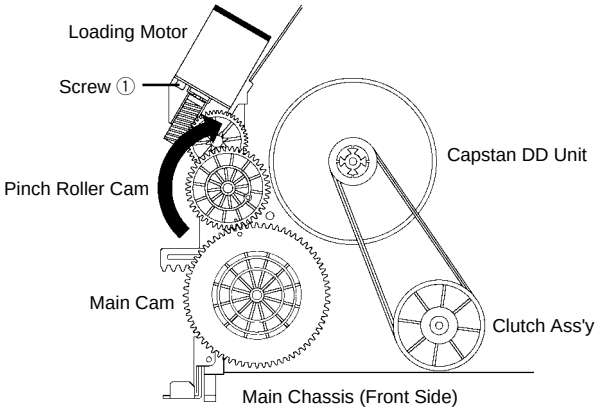

Fig. 2

DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Back Cabinet, TV//DVD/VCR Block and DVD TOP. **(Refer to item 1 of the DISASSEMBLY INSTRUCTIONS.)**
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. **(Refer to Fig. 1)**
3. Draw the Tray.

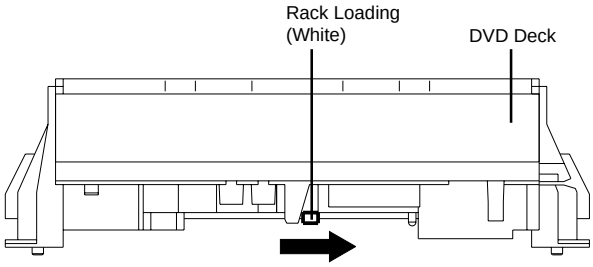

Fig. 1

PARENTAL CONTROL - RATING LEVEL

4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Press and hold the '7' key on the remote control unit.
3. Simultaneously press and hold the 'STOP' key on the front panel.
4. Hold both keys for more than 3 seconds.
5. The On Screen Display message 'PASSWORD CLEAR' will appear.
6. The 4 digit password has now been cleared

TRAY LOCK

Tray cannot be opened by setting the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Press and hold the '9' key on the remote control unit.
4. Simultaneously press and hold the 'STOP' key on the front panel.
5. Hold both keys for more than 3 seconds.
6. Press the OPEN/CLOSE key on the front panel to check the Tray Lock setting.

NB: No indications on the screen when the Tray Lock is setting.

To unlock the Tray Lock, please follow the steps below.

1. Turn Unit ON.
2. Set the DVD to the Stop Mode.
3. Set the VOLUME to minimum.
4. Press and hold the 'VOL. DOWN' button on the front panel.
5. Simultaneously press and hold the '4' key on the remote control unit.
6. Hold both keys for more than 1 second.
7. The On Screen Display message 'INITALIZE5 COMPLETE' will appear.
8. The Tray Lock has now been cleared.

NB: The above procedure will reset ALL of the player's settings to the default factory state.

TABLE OF CONTENTS

CAUTION A1-1
SERVICING NOTICES ON CHECKING A1-2
HOW TO ORDER PARTS A1-2
IMPORTANT WARNING A1-3, A1-4
TAPE REMOVAL METHOD AT NO POWER SUPPLY A1-5
DISC REMOVAL METHOD AT NO POWER SUPPLY A1-5
PARENTAL CONTROL RATING LEVEL A1-6
TRAY LOCK A1-6
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-16
DISASSEMBLY INSTRUCTIONS
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS B1-1, B1-2
2. REMOVAL OF VCR DECK PARTS ..... B2-1~B2-6
3. REMOVAL OF DVD DECK PARTS ..... B3-1~B3-4
4. REMOVAL OF ANODE CAP B4-1
5. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B5-1, B5-2

KEY TO ABBREVIATIONS C1-1, C1-2
SERVICE MODE LIST C2-1
PREVENTIVE CHECKS AND SERVICE INTERVALS C3-1, C3-2
WHEN REPLACING EEPROM (MEMORY) IC C4-1
SERVICING FIXTURES AND TOOLS D1-1
PREPARATION FOR SERVICING D1-1
MECHANICAL ADJUSTMENTS ..... D2-1~D2-4
ELECTRICAL ADJUSTMENTS ..... D3-1~D3-6
BLOCK DIAGRAMS
DVD E-1, E-2
Y/C/AUDIO/HEAD AMP E-3, E-4
MICON E-5, E-6
IN/OUT E-7, E-8
CHROMA/IF E-9, E-10
SOUND AMP/SURROUND E-11, E-12
Hi-Fi/DEMODULATOR E-13, E-14
DIGITAL COMB FILTER E-15, E-16
DVD IN/OUT ..... E-17~E-20
REGULATOR E-21, E-22
TV E-23, E-24

PRINTED CIRCUIT BOARDS
DVD F-1, F-2
VCR ..... F-3~F-10
OPERATION/DEFLECTION/CRT/VM/RELAY/SW F-11, F-12

SCHEMATIC DIAGRAMS
RF_AMP/DSP G-1, G-2
MOTOR DRIVE G-3, G-4
MPEG G-5, G-6
MEMORY G-7, G-8
AUDIO/VIDEO G-9, G-10
REGULATOR2 ..... G-11, G-12
Y/C/AUDIO/HEAD AMP G-13, G-14
MICON G-15, G-16
IN/OUT ..... G-17~G-20
CHROMA/IF G-21, G-22
SOUND AMP/SURROUND G-23, G-24
Hi-Fi/DEMODULATOR G-25, G-26
DIGITAL COMB FILTER G-27, G-28
DVD IN/OUT ..... G-29~G-32
REGULATOR1 ..... G-33, G-34
TV POWER G-35, G-36
DEFLECTION G-37, G-38
OPERATION G-39, G-40
CRT/SVM G-41, G-42
SW/RELAY/FG G-43, G-44

INTERCONNECTION DIAGRAM G-45, G-46
WAVEFORMS ..... H-1~H-3
MECHANICAL EXPLODED VIEWS I1-1, I1-2
CHASSIS EXPLODED VIEWS I2-1, I2-2
DVD DECK EXPLODED VIEWS I3-1
MECHANICAL REPLACEMENT PARTS LIST ..... J1-1~J1-4
CHASSIS REPLACEMENT PARTS LIST J2-1, J2-2
DVD DECK REPLACEMENT PARTS LIST J3-1, J3-2
ELECTRICAL REPLACEMENT PARTS LIST ..... J4-1~J4-16

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-1	**TV System**	CRT		CRT Size / Visual Size	27 inch / 676.6mmV
				CRT Type	Flat
				Deflection	104 degree
				Magnetic Field BV/BH	+ 0.45 G / 0.18 G
		Color System			NTSC
		Speaker			2 Speaker
				Position	Front
				Size	1.8 x 3.9 Inch
				Impedance	8 ohm
		Sound Output		MAX	2.5W + 2.5W
				10%(Typical)	2.5W + 2.5W
G-2	**VCR System**	System			VHS Player / Recorder
		Video System			NTSC
		Hi-Fi STEREO			Yes
		NTSC PB			-
		Deck		DECK	OVD-7
				Loading System	Front
				Motor	3
		Heads	Video Head		4 Heads
			FM Audio Head		2 Heads
			Audio /Control		Mono /Yes
			Erase(Full Track Erase)		Yes
		Tape Speed	Rec	PAL	-
				NTSC	SP/SLP(EP)
			Play	PAL	-
				NTSC	SP/SLP(EP)
		Fast Forward / Rewind Time (Approx.) at 25oC			FF:1'48"/REW:1'48"
				with Cassette	T-120
		Forward/Reverse Picture Search		NTSC or PAL-M	SP/SLP(EP)=3x,5x / 9x,15x
		Frame Advance			Yes
		Slow Speed			1/10
G-3	**DVD System**	Color System			NTSC
		Disc			DVD, CD-DA, CD-R/RW, Video CD
		Disc Diameter			120 mm , 80 mm
		Deck		Disc Loading System	Front Loading
				Motor	2 Motors
		Pick up			1-Lens 2-Beams System
		Playback time(Max)		DVD 1-Layer	135min (4.7GB)
				DVD 2-Layer	245min (8.5GB)
				CD	74min
				Video CD	74min
		Search speed		Fwd	2-15 times / 4 step (DVD,Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD,Video CD)
					4-40 times (CD)
				Rew	2-15 times / 4 step (DVD,Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD,Video CD)
					4-40 times (CD)
		Slow speed		Fwd	1/8-1/2 times
				Actual	-
				Rew	-
				Actual	-
G-4	**Tuning System**	Broadcasting System			US System M
		Tuner and Receive CH		System	1 Tuner
				Destination	US(w/CATV)
				Tuning System	F-Synth
				Input Impedance	VHF/UHF 75 ohm
				CH Coverage	2~69, 4A,A-5~A-1, A~I, J~W,W+1~W+84
		Intermediate Frequency		Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.5MHz
		Preset CH			No
		Stereo/Dual TV Sound			US-Stereo
		Tuner Sound Muting			Yes

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-5	**Signal**	Video Signal	Input Level	1 V p-p/75 ohm
			Output Level	1 V p-p/75 ohm
			S/N Ratio (Weighted) at DVD Mode	65dB
			S/N Ratio (Weighted) at VCR Mode	50dB
			Horizontal Resolution at DVD Mode	400 Lines
			Horizontal Resolution at VCR(SP)Mode	220 Lines
		RGB Signal	Output Level	-
		Audio Signal	Input Level	-8.0dBm/50k ohm
		VCR	Output Level(0dB=0.775Vrms)	-8.0dBm/1k ohm
		DVD	Output Level(-20dBFs 0dBFs=2.0Vrms)	-12.0dBm/1k ohm
			Digital Output Level	0.5 V p-p/75 ohm(DVD)
			S/N Ratio at DVD (Weighted)	90 dB
			S/N Ratio at VCR (SP)(CCIR Filter:ON)	38 dB
			Harmonic Distortion at DVD Mode	0.06% (1kHz)
			Harmonic Distortion at VCR(SP) Mode	1.5% (1kHz) Typical
			Frequency Response :	
			DVD Mode at DVD	4Hz - 22kHz
			at Video CD	4Hz - 20kHz
			at CD	4Hz - 20kHz
			VCR Mode at SP	100Hz - 10kHz
			at LP	-
			at SLP	100Hz - 4kHz
		Hi-Fi Audio Signal	Dynamic Range : More than	90 dB
			Frequency Response :	20Hz - 20kHz
			Wow And Flutter : Less than	0.01 %Wrms
			Channel Separation : More than	60 dB
			Harmonic Distortion : Less than	1.0 %
G-6	**Power**	Power Source	AC	120V,60Hz
			DC	-
		Power Consumption	at AC	145 W at 120 V 60 Hz
			at DC	-
			Stand by (at AC)	4 W at 120 V 60 Hz
			Per Year	-
		Protector	Power Fuse	Yes
			Dew Sensor	No
G-7	**Regulation**		Safety	UL
			Radiation	FCC
			X-Radiation	DHHS
			Laser	DHHS
G-8	**Temperature**		Operation	+5oC ~ +40oC
			Storage	-20oC ~ +60oC
G-9	**Operating Humidity**			Less than 80% RH

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-10	**On Screen Display (TV/VCR)**	Menu			Yes
		Menu	Type		Character
		Timer Rec Set			Yes
		Channel Setup			Yes
			TV/CATV		Yes
			Auto CH Memory		Yes
			Add/ Delete		Yes
			Guide CH Set		No
		TV Setup			Yes
			V-chip Set		Yes
			On/Off Timer Set		Yes
			Picture		Yes
			Audio		Yes
			Surround		Yes
			Stable Sound		Yes
			Sap On/Off		Yes
		Auto Repeat On/Off			Yes
		System Setup			Yes
			Clock Set		Yes (Calendar 12h)
			Language		Yes
			Auto Clock On/Off		Yes
			Standard Time		Yes
			Daylight Saving Time		Yes
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry			No
		TV/VCR			Yes
		DVD			Yes
		Clock / Date			Yes
		CH/AV(LINE)/DVD			Yes
		Tape Counter(Linear Counter)			Yes
		Tape Speed			Yes
		Sleep Time			Yes
		Stereo/Audio Output			Yes
			Bilingal		No
			SAP		Yes
		Control Level	Volume		Yes
			Brightness/Contrast/Sharpness/Color		Yes
			Tint		Yes
			Bass/Treble/Balance		Yes
			Manual Tracking		Yes
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In (Symbol Mark)			Yes
		Auto Tracking/Manual Tracking			Yes
		Caption / Text			Yes
		Index			No
		Mute			Yes
		Hi-Fi			Yes
		Repeat			Yes
		Zero Return			Yes
		DEW			No

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-11	**On Screen Display (DVD)**	Menu		Yes	
			Menu Type	Character	
		Language		Yes	
			OSD Language	Yes	
			Menu	Yes	
			SubTitle	Yes	
			Audio	Yes	
		Picture		Yes	
			TV Screen Size	Yes	
			OSD Display On/Off	Yes	
		Sound		Yes	
			DRC (Dynamic Range Control)	Yes	
			dts Decode	No	
			Output(5.1ch/ 2ch)	No	
			Surround On/Off	No	
			Center On/Off	No	
			Sub Woofer On/Off	No	
		Parental		Yes	
			Password Lock/ Un Lock	Yes	
			Rating Level	Yes	
		Open		Yes	
		Close		Yes	
		No disc		Yes	
		Reading		Yes	
		Play		Yes	
		Still/Pause		Yes	
		Stop		Yes	
		Prohibit Mark		Yes	
		Step		Yes	
		Skip(>>|)		Yes	
		Skip(|<<)		Yes	
		Random		Yes (CD)	
		Repeat		Yes	
		Slow+ ##		Yes	
		Slow- ##		No	
		Search+ ##		Yes	
		Search- ##		Yes	
		Jump		Yes	
		Resume		Yes	
		Title No.		Yes	
		Chapter No.		Yes	
		Track No.		Yes	
		Time		Yes	
		Sub Title No.		Yes	
		Angle No.		Yes	
		Vocal On/Off		No	
		Audio No.		Yes	
		Audio Stereo L/R		Yes (Video CD)	
		Zoom		Yes	
		Marker No.		No	
		Program Play Back		Yes (CD)	
		Surround On/Off		No	
		Screen Saver		No	
		MP3	Folder Name	No	
			File Name	No	
			File No	No	
			Time	No	
			Track No	No	
G-12	**OSD Language**	TV/VCR		English French Spanish	
		DVD		English French Spanish	
G-13	**Clock,Timer and Timer Back-up**	Calendar		1990/1/1 ~ 2081/12/31	
		Timer Events		8 Program/ 1 Month	
		One Touch Recording Max Time		6 Hours	
		OTPB Valid Time		-	
		Sleep Timer	Max Time	120	Min
			Step	10	Min
		On/Off Timer	Program(On Timer / Off Timer)	1	Program
		Auto Shut Off	No Signal	15	Min
			No Operation	-	Min
		Timer Back-up (at Power Off Mode)		5	Sec

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-14	**Remote Control Unit**	Unit(for TOSHIBA)		RC-FG
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		40-BFh,44-BBh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		48 Key
		Keys	TV/VCR	Yes
			DVD	Yes
			Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Channel-	Yes
			Channel+	Yes
			Volume-	Yes
			Volume+	Yes
			Display	Yes
			Sleep	Yes
			Audio Select	Yes
			Mute	Yes
			Channel Return / Skip-	Yes
			Closed Caption / Skip+	Yes
			T-REC	Yes
			Rec(T-Rec/OTR)	Yes
			Rec/OTR	Yes
			Slow+	Yes
			Play	Yes
			Stop	Yes
			Rew	Yes
			F. Fwd	Yes
			Pause / Still	Yes
			CM Skip / Jump	Yes
			SP/SLP / Return	Yes
			Counter Reset / Angle	Yes
			Zero Return / Subtitle	Yes
			Input Select / Zoom	Yes
			Menu /Set Up	Yes
			Program / Repeat A-B	Yes
			D.Tracking / Top Menu	Yes
			Tracking+ / DVD Menu	Yes
			Tracking- / Play Mode	Yes
			Cancel/Clear	Yes
			3D Surround	No
			Cursor Up	Yes
			Cursor Down	Yes
			Cursor Left	Yes
			Cursor Right	Yes
			Enter	Yes
			VCR Plus+	No
			One More Search	No
			Remain/Counter	No
			Eject	No
			Index-	No
			Index+	No

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-15	**Features**	Auto Head Cleaning		Yes
		Auto Tracking		Yes
		HQ (VHS Standard High Quality)		Yes
		Auto Power On, Auto Play, Auto Rewind, Auto Eject		Yes
		VIDEO PLUS+(SHOWVIEW,G-CODE)		No
		Auto Clock		Yes
		Forward / Reverse Picture Search		Yes
		Auto CH Memory		Yes
		Surround		Yes
		Stable Sound		Yes
		Closed Caption		Yes
		TV Auto Shut off Function		Yes
		End Call		No
		Index Search		No
		SQPB		No
		CATV		Yes
		CM Skip(30sec x 6 Times)		Yes
		Comb Filter (2Lines)		Yes
		VM Circuit		Yes
		TV Monitor		No
		Program Extend		No
		Choke Coil		No
		Energy Star		Yes
		Protect of FBT Leak Circuit		Yes
		Zero Return		Yes
		Power On Memory		No
		Dirty Head		No
		V-chip USA V-chip		Yes
		V-chip CANADA V-chip		No
		Parental Lock (DVD Only)		Yes
		Tray Lock		Yes
		Auto Stop (Pause, and Resume Stop after 5min.)		Yes
		Video CD Playback		Yes
		SVCD Playback		No
			Overlay Graphics And Text	No
			Command List	No
			Entry Point Jump	No
		MP3 Playback		No
		WMA Playback		No
		JPEG Playback		No
		Digital Out	(Dolby Digital)	Yes
			(MPEG)	Yes
			(PCM)	Yes
			(DTS)	Yes
		Down Mix Out	(Dolby Digital)	Yes
			(DTS)	No
		TruSurround		No
		Screen Saver		No
		Audio DAC		192kHz / 24bit

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-16	**Accessories**	Owner's Manual		Language	English
				w/Guarantee Card	Yes
				Buyer Model No.	MW27FN1(-R)
		Remote Control Unit			Yes
		Battery			Yes
				UM size x pcs	UM-4 x 2 pcs
				OEM Brand	No
		Rod Antenna			No
				Poles	-
				Terminal	-
		Loop Antenna			No
				Terminal	-
		U/V Mixer			No
		300 ohm to 75 ohm Antenna Adapter			Yes
		Antenna Change Plug			No
		DC Car Cord (Center+)			No
		AC Plug Adapter			No
		AC Cord			No
		AV Cord (2Pin-1Pin)			No
		Guarantee Card			No
		Registration Card			Yes
		ESP Card			No
		Warning Sheet			No
		Dew/AHC Caution Sheet			No
		Quick Set-up Sheet			No
		Circuit Diagram			No
		Service Facility List			No
		Important Safeguard			No
		Sheet Information (Return)			Yes[From '03 JUN O/R]
G-17	**Interface**	Switch	Front	Power (Tact)	Yes
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Play (VCR)	Yes
				Stop / Eject (VCR)	Yes
				F.FWD/Cue (VCR)	Yes
				Rew/Rev (VCR)	Yes
				REC/OTR (VCR)	Yes
				Play (DVD)	Yes
				Stop (DVD)	Yes
				Skip+ /Search+ (DVD)	Yes
				Skip- /Search- (DVD)	Yes
				Open/Close (DVD)	Yes
				Input Select	No
				Main Power SW	No
		Indicator		Power	Yes(Red)
				REC/OTR	Yes(Red)
				T-REC	Yes(Red)
				TV/VCR	No
				DVD	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Other Terminal	HeadPhone (Stereo & Mono, 3.5mm)
			Rear	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Video Output	RCA x1
				Audio Output	RCA x 2(Stereo)
				Digital Audio Output	Coaxial (DVD Only)
				VHF/UHF Antenna Input	F Type
				AC Inlet	No
G-18	**Set Size**			Approx. W x D x H (mm)	740 x 490 x 645
G-19	**Weight**			Net (Approx.)	44.0kg (97.0lbs)
				Gross (Approx.)	48.5kg (107.0lbs)

GENERAL SPECIFICATIONS
(MW27FN1(-R))

G-20	**Carton**	Master Carton		No	
			Content	-	
			Material	-	
			Dimensions W x D x H(mm)	-	
			Description of Origin	-	
		Gift Box		Yes	
			Material	Double/White	
			Dimensions W x D x H(mm)	851 x 618 x 776	
			Design	As per Buyer's	
			Description of Origin	Yes	
			Buyer Model No.	MW27FN1	
		Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces	
			Height (cm)	25	
		Container Stuffing(40' container)		156	Sets
G-21	**Material**	Cabinet	Front	PS	94V0 DECABROM
			Rear	PS	94V0 DECABROM
			Jack Panel	-	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-22	**Environment**	Pb Free	Lead-free Solder	No	
			Other	No	
		Cd Free		No	

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-1	**TV System**	CRT		CRT Size / Visual Size	27 inch / 676.6mmV
				CRT Type	Flat
				Deflection	104 degree
				Magnetic Field BV/BH	+ 0.45 G / 0.18 G
		Color System			NTSC
		Speaker			2 Speaker
				Position	Front
				Size	1.8 x 3.9 Inch
				Impedance	8 ohm
		Sound Output		MAX	2.5W + 2.5W
				10%(Typical)	2.5W + 2.5W
G-2	**VCR System**	System			VHS Player / Recorder
		Video System			NTSC
		Hi-Fi STEREO			Yes
		NTSC PB			-
		Deck		DECK	OVD-7
				Loading System	Front
				Motor	3
		Heads	Video Head		4 Heads
			FM Audio Head		2 Heads
			Audio /Control		Mono /Yes
			Erase(Full Track Erase)		Yes
		Tape Speed	Rec	PAL	-
				NTSC	SP/SLP(EP)
			Play	PAL	-
				NTSC	SP/SLP(EP)
		Fast Forward / Rewind Time (Approx.) at 25oC			FF:1'48"/REW:1'48"
				with Cassette	T-120
		Forward/Reverse Picture Search		NTSC or PAL-M	SP/SLP(EP)=3x,5x / 9x,15x
		Frame Advance			Yes
		Slow Speed			1/10
G-3	**DVD System**	Color System			NTSC
		Disc			DVD, CD-DA, CD-R/RW, Video CD
		Disc Diameter			120 mm , 80 mm
		Deck		Disc Loading System	Front Loading
				Motor	2 Motors
		Pick up			1-Lens 2-Beams System
		Playback time(Max)		DVD 1-Layer	135min (4.7GB)
				DVD 2-Layer	245min (8.5GB)
				CD	74min
				Video CD	74min
		Search speed		Fwd	2-15 times / 4 step (DVD,Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD,Video CD)
					4-40 times (CD)
				Rew	2-15 times / 4 step (DVD,Video CD)
					2-20 times / 4 step (CD)
				Actual	2-45 times (DVD,Video CD)
					4-40 times (CD)
		Slow speed		Fwd	1/8-1/2 times
				Actual	-
				Rew	-
				Actual	-
G-4	**Tuning System**	Broadcasting System			US System M
		Tuner and Receive CH		System	1 Tuner
				Destination	US(w/CATV)
				Tuning System	F-Synth
				Input Impedance	VHF/UHF 75 ohm
				CH Coverage	2~69, 4A,A-5~A-1, A~I, J~W,W+1~W+84
		Intermediate Frequency		Picture(FP)	45.75MHz
				Sound(FS)	41.25MHz
				FP-FS	4.5MHz
		Preset CH			No
		Stereo/Dual TV Sound			US-Stereo
		Tuner Sound Muting			Yes

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-5	**Signal**	Video Signal	Input Level	1 V p-p/75 ohm
			Output Level	1 V p-p/75 ohm
			S/N Ratio (Weighted) at DVD Mode	65dB
			S/N Ratio (Weighted) at VCR Mode	50dB
			Horizontal Resolution at DVD Mode	400 Lines
			Horizontal Resolution at VCR(SP)Mode	220 Lines
		RGB Signal	Output Level	-
		Audio Signal	Input Level	-8.0dBm/50k ohm
		VCR	Output Level(0dB=0.775Vrms)	-8.0dBm/1k ohm
		DVD	Output Level(-20dBFs 0dBFs=2.0Vrms)	-12.0dBm/1k ohm
			Digital Output Level	0.5 V p-p/75 ohm(DVD)
			S/N Ratio at DVD (Weighted)	90 dB
			S/N Ratio at VCR (SP)(CCIR Filter:ON)	38 dB
			Harmonic Distortion at DVD Mode	0.06% (1kHz)
			Harmonic Distortion at VCR(SP) Mode	1.5% (1kHz) Typical
			Frequency Response :	
			DVD Mode at DVD	4Hz - 22kHz
			at Video CD	4Hz - 20kHz
			at CD	4Hz - 20kHz
			VCR Mode at SP	100Hz - 10kHz
			at LP	-
			at SLP	100Hz - 4kHz
		Hi-Fi Audio Signal	Dynamic Range : More than	90 dB
			Frequency Response :	20Hz - 20kHz
			Wow And Flutter : Less than	0.01 %Wrms
			Channel Separation : More than	60 dB
			Harmonic Distortion : Less than	1.0 %
G-6	**Power**	Power Source	AC	120V,60Hz
			DC	-
		Power Consumption	at AC	145 W at 120 V 60 Hz
			at DC	-
			Stand by (at AC)	4 W at 120 V 60 Hz
			Per Year	-
		Protector	Power Fuse	Yes
			Dew Sensor	No
G-7	**Regulation**		Safety	CSA
			Radiation	IC
			X-Radiation	HWC
			Laser	DHHS
G-8	**Temperature**		Operation	+5oC ~ +40oC
			Storage	-20oC ~ +60oC
G-9	**Operating Humidity**			Less than 80% RH

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-10	**On Screen Display (TV/VCR)**		Menu		Yes
			Menu	Type	Character
			Timer Rec Set		Yes
			Channel Setup		Yes
				TV/CATV	Yes
				Auto CH Memory	Yes
				Add/ Delete	Yes
				Guide CH Set	No
			TV Setup		Yes
				V-chip Set	No
				On/Off Timer Set	Yes
				Picture	Yes
				Audio	Yes
				Surround	Yes
				Stable Sound	Yes
				Sap On/Off	Yes
			Auto Repeat On/Off		Yes
			System Setup		Yes
				Clock Set	Yes (Calendar 12h)
				Language	Yes
				Auto Clock On/Off	Yes
				Standard Time	Yes
				Daylight Saving Time	Yes
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry			No
		TV/VCR			Yes
		DVD			Yes
		Clock / Date			Yes
		CH/AV(LINE)/DVD			Yes
		Tape Counter(Linear Counter)			Yes
		Tape Speed			Yes
		Sleep Time			Yes
		Stereo/Audio Output			Yes
				Bilingal	No
				SAP	Yes
		Control Level	Volume		Yes
			Brightness/Contrast/Sharpness/Color		Yes
			Tint		Yes
			Bass/Treble/Balance		Yes
			Manual Tracking		Yes
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In (Symbol Mark)			Yes
		Auto Tracking/Manual Tracking			Yes
		Caption / Text			Yes
		Index			No
		Mute			Yes
		Hi-Fi			Yes
		Repeat			Yes
		Zero Return			Yes
		DEW			No

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-11	**On Screen Display (DVD)**	Menu		Yes	
			Menu Type	Character	
		Language		Yes	
			OSD Language	Yes	
			Menu	Yes	
			SubTitle	Yes	
			Audio	Yes	
		Picture		Yes	
			TV Screen Size	Yes	
			OSD Display On/Off	Yes	
		Sound		Yes	
			DRC (Dynamic Range Control)	Yes	
			dts Decode		No
			Output(5.1ch/ 2ch)		No
			Surround On/Off		No
			Center On/Off		No
			Sub Woofer On/Off		No
		Parental		Yes	
			Password Lock/ Un Lock	Yes	
			Rating Level	Yes	
		Open		Yes	
		Close		Yes	
		No disc		Yes	
		Reading		Yes	
		Play		Yes	
		Still/Pause		Yes	
		Stop		Yes	
		Prohibit Mark		Yes	
		Step		Yes	
		Skip(>>|)		Yes	
		Skip(|<<)		Yes	
		Random		Yes (CD)	
		Repeat		Yes	
		Slow+ ##		Yes	
		Slow- ##			No
		Search+ ##		Yes	
		Search- ##		Yes	
		Jump		Yes	
		Resume		Yes	
		Title No.		Yes	
		Chapter No.		Yes	
		Track No.		Yes	
		Time		Yes	
		Sub Title No.		Yes	
		Angle No.		Yes	
		Vocal On/Off			No
		Audio No.		Yes	
		Audio Stereo L/R		Yes (Video CD)	
		Zoom		Yes	
		Marker No.			No
		Program Play Back		Yes (CD)	
		Surround On/Off			No
		Screen Saver			No
		MP3	Folder Name		No
			File Name		No
			File No		No
			Time		No
			Track No		No
G-12	**OSD Language**	TV/VCR		English French Spanish	
		DVD		English French Spanish	
G-13	**Clock,Timer and Timer Back-up**	Calendar		1990/1/1 ~ 2081/12/31	
		Timer Events		8 Program/ 1 Month	
		One Touch Recording Max Time		6 Hours	
		OTPB Valid Time		-	
		Sleep Timer	Max Time	120	Min
			Step	10	Min
		On/Off Timer	Program(On Timer / Off Timer)	1	Program
		Auto Shut Off	No Signal	15	Min
			No Operation	-	Min
		Timer Back-up (at Power Off Mode)		5	Sec

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-14	**Remote Control Unit**	Unit(for TOSHIBA)		RC-FG
		Glow in Dark Remocon		Yes
		Format		NEC
		Custom Code		40-BFh,44-BBh
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		48 Key
		Keys	TV/VCR	Yes
			DVD	Yes
			Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			Channel-	Yes
			Channel+	Yes
			Volume-	Yes
			Volume+	Yes
			Display	Yes
			Sleep	Yes
			Audio Select	Yes
			Mute	Yes
			Channel Return / Skip-	Yes
			Closed Caption / Skip+	Yes
			T-REC	Yes
			Rec(T-Rec/OTR)	Yes
			Rec/OTR	Yes
			Slow+	Yes
			Play	Yes
			Stop	Yes
			Rew	Yes
			F. Fwd	Yes
			Pause / Still	Yes
			CM Skip / Jump	Yes
			SP/SLP / Return	Yes
			Counter Reset / Angle	Yes
			Zero Return / Subtitle	Yes
			Input Select / Zoom	Yes
			Menu /Set Up	Yes
			Program / Repeat A-B	Yes
			D.Tracking / Top Menu	Yes
			Tracking+ / DVD Menu	Yes
			Tracking- / Play Mode	Yes
			Cancel/Clear	Yes
			3D Surround	No
			Cursor Up	Yes
			Cursor Down	Yes
			Cursor Left	Yes
			Cursor Right	Yes
			Enter	Yes
			VCR Plus+	No
			One More Search	No
			Remain/Counter	No
			Eject	No
			Index-	No
			Index+	No

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-15	**Features**	Auto Head Cleaning		Yes	
		Auto Tracking		Yes	
		HQ (VHS Standard High Quality)		Yes	
		Auto Power On, Auto Play, Auto Rewind, Auto Eject		Yes	
		VIDEO PLUS+(SHOWVIEW,G-CODE)			No
		Auto Clock		Yes	
		Forward / Reverse Picture Search		Yes	
		Auto CH Memory		Yes	
		Surround		Yes	
		Stable Sound		Yes	
		Closed Caption		Yes	
		TV Auto Shut off Function		Yes	
		End Call			No
		Index Search			No
		SQPB			No
		CATV		Yes	
		CM Skip(30sec x 6 Times)		Yes	
		Comb Filter (2Lines)		Yes	
		VM Circuit		Yes	
		TV Monitor			No
		Program Extend			No
		Choke Coil			No
		Energy Star		Yes	
		Protect of FBT Leak Circuit		Yes	
		Zero Return		Yes	
		Power On Memory			No
		Dirty Head			No
		V-chip USA V-chip			No
		CANADA V-chip			No
		Parental Lock	(DVD Only)	Yes	
		Tray Lock		Yes	
		Auto Stop	(Pause, and Resume Stop after 5min.)	Yes	
		Video CD Playback		Yes	
		SVCD Playback			No
			Overlay Graphics And Text		No
			Command List		No
			Entry Point Jump		No
		MP3 Playback			No
		WMA Playback			No
		JPEG Playback			No
		Digital Out	(Dolby Digital)	Yes	
			(MPEG)	Yes	
			(PCM)	Yes	
			(DTS)	Yes	
		Down Mix Out	(Dolby Digital)	Yes	
			(DTS)		No
		TruSurround			No
		Screen Saver			No
		Audio DAC		192kHz / 24bit	

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-16	**Accessories**	Owner's Manual		Language	English/French
				w/Guarantee Card	Yes
				Buyer Model No.	MW27FN1C(-R)
		Remote Control Unit			Yes
		Battery			Yes
				UM size x pcs	UM-4 x 2 pcs
				OEM Brand	No
		Rod Antenna			No
				Poles	-
				Terminal	-
		Loop Antenna			No
				Terminal	-
		U/V Mixer			No
		300 ohm to 75 ohm Antenna Adapter			Yes
		Antenna Change Plug			No
		DC Car Cord (Center+)			No
		AC Plug Adapter			No
		AC Cord			No
		AV Cord (2Pin-1Pin)			No
		Guarantee Card			No
		Registration Card			Yes
		ESP Card			No
		Warning Sheet			No
		Dew/AHC Caution Sheet			No
		Quick Set-up Sheet			No
		Circuit Diagram			No
		Service Station List			Yes
		Important Safeguard			No
G-17	**Interface**	Switch	Front	Power (Tact)	Yes
				Channel Up	Yes
				Channel Down	Yes
				Volume Up	Yes
				Volume Down	Yes
				Play (VCR)	Yes
				Stop / Eject (VCR)	Yes
				F.FWD/Cue (VCR)	Yes
				Rew/Rev (VCR)	Yes
				REC/OTR (VCR)	Yes
				Play (DVD)	Yes
				Stop (DVD)	Yes
				Skip+ /Search+ (DVD)	Yes
				Skip- /Search- (DVD)	Yes
				Open/Close (DVD)	Yes
				Input Select	No
				Main Power SW	No
		Indicator		Power	Yes(Red)
				REC/OTR	Yes(Red)
				T-REC	Yes(Red)
				TV/VCR	No
				DVD	No
		Terminals	Front	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Other Terminal	HeadPhone (Stereo & Mono, 3.5mm)
			Rear	Video Input	RCA x 1
				Audio Input	RCA x 2(Stereo)
				Video Output	RCA x1
				Audio Output	RCA x 2(Stereo)
				Digital Audio Output	Coaxial (DVD Only)
				VHF/UHF Antenna Input	F Type
				AC Inlet	No
G-18	**Set Size**			Approx. W x D x H (mm)	740 x 490 x 645
G-19	**Weight**			Net (Approx.)	44.0kg (97.0lbs)
				Gross (Approx.)	48.5kg (107.0lbs)

GENERAL SPECIFICATIONS
(MW27FN1C(-R))

G-20	**Carton**	Master Carton		No	
			Content	-	
			Material	-	
			Dimensions W x D x H(mm)	-	
			Description of Origin	-	
		Gift Box		Yes	
			Material	Double/White	
			Dimensions W x D x H(mm)	851 x 618 x 776	
			Design	As per Buyer's	
			Description of Origin	Yes	
			Buyer Model No.	MW27FN1C	
		Drop Test	Natural Dropping At	1 Corner / 3 Edges / 6 Surfaces	
			Height (cm)	25	
		Container Stuffing(40' container)		156	Sets
G-21	**Material**	Cabinet	Front	PS	94V0 DECABROM
			Rear	PS	94V0 DECABROM
			Jack Panel	-	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-22	**Environment**	Pb Free	Lead-free Solder	No	
			Other	No	
		Cd Free		No	

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

1-1: BACK CABINET (Refer to Fig. 1-1)

1. Remove the 6 screws ①.
2. Remove the 2 screws ②.
3. Remove the Back Cabinet in the direction of arrow.

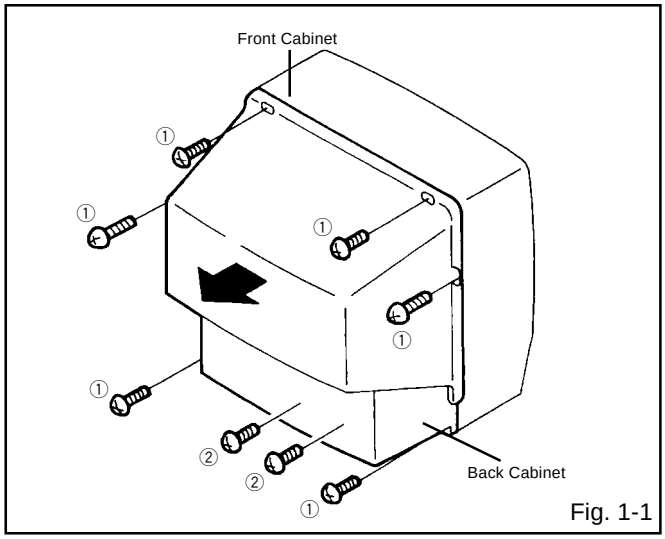

Fig. 1-1

1-2: CRT PCB (Refer to Fig. 1-2)

CAUTION: BEFORE REMOVING THE ANODE CAP, DISCHARGE ELECTRICITY BECAUSE IT CONTAINS HIGH VOLTAGE. BEFORE ATTEMPTING TO REMOVE OR REPAIR ANY PCB, UNPLUG THE POWER CORD FROM THE AC SOURCE.

1. Remove the Anode Cap.
   (Refer to REMOVAL OF ANODE CAP)
2. Disconnect the following connectors:
   (CP801B, CP802B, CP803, CP851B and CP852).
3. Remove the CRT PCB in the direction of arrow.

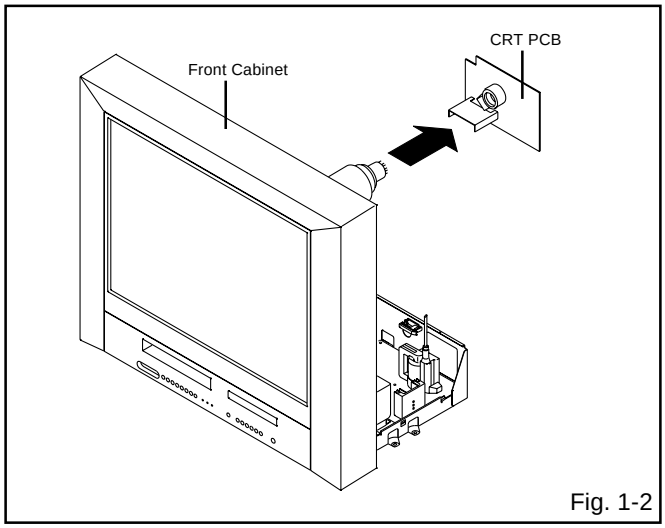

Fig. 1-2

1-3: TV/DVD/VCR BLOCK (Refer to Fig. 1-3)

1. Remove the 2 screws ①.
2. Disconnect the following connectors:
   (CP303, CP404 and CP1704).
3. Remove the TV/DVD/VCR Block in the direction of arrow.

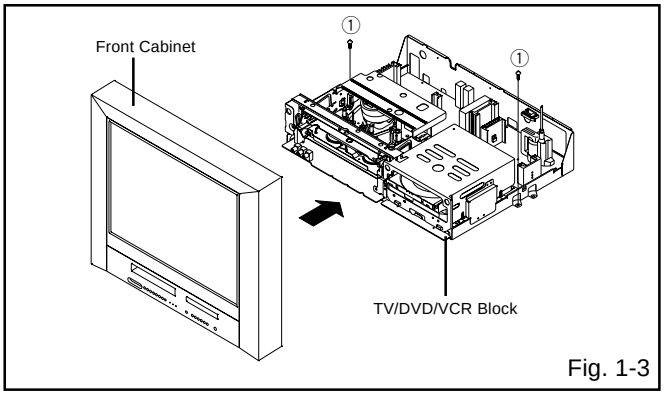

Fig. 1-3

1-4: VCR DECK (Refer to Fig. 1-4)

NOTE

Do not remove the cable at the FE Head section. The FE Head may be damaged if you remove the cable by force.

1. Remove the 2 screws ①.
2. Remove the VCR Top.
3. Remove the 2 screws ②.
4. Remove the VCR Holder.
5. Move the Cassette Holder Ass'y to the back side.
6. Remove the 3 screws ③.
7. Remove the 2 screws ④.
8. Remove the Deck Shield Cover.
9. Remove the screw ⑤.
10. Remove the FE Head.
11. Disconnect the following connectors:
    (CP101, CP4501 and CP4502).
12. Remove the VCR Deck in the direction of arrow.

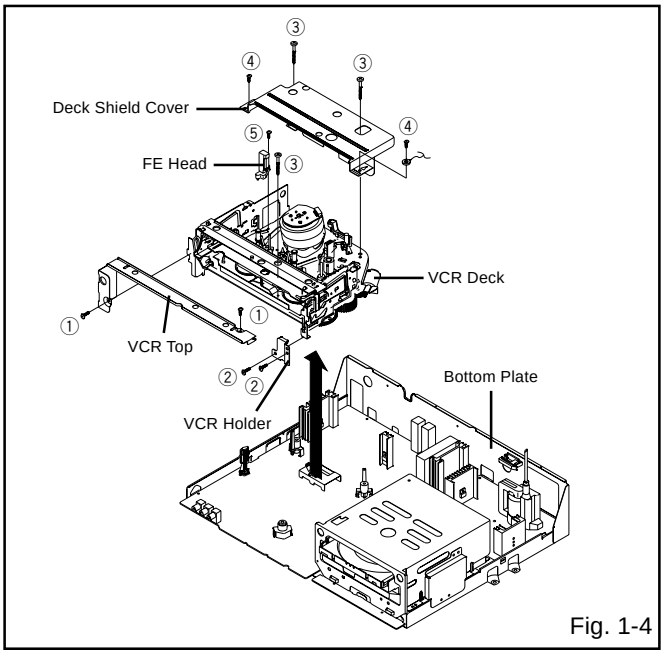

Fig. 1-4

DISASSEMBLY INSTRUCTIONS

1-5: VCR PCB (Refer to Fig. 1-5)

1. Remove the 6 screws ①.
2. Remove the screw ②.
3. Remove the AV Jack Shield.
4. Disconnect the following connectors:
   (CP001, CP604, CP602B, CP2201, CP8001 and CP8002).
5. Remove the VCR PCB in the direction of arrow.

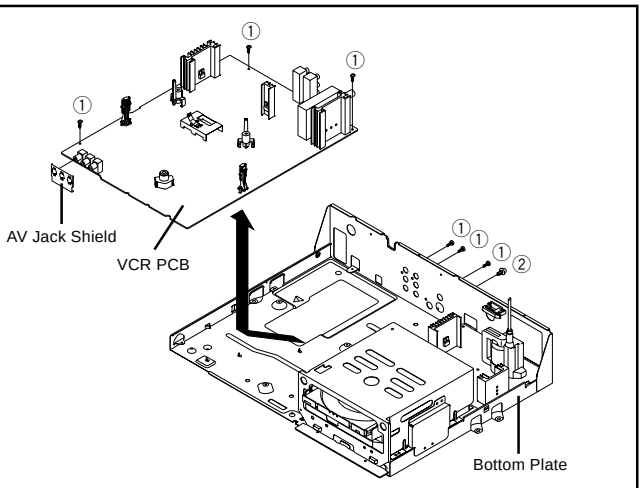

Fig. 1-5

1-6: VCR DECK (Refer to Fig. 1-6)

1. Remove the 2 screws ①.
2. Remove the DVD Shield.
3. Remove the 4 screws ②.
4. Remove the DVD Block in the direction of arrow (A).
5. Remove the 2 screws ③.
6. Remove the Operation PCB in the direction of arrow (B).

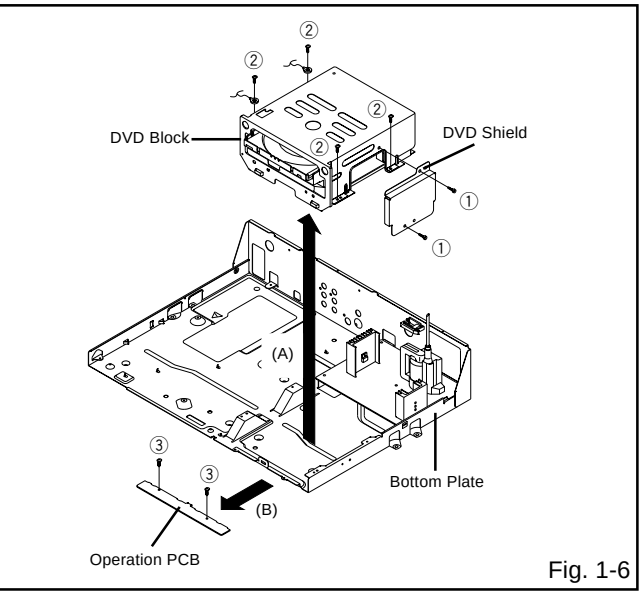

Fig. 1-6

1-7: DVD PCB/DVD DECK (Refer to Fig. 1-7)

1. Make the short circuit on the position as shown **Fig. 1-7** using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Remove the 3 screws ①.
3. Remove the DVD Top in the direction of arrow (A).
4. Disconnect the following connectors:
   (CP2001, CP2301 and CP2302).
5. Remove the 4 screws ②.
6. Remove the DVD Deck in the direction of arrow (B).
7. Remove the 4 screws ③.
8. Remove the DVD PCB in the direction of arrow (C).

NOTE

When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

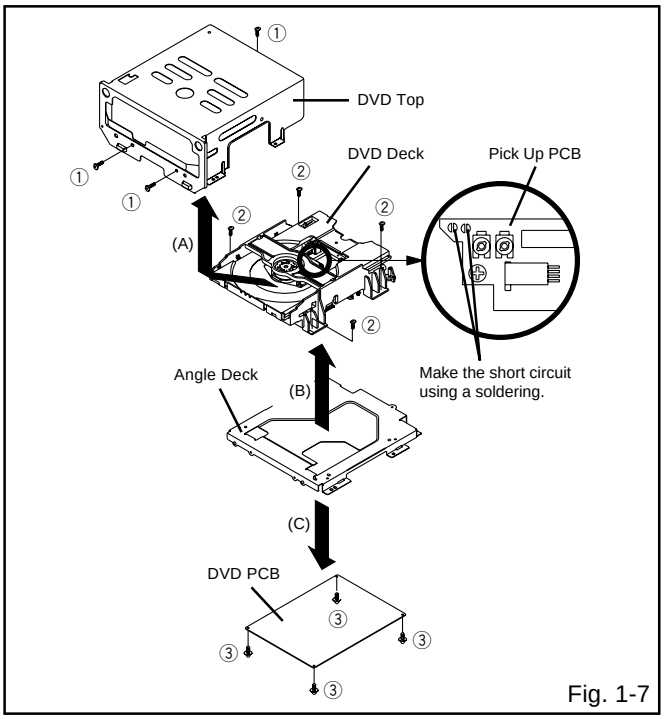

Fig. 1-7

1-8: DEFLECTION PCB (Refer to Fig. 1-8)

1. Remove the 2 screws ①.
2. Remove the 3 screws ②.
3. Remove the Deflection PCB in the direction of arrow.

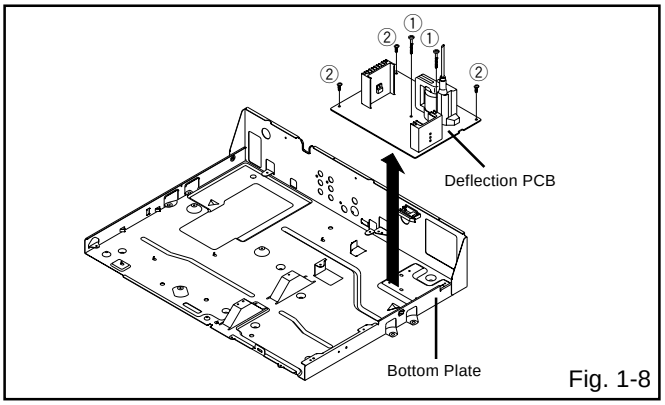

Fig. 1-8

DISASSEMBLY INSTRUCTIONS

2. REMOVAL OF VCR DECK PARTS

2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports ①.
2. Slide the 2 supports ② and remove the Top Bracket.

NOTE

1. After the installation of the Top Bracket, bend the support ① so that the Top Bracket is fixed.

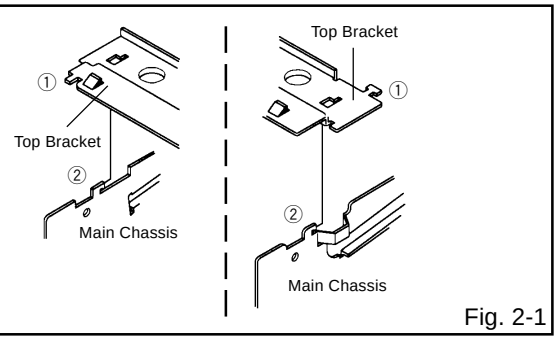

Fig. 2-1

2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

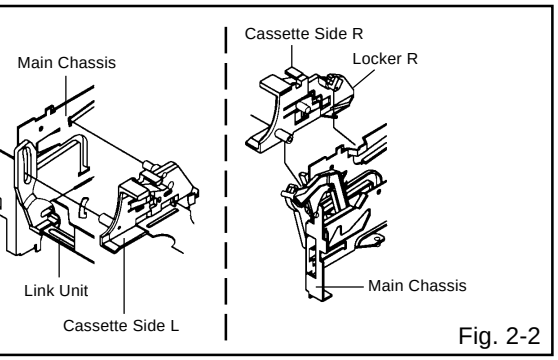

Fig. 2-2

2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports ① and then remove the Cassette Side L/R.
3. Unlock the support ② and then remove the Locker R.

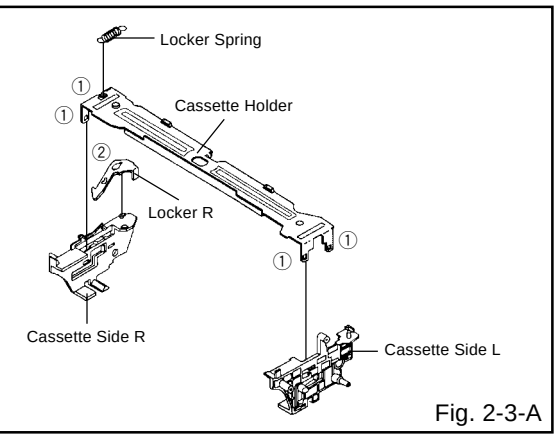

Fig. 2-3-A

NOTE

1. In case of the Locker R installation, check if the one position of Fig. 2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

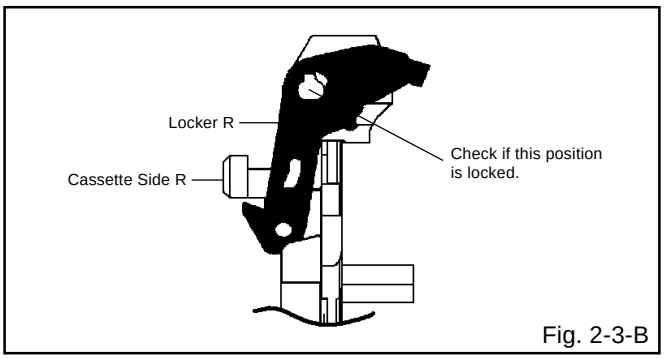

Fig. 2-3-B

2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support ①.
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

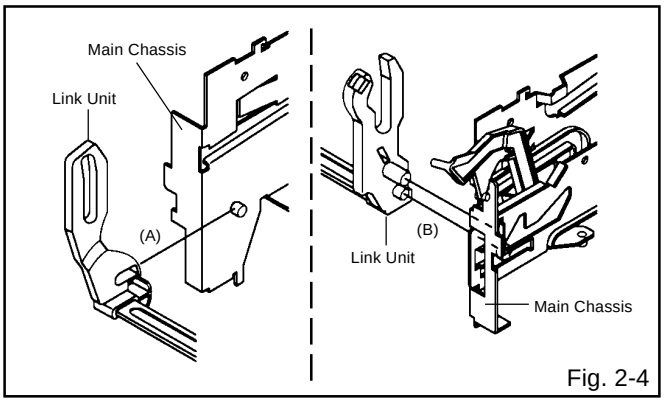

Fig. 2-4

2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Extend the support ①.
2. Remove the Link Lever.
3. Remove the Flap Lever.

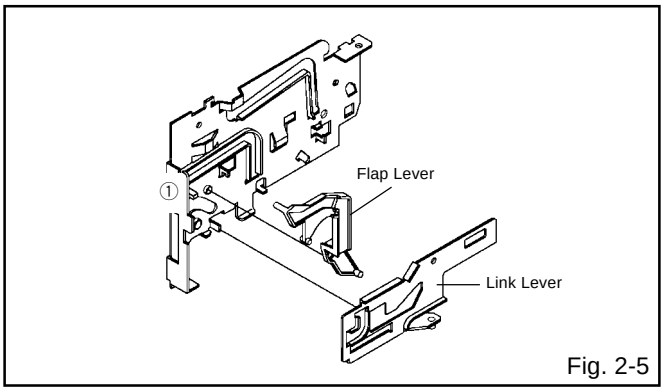

Fig. 2-5

DISASSEMBLY INSTRUCTIONS

2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw ①.
2. Remove the Loading Motor.
3. Remove the Worm.

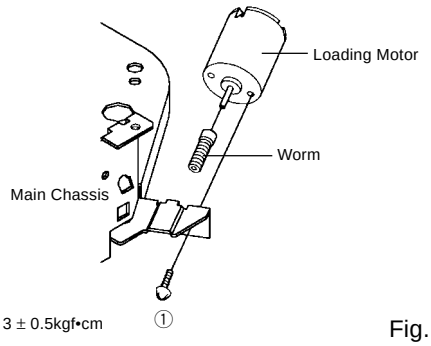

Fig. 2-6-A

NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, slacken the wire as shown Fig. 2-6-C.
3. When installing the wires between Capstan DD Unit and Loading Motor, connect them correctly as shown Fig. 2-6-D.

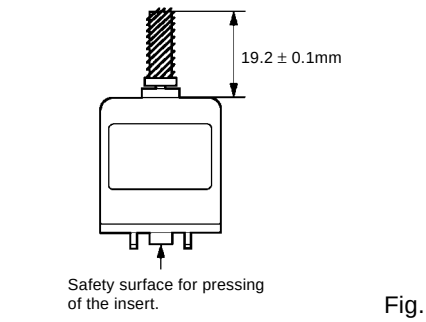

Fig. 2-6-B

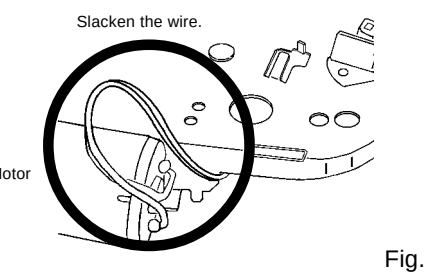

Fig. 2-6-C

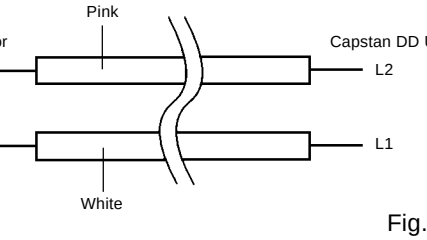

Fig. 2-6-D

2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports ① and remove the Tension Band.
4. Unlock the support ② and remove the Tension Arm Ass'y.
5. Unlock the support ③ and remove the Tension Connect.
6. Float the hook ④ and turn it clockwise then remove the Tension Holder.

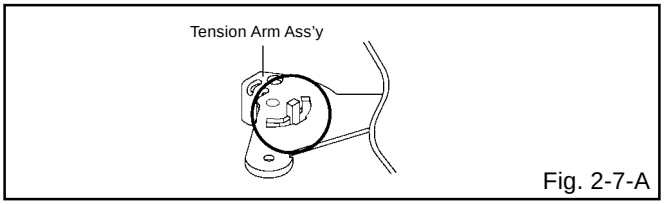

Fig. 2-7-A

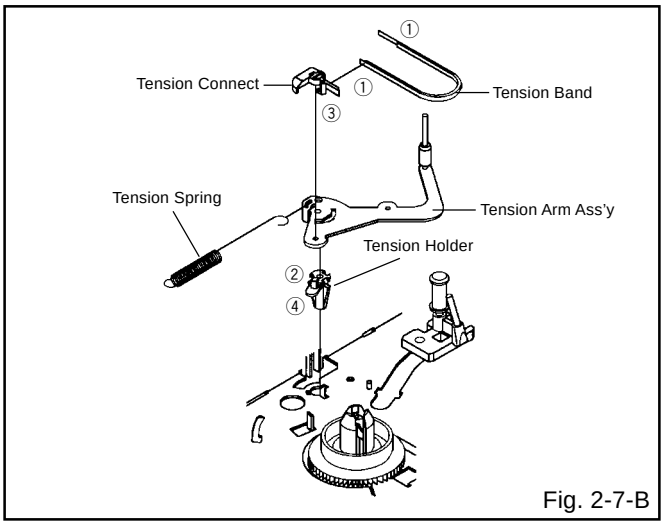

Fig. 2-7-B

NOTE

1. In case of the Tension Band installation, note the direction of the installation. **(Refer to Fig. 2-7-C)**
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

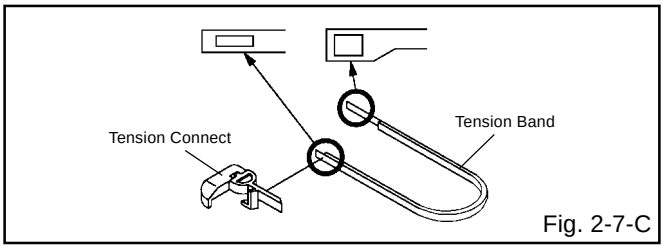

Fig. 2-7-C

DISASSEMBLY INSTRUCTIONS

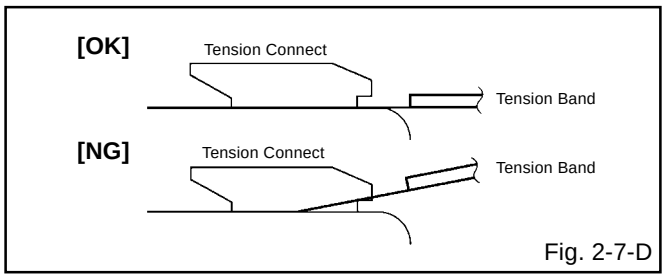

Fig. 2-7-D

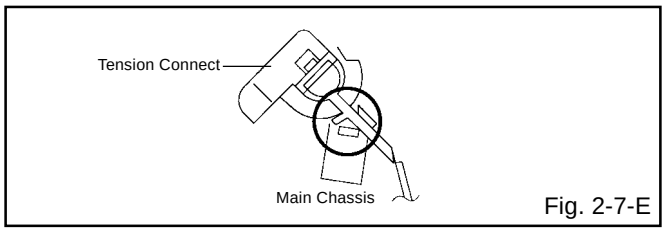

Fig. 2-7-E

2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports ① and remove the T Brake Band.

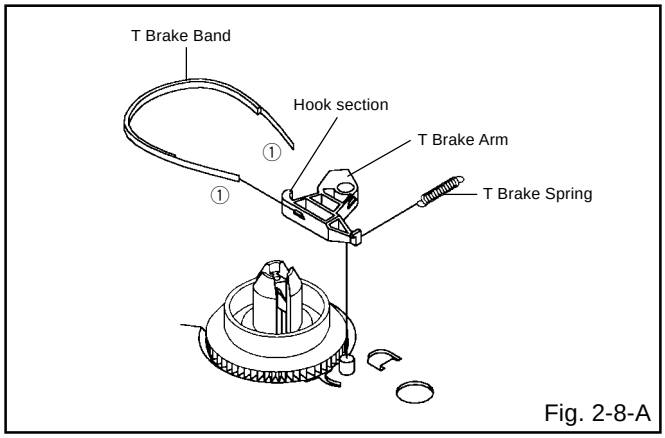

Fig. 2-8-A

NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

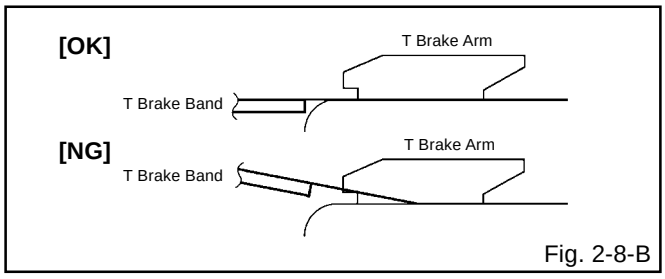

Fig. 2-8-B

2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers ①.
3. Remove the Idler Arm Ass'y and Idler Gear.

NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) **(Refer to Fig. 2-9-A)** Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it. (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. **(Refer to MECHANICAL ADJUSTMENT)**

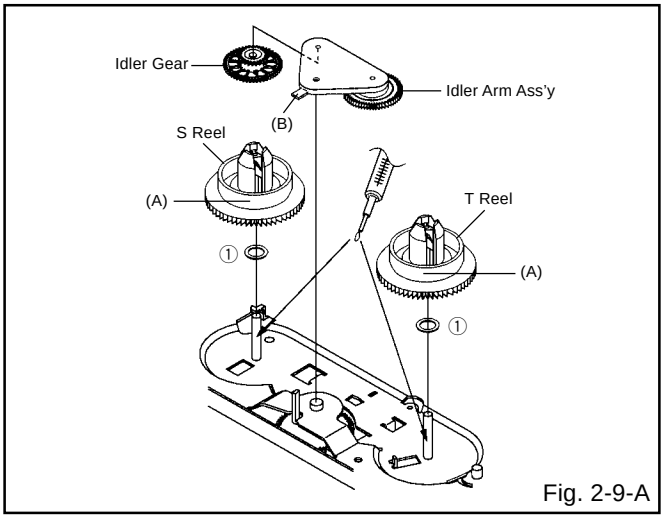

Fig. 2-9-A

NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. **(Refer to Fig. 2-9-B)**
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

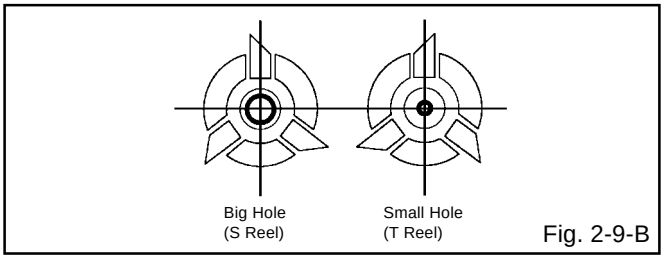

Fig. 2-9-B

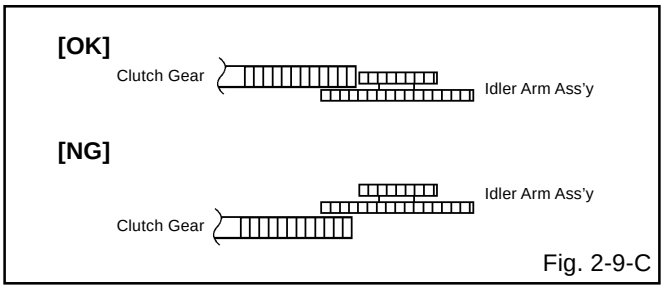

Fig. 2-9-C

DISASSEMBLY INSTRUCTIONS

2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support ① and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

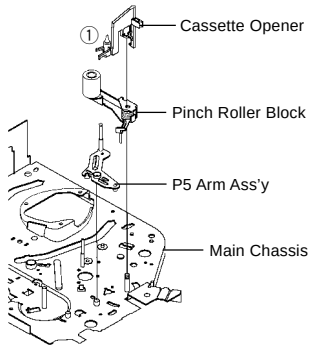

Fig. 2-10-A

NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.

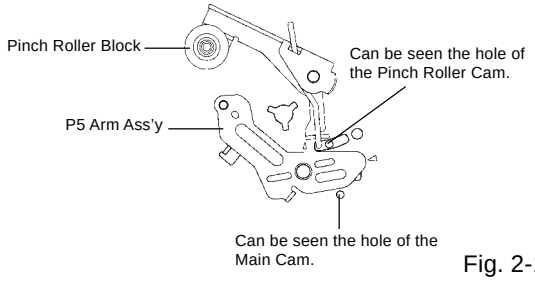

Fig. 2-10-B

2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw ①.
2. Remove the A/C Head Base.
3. Remove the 3 screws ②.
4. Remove the A/C Head and A/C Head Spring.

NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

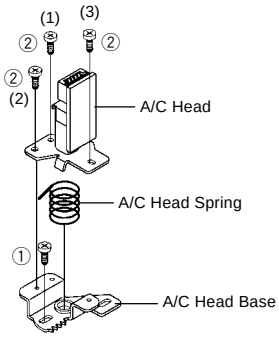

• Screw Torque: 5 ± 0.5kgf•cm (Screw ①)

Fig. 2-11-A

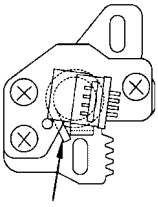

Fig. 2-11-B

2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw ①.
2. Remove the FE Head.

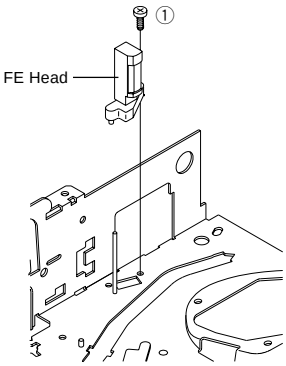

• Screw Torque: 5 ± 0.5kgf•cm
• The FE Head is not installed on the Video Cassette Player.

Fig. 2-12

2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support ① and remove the AHC Ass'y.
2. Disconnect the following connector: (CD2001)
3. Remove the 3 screws ②.
4. Remove the Cylinder Unit Ass'y.

NOTE

1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

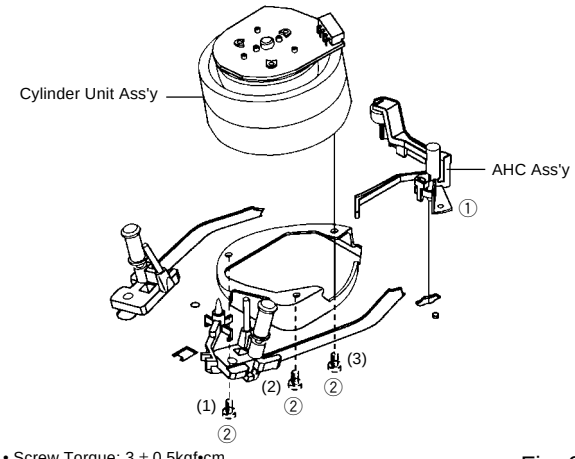

• Screw Torque: 3 ± 0.5kgf•cm

Fig. 2-13

DISASSEMBLY INSTRUCTIONS

2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws ①.
3. Remove the Capstan DD Unit.

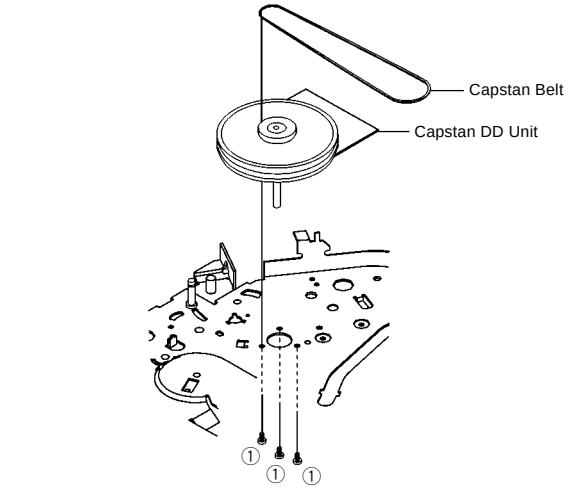

• Screw Torque: 4 ± 0.5kgf•cm

Fig. 2-14-A

NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.) **(Refer to Fig. 2-14-B, C)**

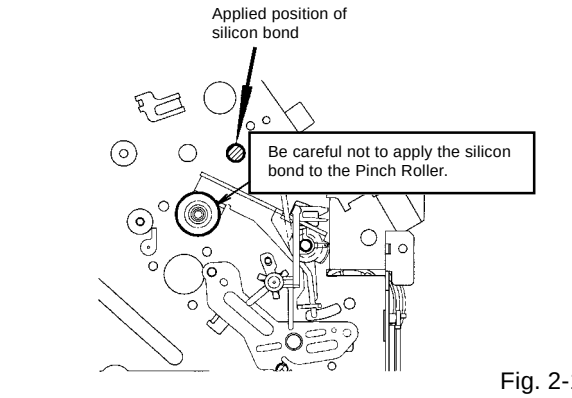

Fig. 2-14-B

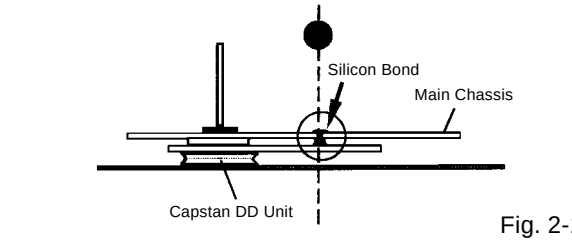

Fig. 2-14-C

2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring ①, then remove the Main Cam.
2. Remove the E-Ring ②, then remove the Pinch Roller Cam and Joint Gear.

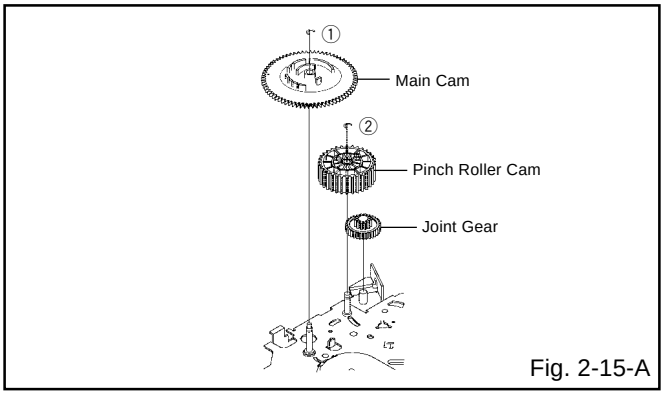

Fig. 2-15-A

NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. **(Refer to Fig. 2-15-B)** And also can be seen the Main Chassis hole through the Main Cam maker hole.

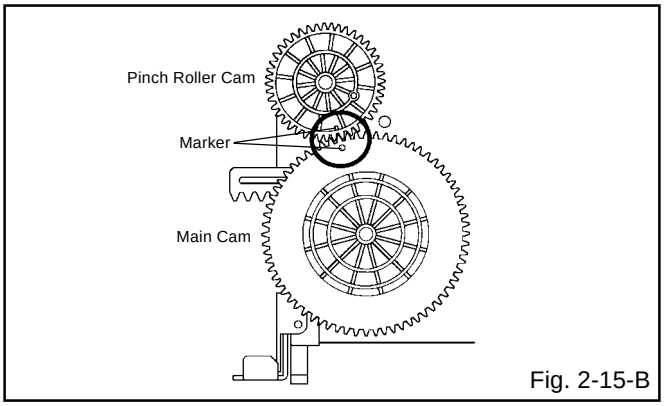

Fig. 2-15-B

2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)

1. Remove the E-Ring ① and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.

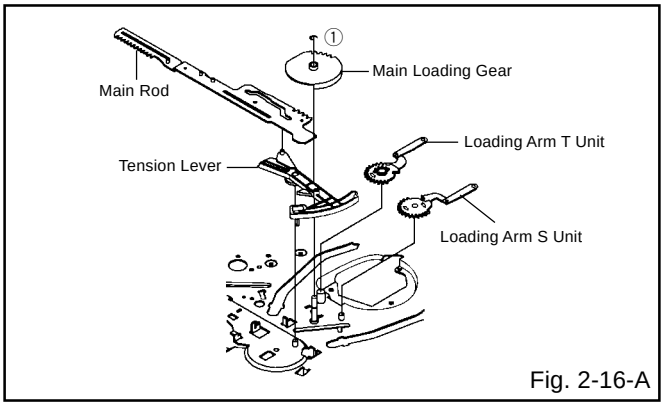

Fig. 2-16-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. **(Refer to Fig. 2-16-B)**

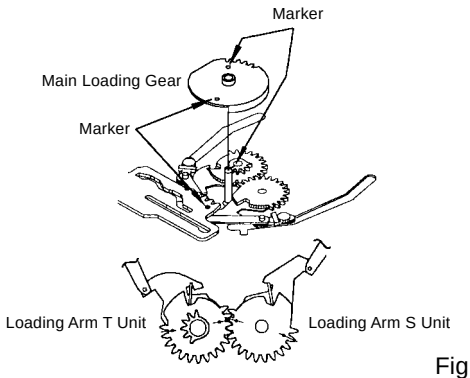

Fig. 2-16-B

2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/ CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer ①.
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

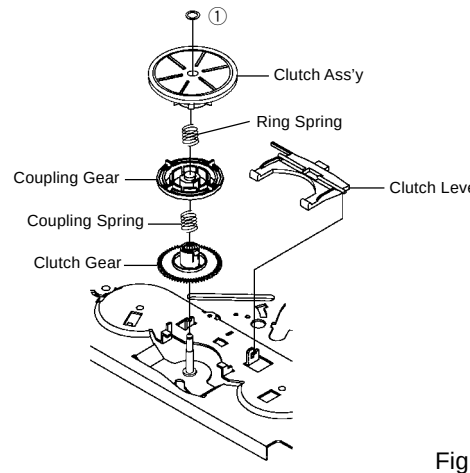

Fig. 2-17-A

NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. **(Refer to Fig. 2-17-B)**

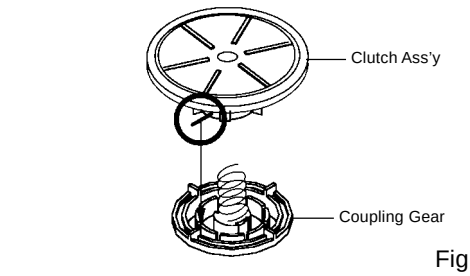

Fig. 2-17-B

2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support ① and remove the Cassette Guide Post.
3. Remove the Inclined Base S/T Unit.
4. Remove the screw ②.
5. Remove the LED Reflector.

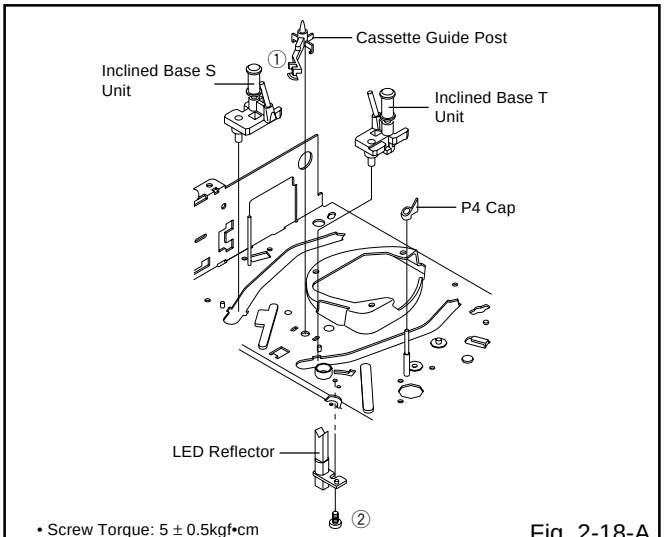

Fig. 2-18-A

NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

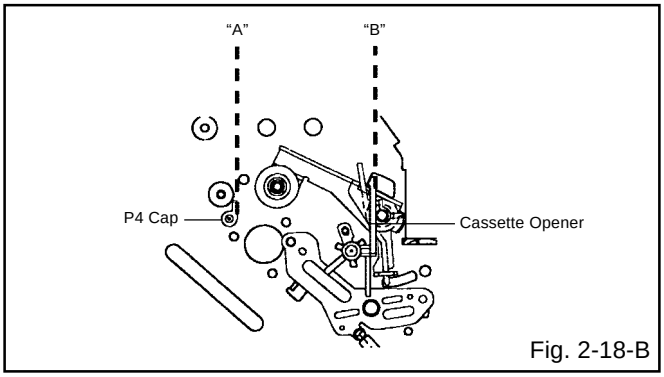

Fig. 2-18-B

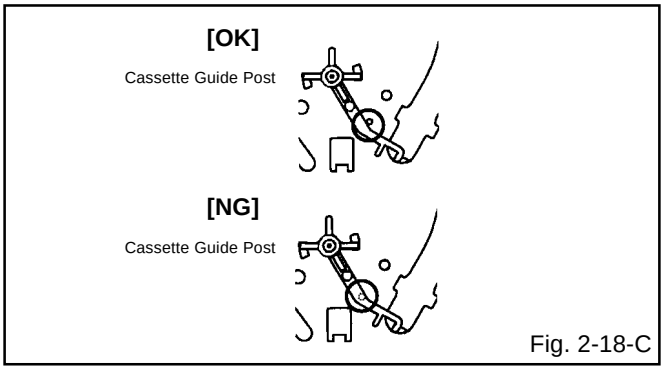

Fig. 2-18-C

DISASSEMBLY INSTRUCTIONS

3. REMOVAL OF DVD DECK PARTS

NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.

3-1: TRAY (Refer to Fig. 3-1-A)

1. Set the Tray opened. **(Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)**
2. Unlock the support ① and remove the Tray.

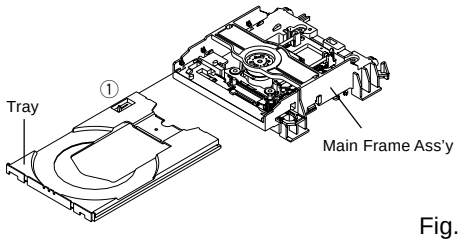

Fig. 3-1-A

NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 3-1-B so that the each markers are met.

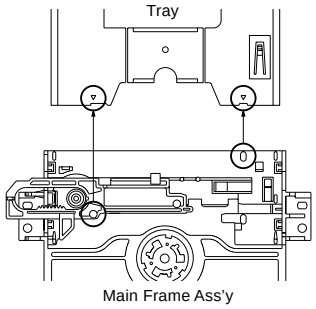

Fig. 3-1-B

3-2: MAIN CHASSIS ASS'Y (Refer to Fig. 3-2-A)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support ①.
3. Remove the Main Chassis Ass'y.

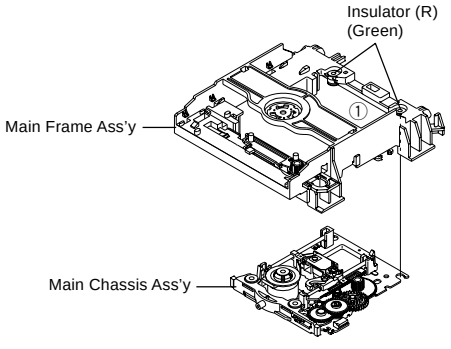

Fig. 3-2-A

NOTE

1. In case of the Main Chassis Ass'y, install it from (1) to (6) in order. **(Refer to Fig. 3-2-B)**

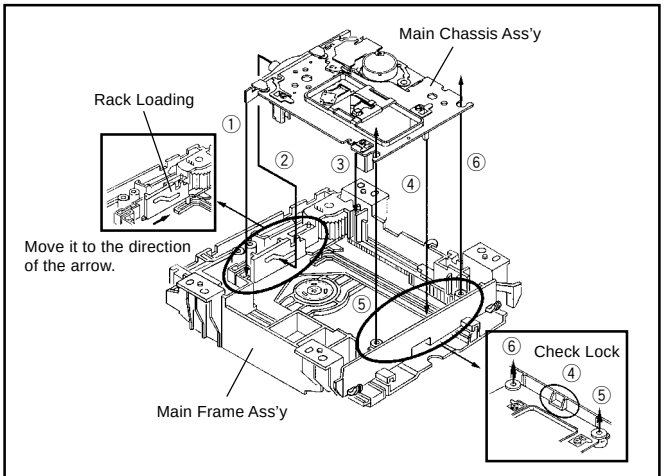

Fig. 3-2-B

3-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING/ RACK L SPRING (Refer to Fig. 3-3)

1. Remove the Rack L Spring.
2. Press down the catcher ① and slide the Rack Loading.
3. Remove the Rack Loading, Rack Loading Spring and Main Gear.

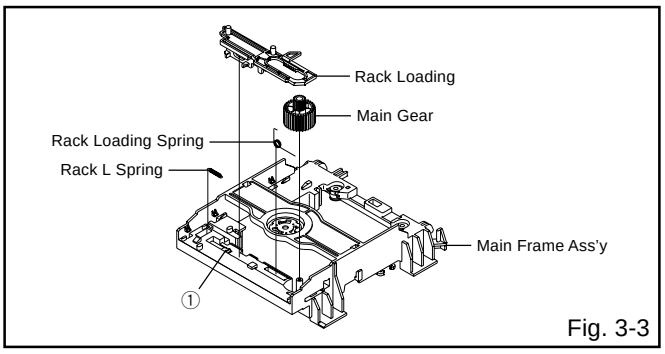

Fig. 3-3

3-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 3-4-A)

1. Remove the screw ①.
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports ②.
5. Remove the Clamper Plate, Clamper Magnet and Clamper.

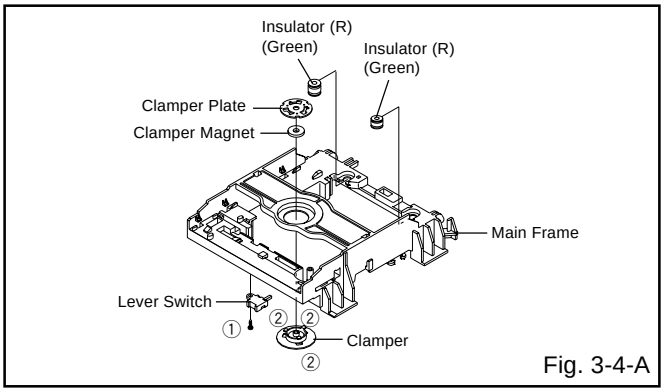

Fig. 3-4-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 3-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 3-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 3-4-D.

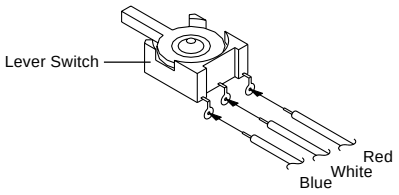

Fig. 3-4-B

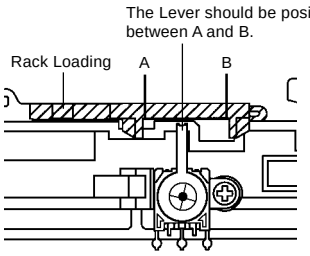

Fig. 3-4-C

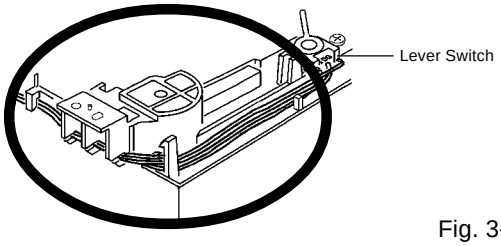

Fig. 3-4-D

3-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 3-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

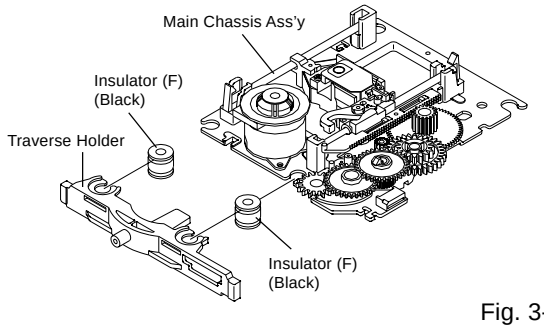

Fig. 3-5-A

NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 3-5-B.

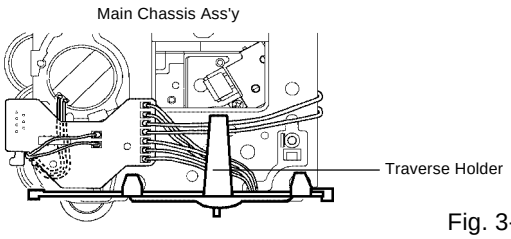

Fig. 3-5-B

3-6: SWITCH PCB ASS'Y (Refer to Fig. 3-6-A)

1. Remove the screw ①.
2. Remove the Switch PCB Ass'y.

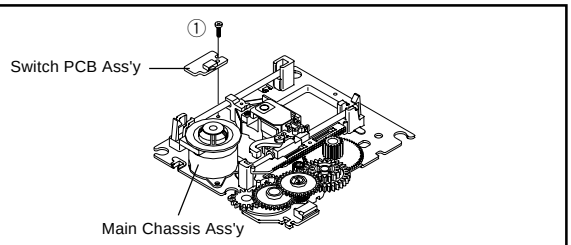

Fig. 3-6-A

NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 3-6-B.
2. When installing the wire of the Switch PCB, while pressing it in the direction of the arrow as shown Fig. 3-6-B, then instal it.

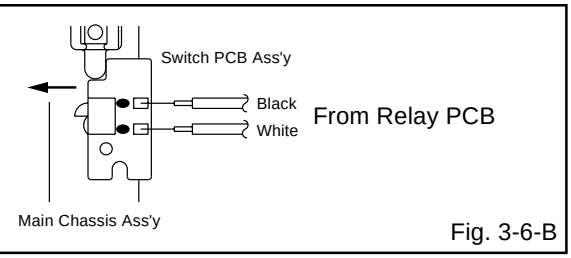

Fig. 3-6-B

3-7: RACK FEED ASS'Y (Refer to Fig. 3-7-A)

1. Remove the screw ①.
2. Remove the Rack Feed 1/2 Spring, Rack Feed 1/2 and Rack Feed Lever.

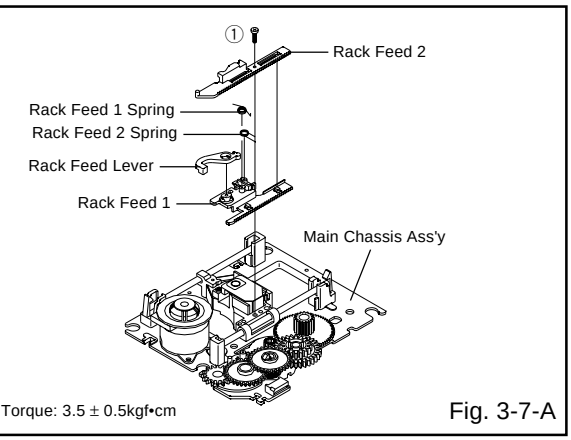

Fig. 3-7-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. **(Refer to Fig. 3-7-B)**
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 3-7-C.

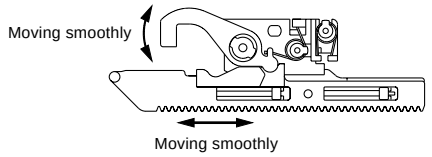

Fig. 3-7-B

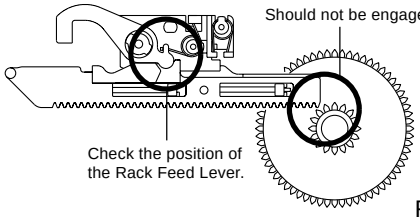

Fig. 3-7-C

3-8: RELAY PCB ASS'Y (Refer to Fig. 3-8-A)

1. Remove the screw ①.
2. Remove the Relay PCB Ass'y.

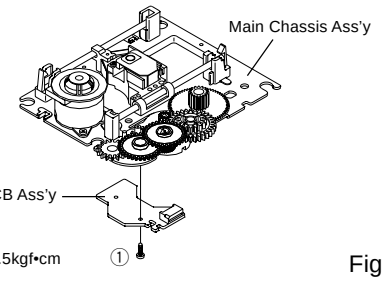

Fig. 3-8-A

NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 3-8-B.

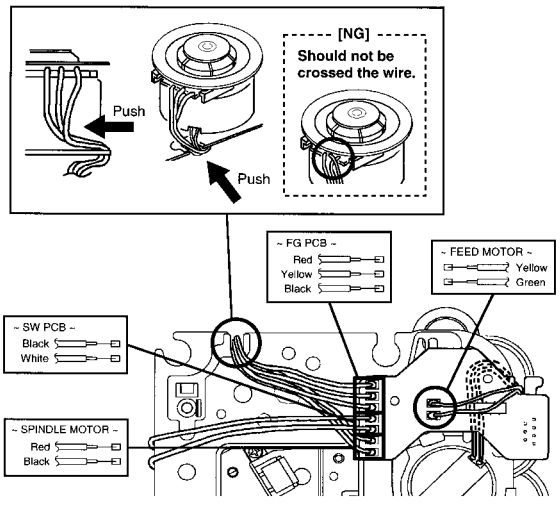

Fig. 3-8-B

3-9: GEAR (Refer to Fig. 3-9-A)

1. Unlock the support ①.
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

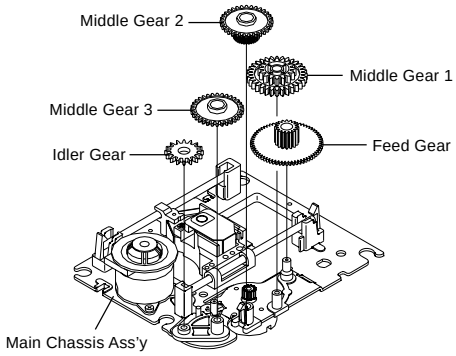

Fig. 3-9-A

NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 3-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 3-9-C.

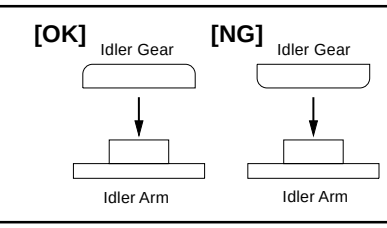

Fig. 3-9-B

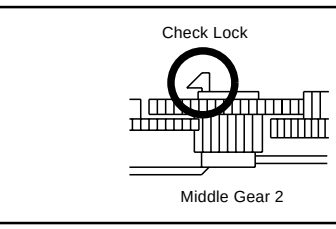

Fig. 3-9-C

3-10: IDLER ARM (Refer to Fig. 3-10-A)

1. Remove the Idler Arm Spring.
2. Remove the Chassis Spring.
3. Remove the Idler Arm.

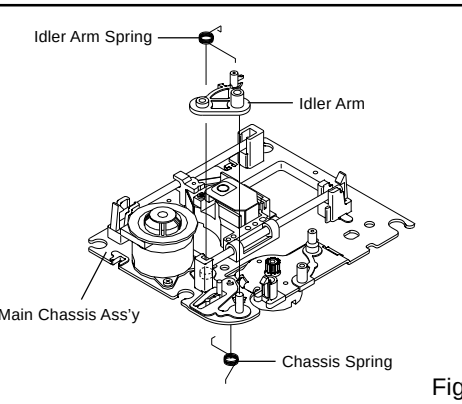

Fig. 3-10-A

DISASSEMBLY INSTRUCTIONS

NOTE

1. In case of the Idler Arm installation, install as the circled section of Fig. 3-10-B.
2. In case of the Idler Arm Spring installation, install as the circled section of Fig. 3-10-C.
3. In case of the Chassis Spring installation, install as the circled section of Fig. 3-10-D.

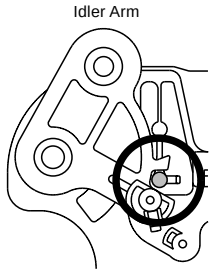

Fig. 3-10-B

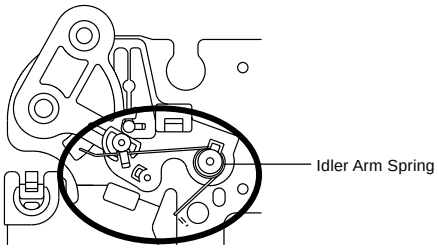

Fig. 3-10-C

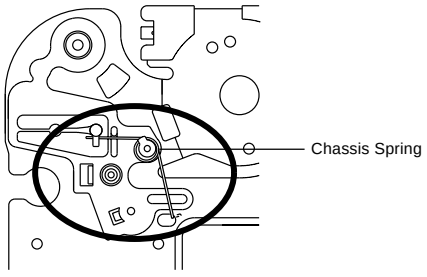

Fig. 3-10-D

3-11: FEED MOTOR (Refer to Fig. 3-11-A)

1. Remove the 2 screws ①.
2. Remove the Feed Motor.
3. Remove the Motor Gear.

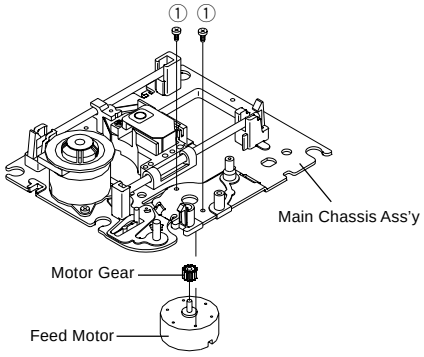

• Screw Torque: 1 ± 0.5kgf•cm

Fig. 3-11-A

NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 3-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 3-11-C.

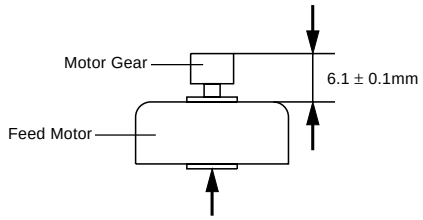

Fig. 3-11-B

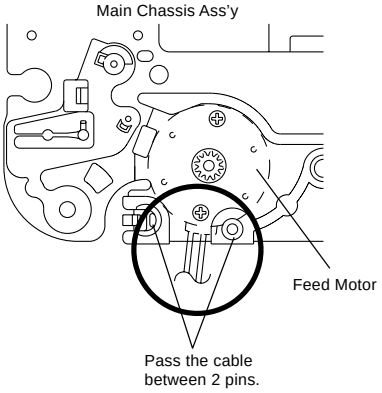

Fig. 3-11-C

DISASSEMBLY INSTRUCTIONS

4. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 4-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

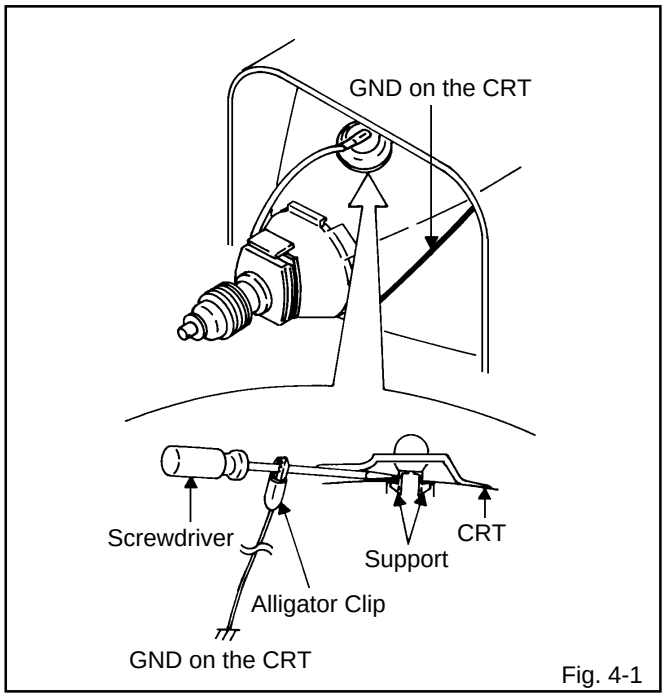

Fig. 4-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 4-2.)**

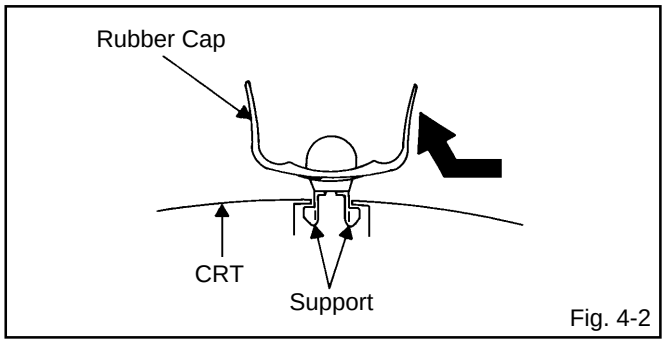

Fig. 4-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 4-3.)**

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

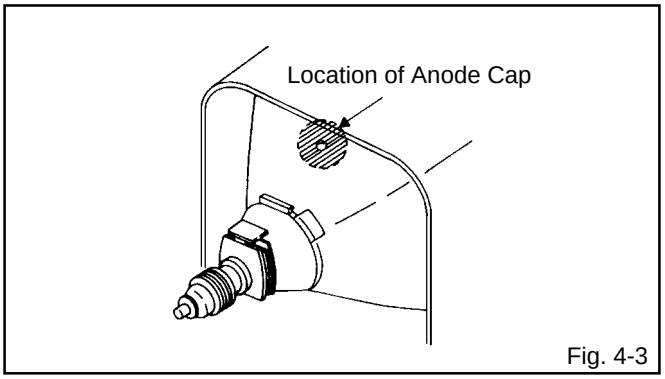

Fig. 4-3

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 4-4.)**

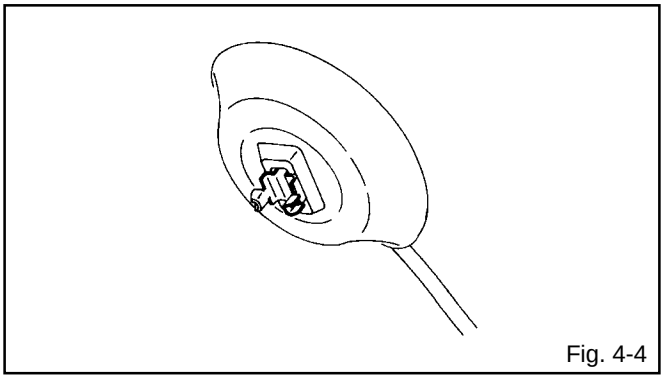
Fig. 4-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 4-5**.

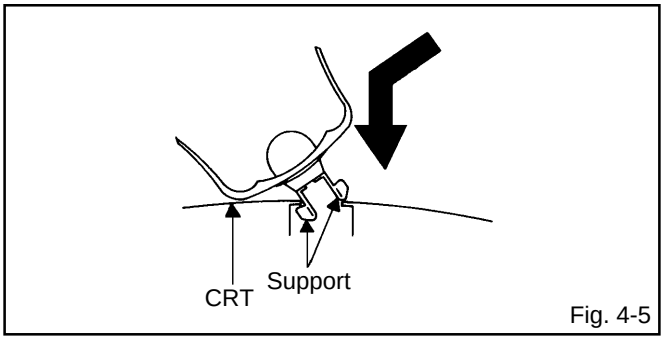

Fig. 4-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

5. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 5-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

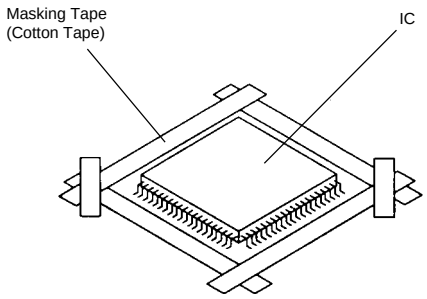

Fig. 5-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 5-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

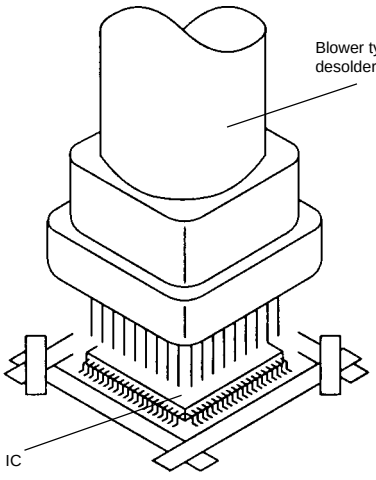

Fig. 5-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 5-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

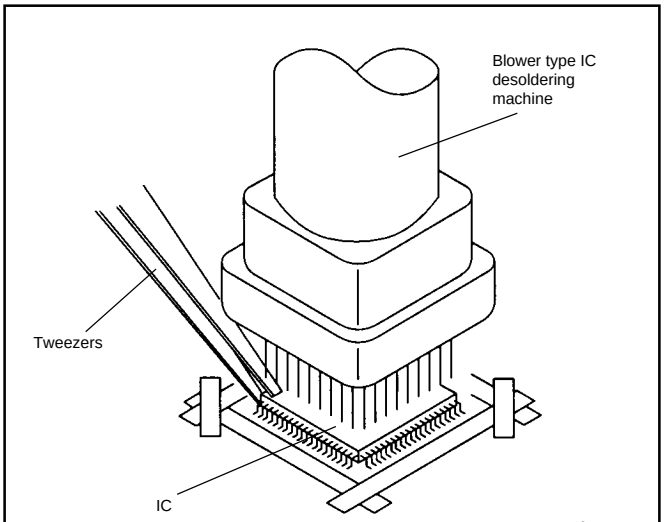

Fig. 5-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 5-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

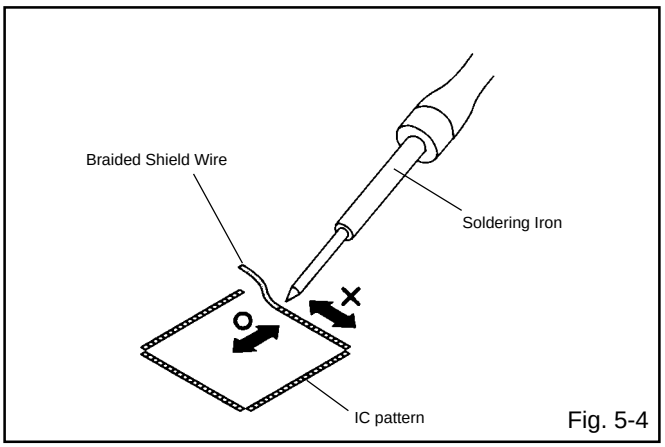

Fig. 5-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 5-5.)**

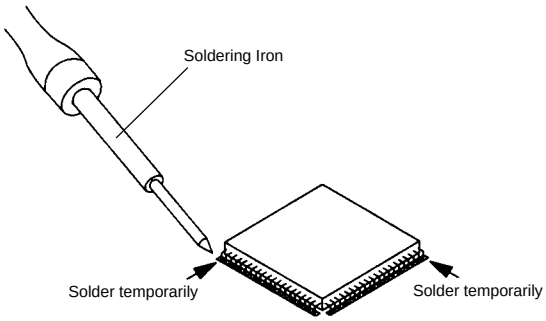

Fig. 5-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 5-6.)**

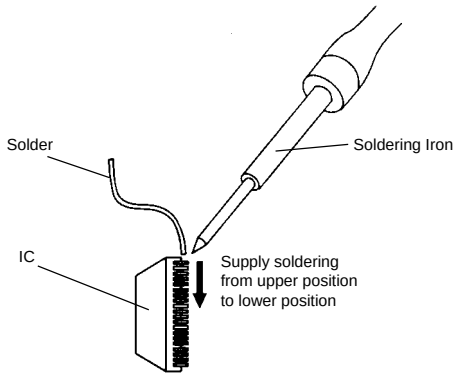

Fig. 5-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 5-7.)**

   NOTE

   Do not absorb the solder to excess.

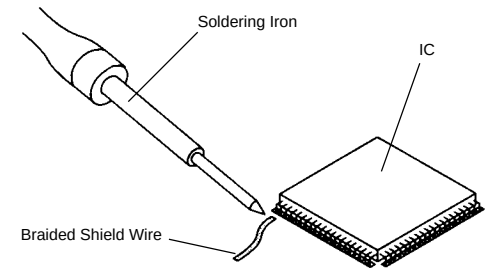

Fig. 5-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 5-8.)**

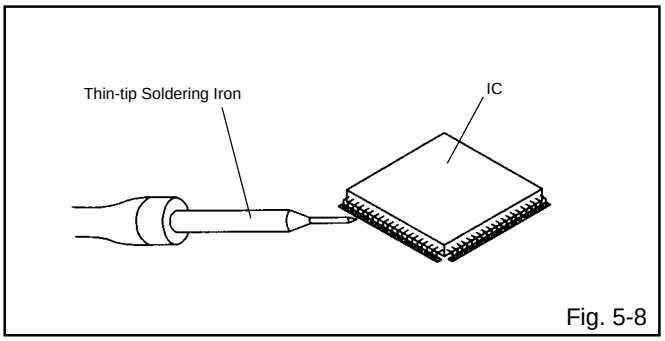

Fig. 5-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

KEY TO ABBREVIATIONS

A	**A/C**	:	Audio/Control
	ACC	:	Automatic Color Control
	AE	:	Audio Erase
	AFC	:	Automatic Frequency Control
	AFT	:	Automatic Fine Tuning
	AFT DET	:	Automatic Fine Tuning Detect
	AGC	:	Automatic Gain Control
	AMP	:	Amplifier
	ANT	:	Antenna
	A.PB	:	Audio Playback
	APC	:	Automatic Phase Control
	ASS'Y	:	Assembly
	AT	:	All Time
	AUTO	:	Automatic
	A/V	:	Audio/Video
B	**BGP**	:	Burst Gate Pulse
	BOT	:	Beginning of Tape
	BPF	:	Bandpass Filter
	BRAKE SOL	:	Brake Solenoid
	BUFF	:	Buffer
	B/W	:	Black and White
C	**C**	:	Capacitance, Collector
	CASE	:	Cassette
	CAP	:	Capstan
	CARR	:	Carrier
	CH	:	Channel
	CLK	:	Clock
	CLOCK (SY-SE)	:	Clock (Syscon to Servo)
	COMB	:	Combination, Comb Filter
	CONV	:	Converter
	CPM	:	Capstan Motor
	CTL	:	Control
	CYL	:	Cylinder
	CYL-M	:	Cylinder-Motor
	CYL SENS	:	Cylinder-Sensor
D	**DATA (SY-CE)**	:	Data (Syscon to Servo)
	dB	:	Decibel
	DC	:	Direct Current
	DD Unit	:	Direct Drive Motor Unit
	DEMOD	:	Demodulator
	DET	:	Detector
	DEV	:	Deviation
E	**E**	:	Emitter
	EF	:	Emitter Follower
	EMPH	:	Emphasis
	ENC	:	Encoder
	ENV	:	Envelope
	EOT	:	End of Tape
	EQ	:	Equalizer
	EXT	:	External
F	**F**	:	Fuse
	FBC	:	Feed Back Clamp
	FE	:	Full Erase
	FF	:	Fast Forward, Flip-flop
	FG	:	Frequency Generator
	FL SW	:	Front Loading Switch
	FM	:	Frequency Modulation
	FSC	:	Frequency Sub Carrier
	FWD	:	Forward
G	**GEN**	:	Generator
	GND	:	Ground
H	**H.P.F**	:	High Pass Filter
	H.SW	:	Head Switch
	Hz	:	Hertz
I	**IC**	:	Integrated Circuit
	IF	:	Intermediate Frequency
	IND	:	Indicator
	INV	:	Inverter
K	**KIL**	:	Killer
L	**L**	:	Left
	LED	:	Light Emitting Diode
	LIMIT AMP	:	Limiter Amplifier
	LM, LDM	:	Loading Motor
	LP	:	Long Play
	L.P.F	:	Low Pass Filter
	LUMI.	:	Luminance
M	**M**	:	Motor
	MAX	:	Maximum
	MINI	:	Minimum
	MIX	:	Mixer, mixing
	MM	:	Monostable Multivibrator
	MOD	:	Modulator, Modulation
	MPX	:	Multiplexer, Multiplex
	MS SW	:	Mecha State Switch
N	**NC**	:	Non Connection
	NR	:	Noise Reduction
O	**OSC**	:	Oscillator
	OPE	:	Operation
P	**PB**	:	Playback
	PB CTL	:	Playback Control
	PB-C	:	Playback-Chrominance
	PB-Y	:	Playback-Luminance
	PCB	:	Printed Circuit Board
	P. CON	:	Power Control
	PD	:	Phase Detector
	PG	:	Pulse Generator
	P-P	:	Peak-to Peak
R	**R**	:	Right
	REC	:	Recording
	REC-C	:	Recording-Chrominance
	REC-Y	:	Recording-Luminance
	REEL BRK	:	Reel Brake
	REEL S	:	Reel Sensor
	REF	:	Reference
	REG	:	Regulated, Regulator
	REW	:	Rewind
	REV, RVS	:	Reverse
	RF	:	Radio Frequency
	RMC	:	Remote Control
	RY	:	Relay
S	**S. CLK**	:	Serial Clock
	S. COM	:	Sensor Common
	S. DATA	:	Serial Data
	SEG	:	Segment
	SEL	:	Select, Selector
	SENS	:	Sensor
	SER	:	Search Mode
	SI	:	Serial Input
	SIF	:	Sound Intermediate Frequency
	SO	:	Serial Output
	SOL	:	Solenoid
	SP	:	Standard Play

KEY TO ABBREVIATIONS

S	**STB**	:	Serial Strobe
	SW	:	Switch
	SYNC	:	Synchronization
	SYNC SEP	:	Sync Separator, Separation
T	**TR**	:	Transistor
	TRAC	:	Tracking
	TRICK PB	:	Trick Playback
	TP	:	Test Point
U	**UNREG**	:	Unregulated
V	**V**	:	Volt
	VCO	:	Voltage Controlled Oscillator
	VIF	:	Video Intermediate Frequency
	VP	:	Vertical Pulse, Voltage Display
	V.PB	:	Video Playback
	VR	:	Variable Resistor
	V.REC	:	Video Recording
	VSF	:	Visual Search Fast Forward
	VSR	:	Visual Search Rewind
	VSS	:	Voltage Super Source
	V-SYNC	:	Vertical-Synchronization
	VT	:	Voltage Tuning
X	**X'TAL**	:	Crystal
Y	**Y/C**	:	Luminance/Chrominance

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter SERVICE MODE, unplug AC cord till lost actual clock time. Then press and hold Vol (-) button of main unit and remocon key simultaneously.
The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

Set Key	Remocon Key	Standard Time (seconds)	Operations
VOL. (-) MIN	0	2	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	2	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, the POWER ON total hours, and PLAY/REC total hours.
VOL. (-) MIN	2	2	Horizontal position adjustment of OSD. NOTE: Also can be adjusted by using the Adjustment MENU. Refer to the "ELECTRICAL ADJUSTMENT" (OSD HORIZONTAL).
VOL. (-) MIN	3	2	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	4	2	Adjust the PG SHIFTER manually. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
VOL. (-) MIN	5	2	Adjusting of the Tracking to the center position.
VOL. (-) MIN	6	2	POWER ON total hours and PLAY/REC total hours are displayed on the screen. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED). Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	2	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).
REC/OTR	4	2	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.
STOP (DVD)	7	3	Releasing of PARENTAL LOCK. Refer to the “PARENTAL CONTROL - RATING LEVEL”. NOTE: The function will only work without the setting of DVD disc at DVD mode.
STOP (DVD)	9	3	Tray cannot be opened. Refer to the “TRAY LOCK”. NOTE: No indications on the screen when the Tray Lock is setting.

Set Key	Set Key	Standard Time (seconds)	Operations
VOL. (-) MIN	FF	2	The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"

PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.
Parts replacing time does not mean the life span for individual parts.
Also, long term storage or misuse may cause transformation and aging of rubber parts.
The following list means standard hours, so the checking hours depends on the conditions.

Time / Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	●	●	
Capstan Belt		●	●	●	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	●	●	●	●	
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Ass'y		●	●	●	●	
Idler Arm Ass'y		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	Replace when rolling becomes abnormal.
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean
● : Check it and if necessary, replace it.

CONFIRMATION OF HOURS USED

POWER ON total hours and PLAY/REC total hours can be checked on the screen.
Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".
The confirmation of using hours will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

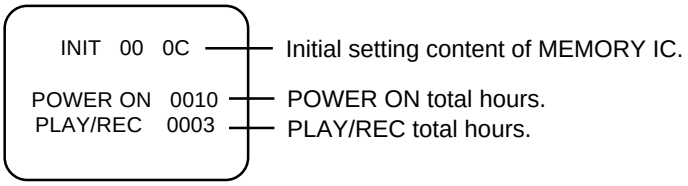

(16 x 16 x 16 x thousands digit value) + (16 x 16 x hundreds digit value) + (16 x tens digit value) + (ones digit value)

PREVENTIVE CHECKS AND SERVICE INTERVALS

CLEANING

NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. **(Refer to the figure below.)**

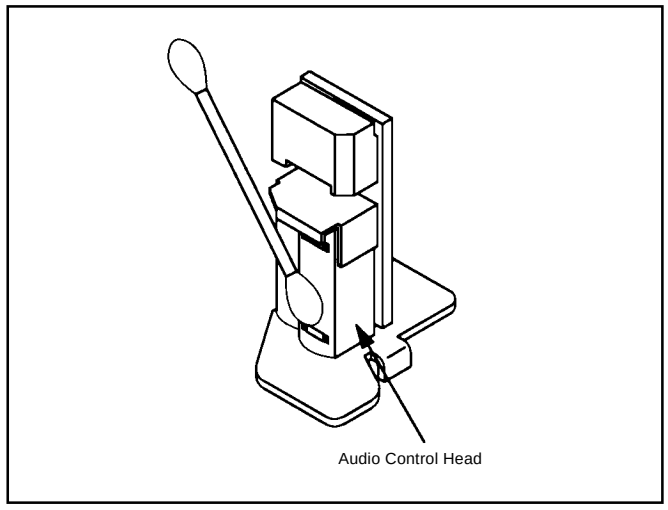

2. TAPE RUNNING SYSTEM

When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head.
Use the chamois one by one.

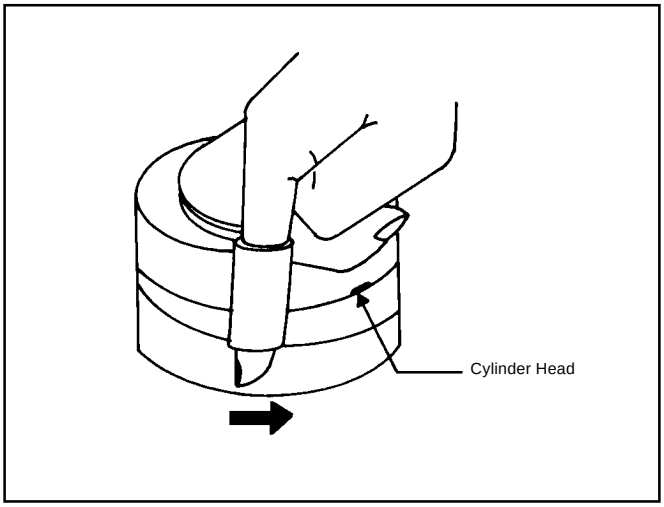

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: Initial Data setting will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.
No need setting for the position of the mark @ due to the adjustment value.
No need setting for after INI 3F due to the adjustment value..

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	0C	47	52	02	04	9D	30	22	86	45	D0	08	A6	B1	42	35
10	20	30	E3	52	03	87	00	48	00	FF	15	4B	1C	54	83	B2
20	9A	97	8C	A5	B7	88	91	B6	1A	0B	3D	00	37	16	27	30
30	01	31	1B	40	00	@	@	2F	00	23	FF	FF	FF	FF	FF	FF

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.

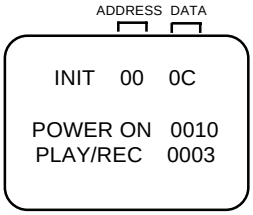

Fig. 1

3. ADDRESS is now selected and should "blink". Using the UP or DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using UP or DOWN button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

After the data input, set to the initializing of shipping.

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and the Channel button **(1)** on the remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

SERVICING FIXTURES AND TOOLS

Alignment Tape 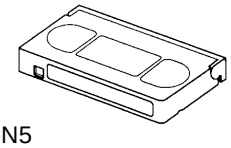 ST-N5 ST-NF	Back tension cassette gauge 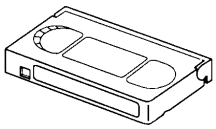 70909103	Torque cassette gauge (KT-300NR) 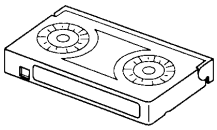 70909199	Taper nut driver 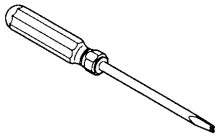 70909228
VTR cleaning kit 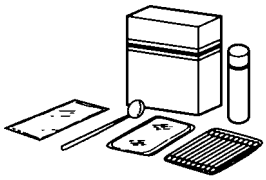	VTR lubrication kit 	Grease 	JG002B Adapter JG002E Dial Torque Gauge (10~90gf•cm) JG002F (60~600gf•cm) 
JG022 Master Plane 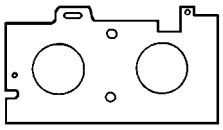	JG024A Reel Disk Height Adjustment Jig 	JG153 X Value Adjustment Screwdriver 	Tentelometer 

Ref. No.	Part No.	Parts Name	Remarks
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf•cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf•cm)	VSR Torque, Brake Torque (S Reel)
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment

PREPARATION FOR SERVICING

NOTE: The both pressing of set key and remote control key will not be possible if clock has been set. To reset clock, either unplug AC cord and allow at least 5 seconds before Power On.

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and the FF button on the set for more than 2 seconds.
   (The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape.)
3. In case of using a cassette tape, press the STOP/EJECT button to insert or eject a cassette tape.
   Turn on the power and re-check the cable before checking the trouble points.

MECHANICAL ADJUSTMENTS

1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)

1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

1. Turn on the power and set to the STOP mode.
2. Set the master plane **(JG022)** and reel disk height adjustment jig **(JG024A)** on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
3. While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig **(JG024A)** and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to 10(+2, -0)mm.
4. Adjust the other reel in the same way.

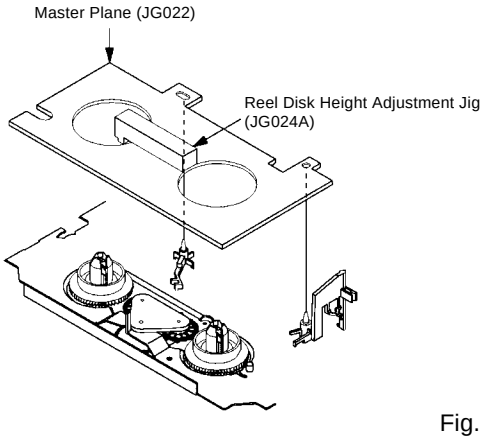

Fig. 1-1-A

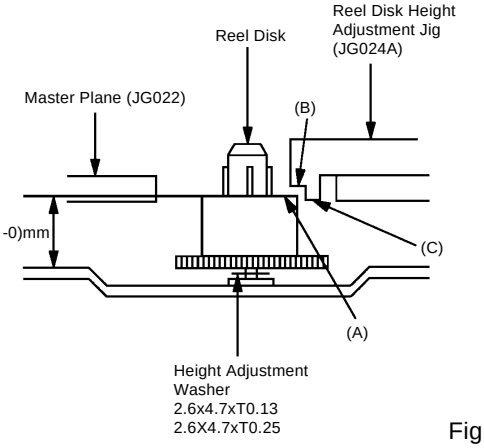

Fig. 1-1-B

1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

1. Set to the PLAY mode.
2. Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
3. While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

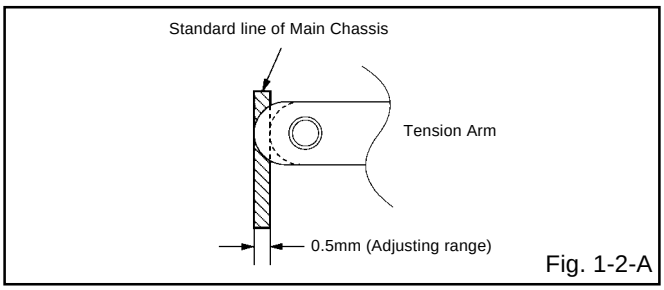

Fig. 1-2-A

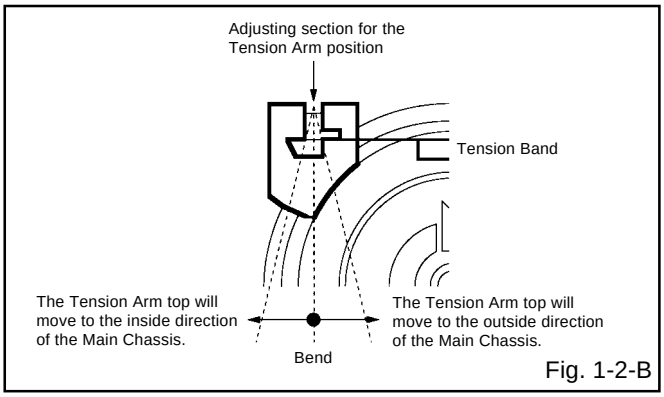

Fig. 1-2-B

1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

1. Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
2. Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates 20 ± 2gf in the beginning of playback.

• USING A CASSETTE TYPE TORQUE TAPE **(KT-300NR)**

1. After confirmation and adjustment of Tension Post position **(Refer to item 1-2)**, load the cassette type torque tape **(KT-300NR)** and set to the PLAY mode.
2. Confirm that the right meter of the torque tape indicates 50~90gf•cm during playback in SP mode.
3. Confirm that the left meter of the torque tape indicates 25~40gf•cm during playback in SP mode.

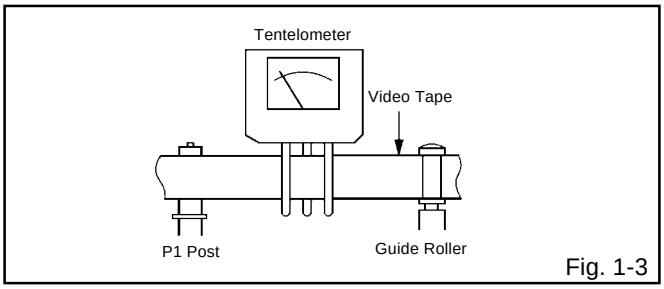

Fig. 1-3

MECHANICAL ADJUSTMENTS

1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Set to the Picture Search (Rewind) mode. **(Refer to Fig.1-4-B)**
2. Then, confirm that it indicates 120~180gf•cm.

NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.

1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge **(JG002F)** and Adapter **(JG002B)** on the S Reel. Turn the Torque Gauge **(JG002F)** clockwise.
4. Then, confirm that it indicates 60~100gf•cm.

(T Reel Brake) **(Refer to Fig. 1-4-B)**

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of **Fig. 1-4-A**.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge **(JG002E)** and Adapter **(JG002B)** on the T reel. Turn the Torque Gauge **(JG002E)** counterclockwise.
4. Then, confirm that it indicates 30~50gf•cm.

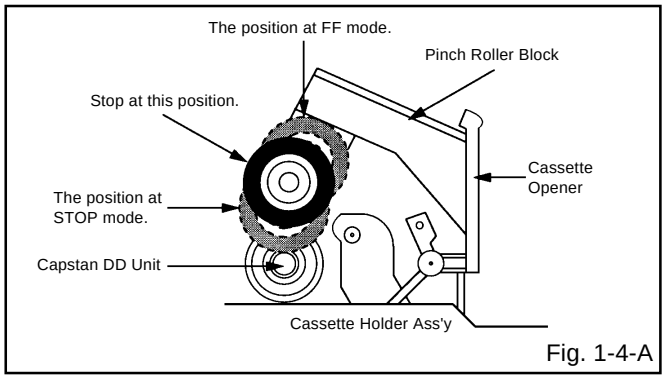

Fig. 1-4-A

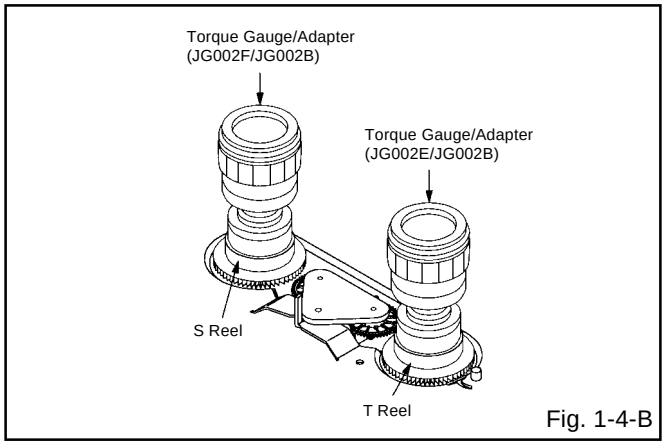

Fig. 1-4-B

NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm

2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM

Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape.
2. Connect CH-1 of the oscilloscope to **TP4501 (Envelope)** and CH-2 to **TP102 (SW Pulse)**.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. **(Refer to Fig. 2-1-A)**
5. When observing the envelope, adjust the Taper Nut Driver slightly until the envelope will be flat.
   Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in **Fig. 2-1-B**, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback.
   (Refer to the ELECTRICAL ADJUSTMENTS)

NOTE

After adjustment, confirm and adjust A/C head.
(Refer to item 2-2)

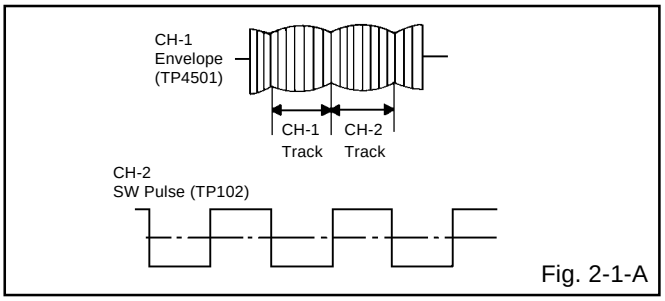

Fig. 2-1-A

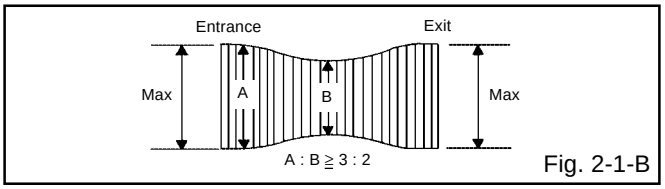

Fig. 2-1-B

MECHANICAL ADJUSTMENTS

2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/ CONTROL HEAD

When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape.
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Cap as shown in **Fig. 2-2-A**.
   a) When the reflected picture is distorted, turn the screw ① clockwise until the distortion is disappeared.
   b) When the reflected picture is not distorted, turn the screw ① counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw ② to set the audio level to maximum.
4. Confirm that the bottom of the Audio/ Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
   c) When the height is not correct, turn the screw ③ to adjust the height. Then, adjust the 1~3 again.

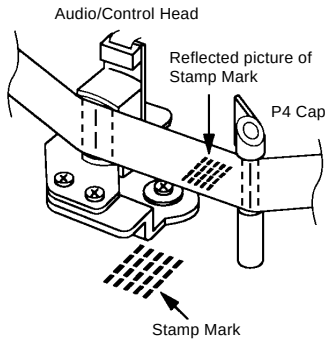

Fig. 2-2-A

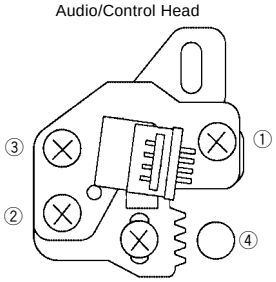

Fig. 2-2-B

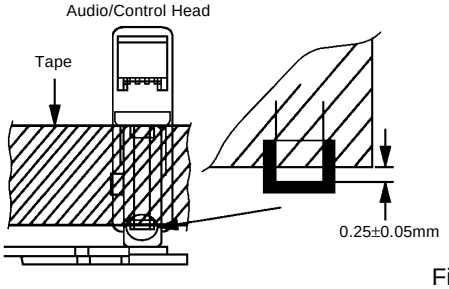

Fig. 2-2-C

2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. **(Refer to item 1-1)**
2. Confirm and adjust the position of the Tension Post. **(Refer to item 1-2)**
3. Adjust the Guide Roller. **(Refer to item 2-1)**
4. Confirm and adjust the Audio/Control Head. **(Refer to item 2-2)**
5. Connect CH-1 of the oscilloscope to **TP102**, CH-2 to **TP4501** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape.
7. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver **(JG153)** to the ④ of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

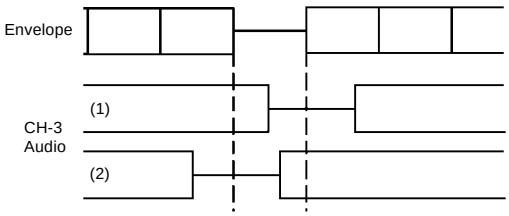

Fig. 2-3

MECHANICAL ADJUSTMENTS

3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

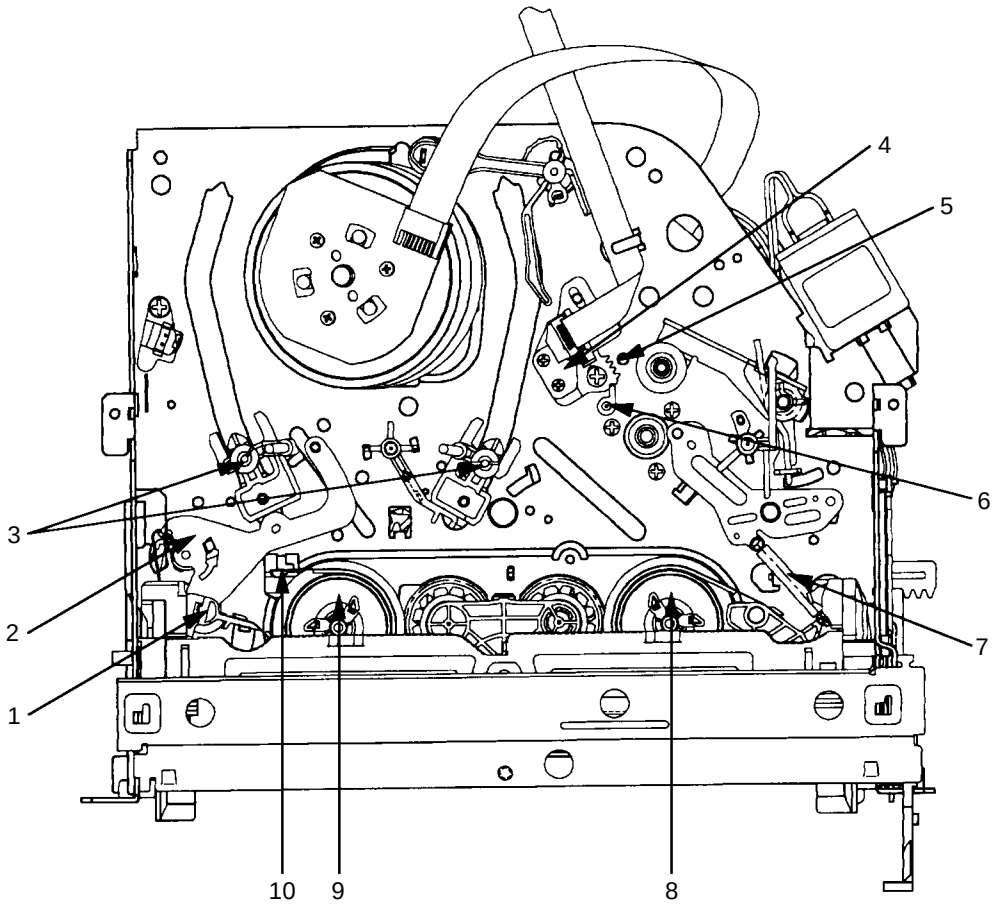

1. Tension Connect
2. Tension Arm
3. Guide Roller
4. Audio/Control Head
5. X value adjustment driver hole
6. P4 Post
7. T Brake Spring
8. T Reel
9. S Reel
10. Adjusting section for the Tension Arm position

ELECTRICAL ADJUSTMENTS

1. BEFORE MAKING ELECTRICAL ADJUSTMENTS

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor).

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. Unplug the AC plug for more than 5 seconds to set the clock to the non-setting state. Then, set the volume level to minimum.
2. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 2 seconds to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

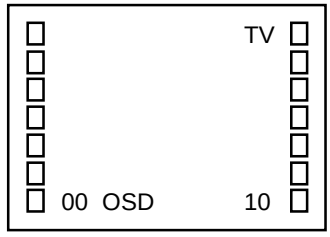

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	18	BRI MAX
01	OSD C	19	BRI MIN
02	CUT OFF	20	CONT CENT
03	H.POSI	21	CONT MAX
04	H.BLK L	22	CONT MIN
05	H.BLK R	23	COL CENT
06	V.SIZE	24	COL MAX
07	V.POSI	25	COL MIN
08	V.LIN	26	TINT
09	VS.CORR	27	SHARP
10	V.COMP	28	SUB BIAS
11	R.BIAS	29	H.SIZE
12	G.BIAS	30	PARABOLA
13	B.BIAS	31	TRAPEZIUM
14	R.DRV	32	COR TOP
15	G.DRV	33	COR BTM
16	B.DRV	34	H.COMP
17	BRI CENT	35	T.STE

Fig. 1-2

2. BASIC ADJUSTMENTS (VCR SECTION)

2-1: PG SHIFTER

1. Connect CH-1 on the oscilloscope to **TP102** and CH-2 to **TP4201**.
2. Playback the alignment tape.
3. Press both VOL. DOWN button on the set and the Channel button **(5)** on the remote control for more than 2 seconds to set tracking to center.
4. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control for more than 2 seconds until the indicator REC disappears. If the indicator REC disappears, adjustment is completed.

(If the above adjustments doesn't work well:)

5. Press the VOL. DOWN button on the set and the channel button **(3)** on the remote control for more than 2 seconds until the indicator REC disappears.
6. When the REC indicator is blinking, press both VOL. DOWN button on the set and the channel button **(4)** on the remote control for more than 2 seconds and adjust the Tracking +/- button until the arising to the down of Head Switching Pulse becomes 6.5 ± 0.5H.
(Refer to Fig. 2-1-A, B)

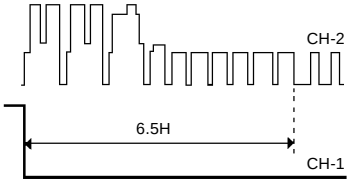

Fig. 2-1-A

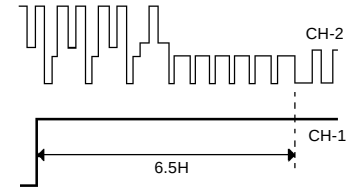

Fig. 2-1-B

ELECTRICAL ADJUSTMENTS

(TV SECTION)

2-2: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Using the remote control, set the brightness and contrast to normal position.
3. Connect the digital voltmeter to **TP401**.
4. Adjust the **VR1701** until the digital voltmeter is 135.5 ± 0.5V.

2-3: CUT OFF

1. Adjust the unit to the following settings.
   R.BIAS=127, G.BIAS=127, B.BIAS=127, R.DRV=63, G.DRV=07, B.DRV=63,
2. Place the set with Aging Test for more than 15 minutes.
3. Set condition is AV MODE without signal.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(02)** on the remote control to select "CUT OFF".
6. Adjust the **Screen Volume** until a dim raster is obtained.

2-4: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 15 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(11)** on the remote control to select "R.BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R.BIAS", "G.BIAS", "B.BIAS", "R.DRV", "B.DRV" or "G.DRV".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R.BIAS, G.BIAS, B.BIAS, R.DRV, B.DRV, and G.DRV at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-5: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-6: HORIZONTAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(03)** on the remote control to select "H.POSI".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-7: HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(29)** on the remote control to select “H. SIZE”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 10 ± 2%.

2-8: VERTICAL POSITION

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(07)** on the remote control to select "V.POSI".
4. Check if the step No. V.POSI is "02".
5. Adjust the **VR404** until the horizontal line becomes fit to the notch of the shadow mask.

2-9: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V.SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the Up/Down OVER SCAN Quantity becomes equal to the Right/Left OVER SCAN Quantity.

2-10: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-9. After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select "V.LIN".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-11: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(31)** on the remote control to select “TRAPEZIUM”.
4. Press the VOL. UP/DOWN button on the remote control until the both vertical lines of the screen become parallel.

ELECTRICAL ADJUSTMENTS

2-12: PARABOLA

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(30)** on the remote control to select “PARABOLA”.
4. Press the VOL. UP/DOWN button on the remote control until the right and left vertical lines are straight.

2-13: CORNER CORR TOP

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(32)** on the remote control to select “COR TOP”.
4. Press the VOL. UP/DOWN button on the remote control until the upper section of the both ends vertical lines are straight.

2-14: CORNER CORR BOTTOM

1. Receive the crosshatch signal from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(33)** on the remote control to select “COR BTM”.
4. Press the VOL. UP/DOWN button on the remote control until the bottom section of the both ends vertical lines are straight.

2-15: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-2)**

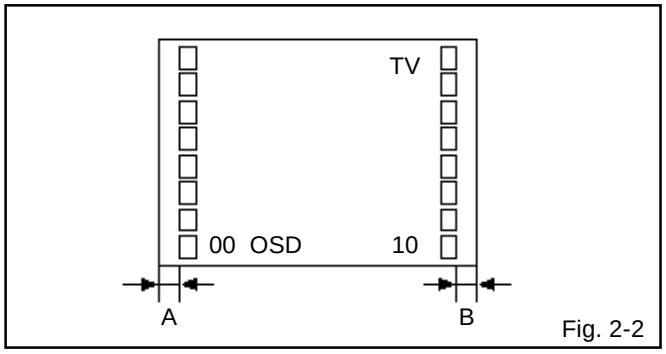

Fig. 2-2

2-16: BRIGHT CENTER

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRI CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 10% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
7. Press the DVD button on the remote control to set to the DVD mode.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "BRI CENT".
9. Press the RIGHT/LEFT button on the remote control to increase the step numbers by 10 steps to the AV.

2-17: TINT

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP806**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select "TNT".
5. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes a straight line **(Refer to Fig. 2-3)**.
6. Receive the color bar pattern. (Audio Video Input)
7. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.
8. Press the DVD button on the remote control to set to the DVD mode.
9. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select "TNT".
10. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

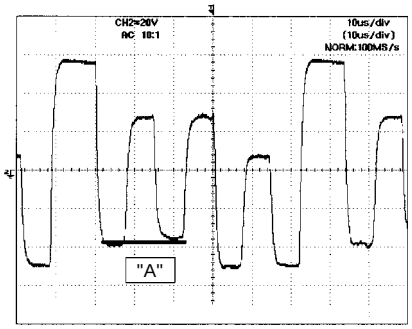

Fig. 2-3

ELECTRICAL ADJUSTMENTS

2-18: COLOR CENTER

1. Receive the color bar pattern. (RF Input)
2. Using the remote control, set the brightness, contrast, color and tint to normal position.
3. Connect the oscilloscope to **TP804**.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(23)** on the remote control to select "COL CENT".
5. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales on the screen of the oscilloscope.
6. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110 ± 5% of the white level. **(Refer to Fig. 2-4)**
7. Receive the color bar pattern. (Audio Video Input)
8. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 2~6.
9. Press the DVD button on the remote control to set to the DVD mode.
10. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(23)** on the remote control to select "COL CENT".
11. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

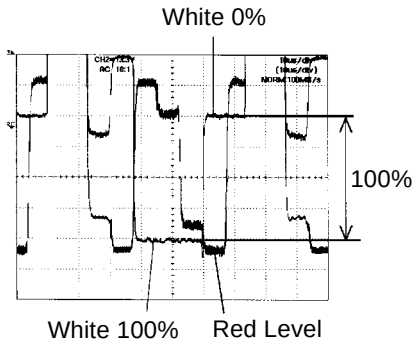

Fig. 2-4

2-19: SUB CONTRAST MAX

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to select "CONT MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "106".
3. Receive a broadcast and check if the picture is normal.
4. Press the INPUT SELECT button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.
5. Receive a broadcast and check if the picture is normal. Press the DVD button on the remote control to set to the DVD mode.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to
7. select "CONT MAX".
8. Press the VOL. UP/DOWN button on the remote control to set the same step numbers as the AV mode.

2-20: Confirmation of Fixed Value (step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	DVD
01	OSD C	03	03	03
04	H.BLK L	04	04	04
05	H.BLK R	03	03	03
09	VS.CORR	15	15	15
10	V.COMP	03	03	03
18	BRI MAX	50	50	50
19	BRI MIN	05	05	05
20	CONT CENT	70	70	70
22	CONT MIN	15	15	15
24	COL MAX	127	127	127
25	COL MIN	00	00	00
27	SHARP	25	25	15
28	SUB BIAS	00	00	00
34	H.COMP	02	02	02
35	T.STE	00	00	00

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue colors.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

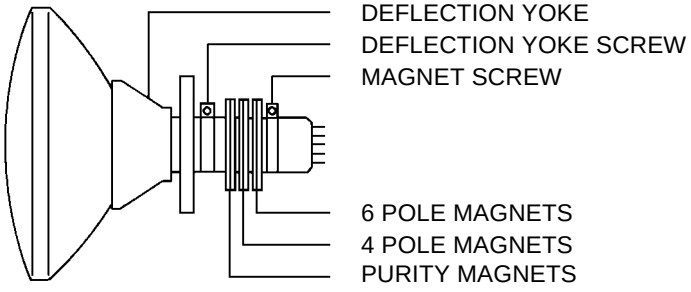

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

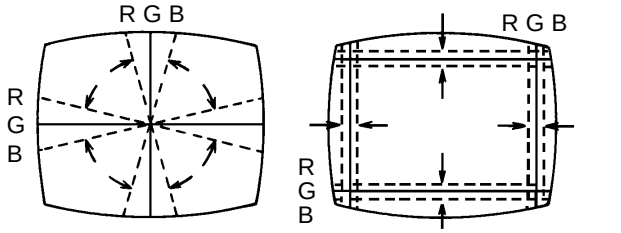

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

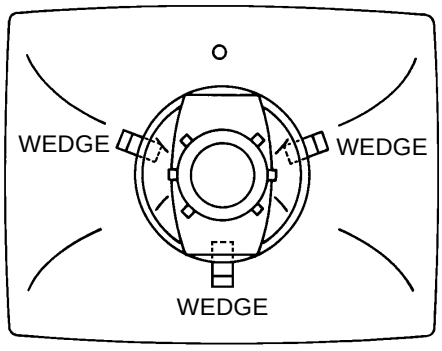

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

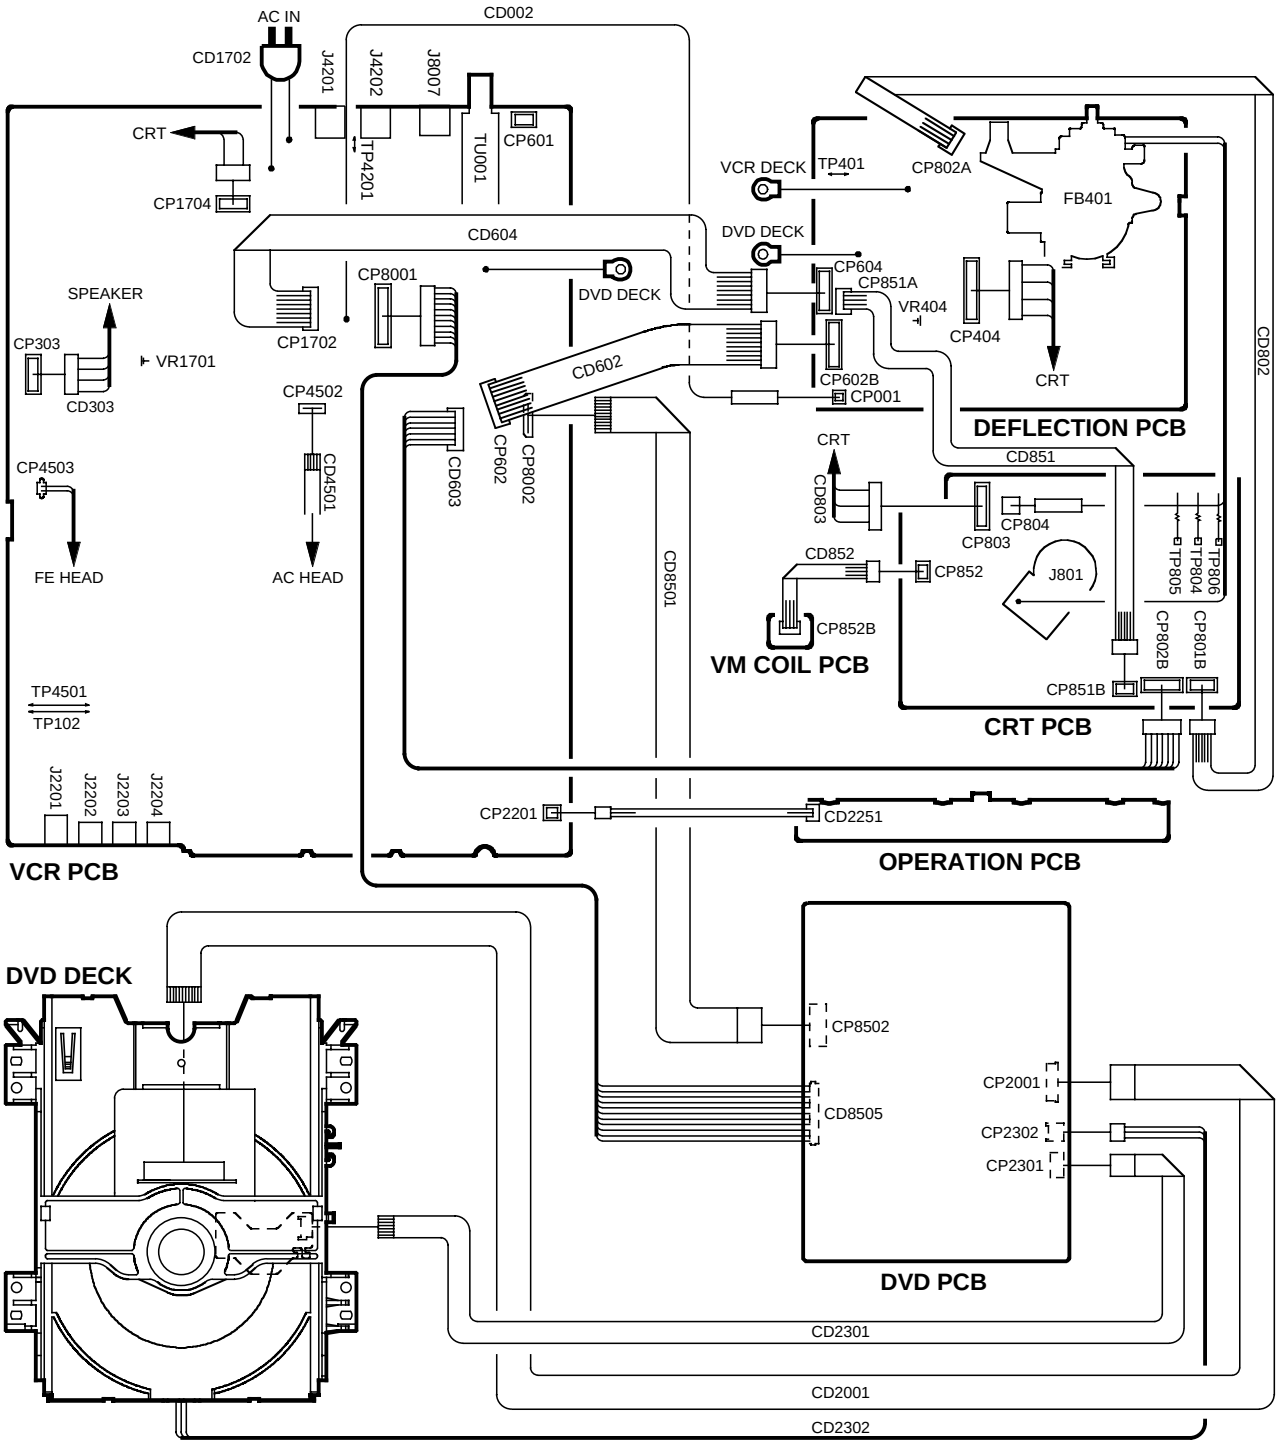

DVD BLOCK DIAGRAM

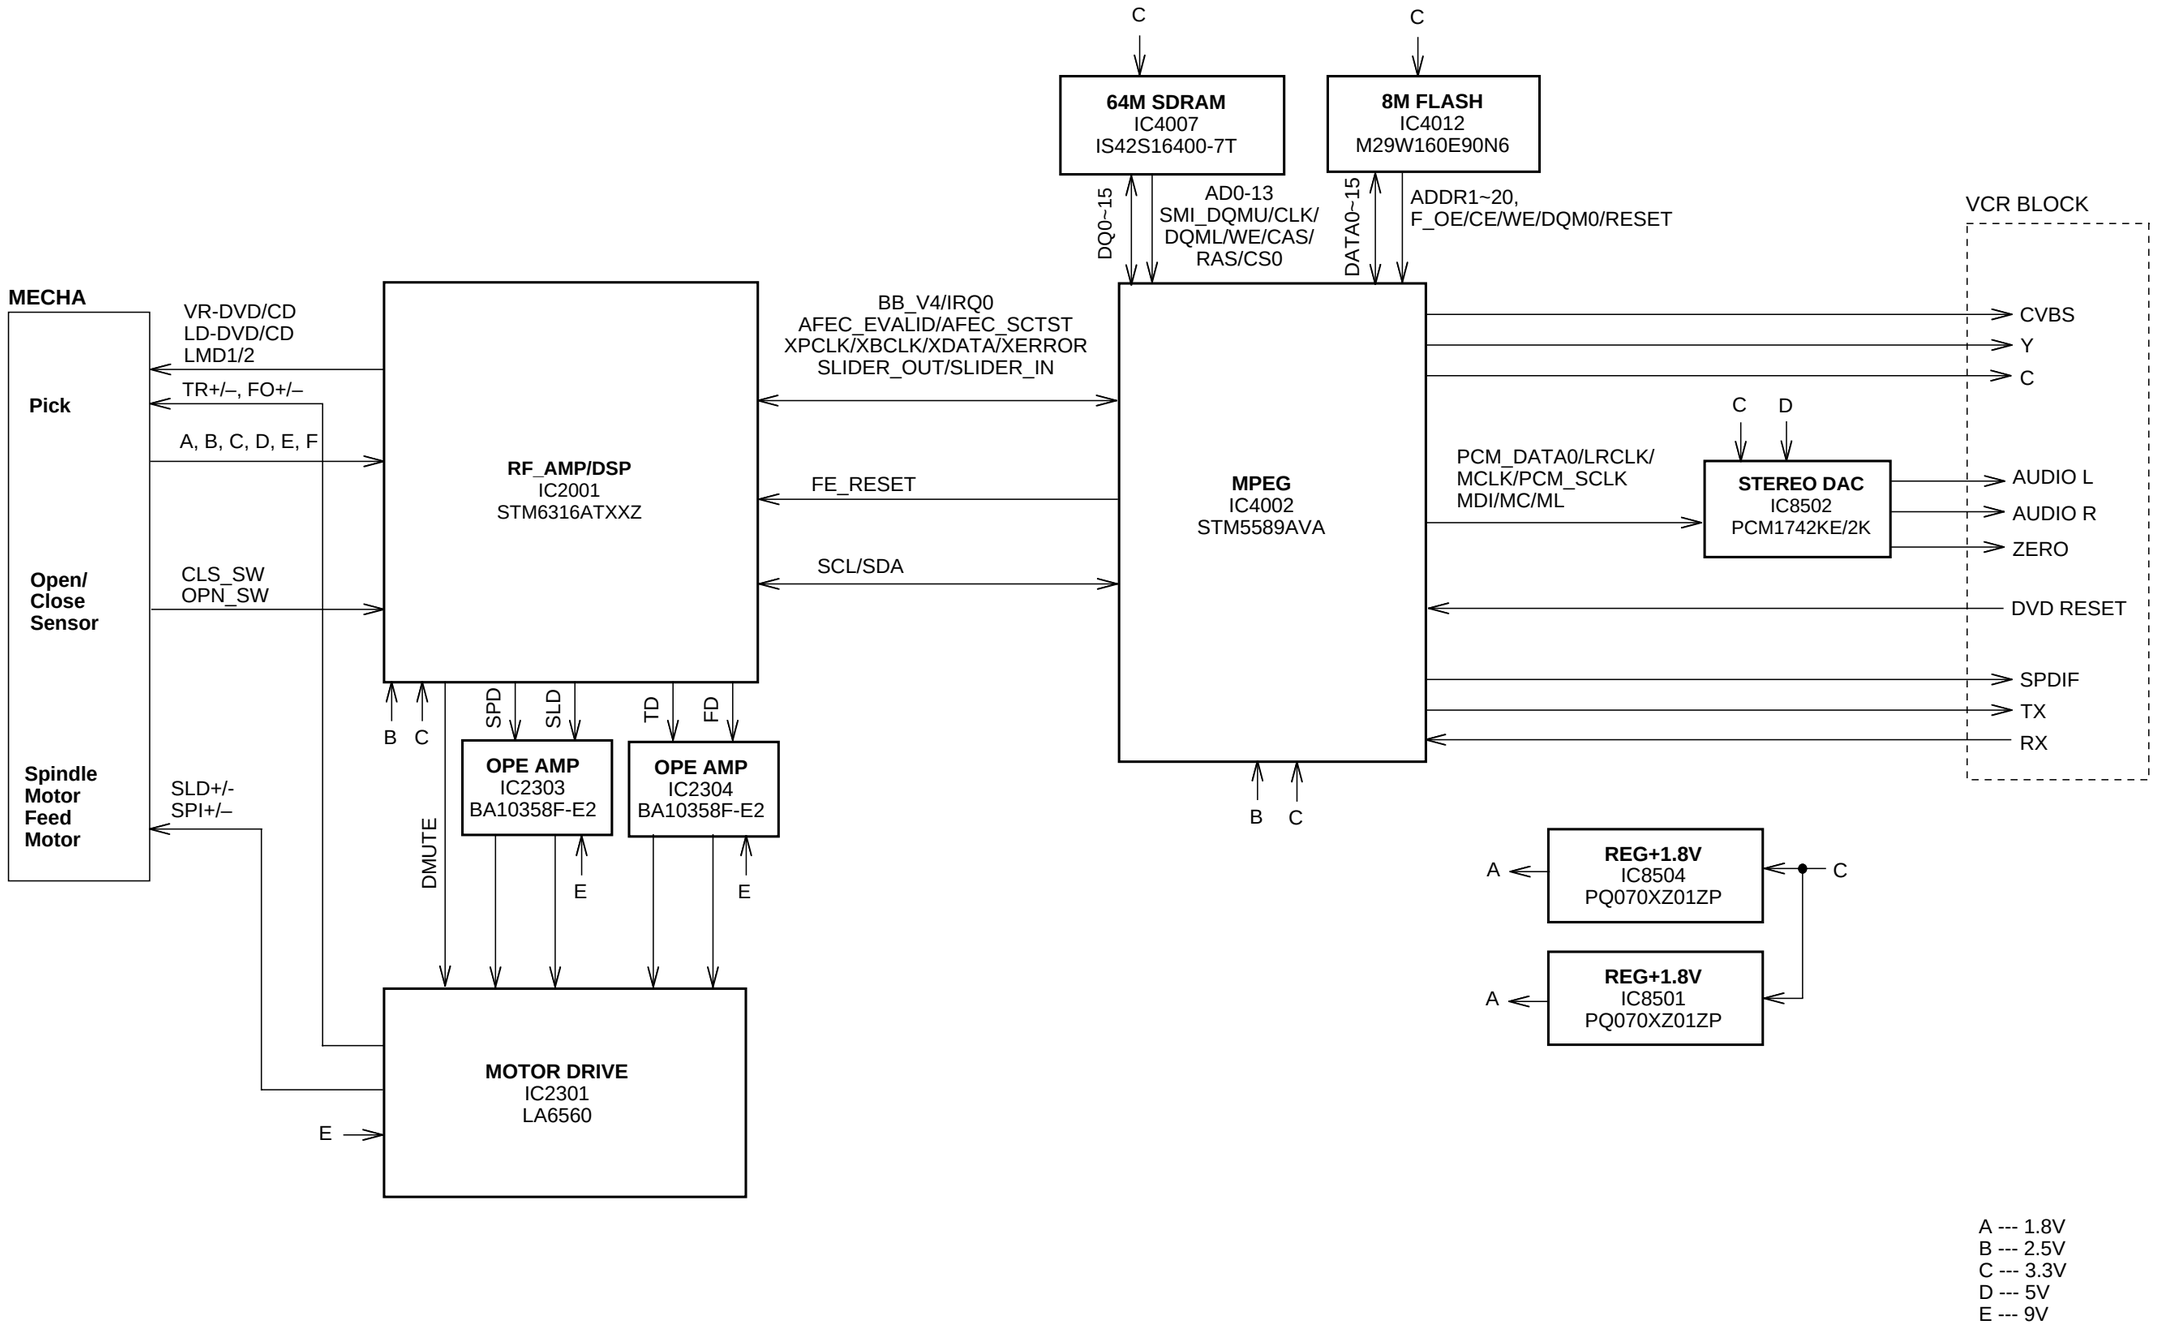

A --- 1.8V
B --- 2.5V
C --- 3.3V
D --- 5V
E --- 9V

Y/C/AUDIO/HEAD AMP BLOCK DIAGRAM

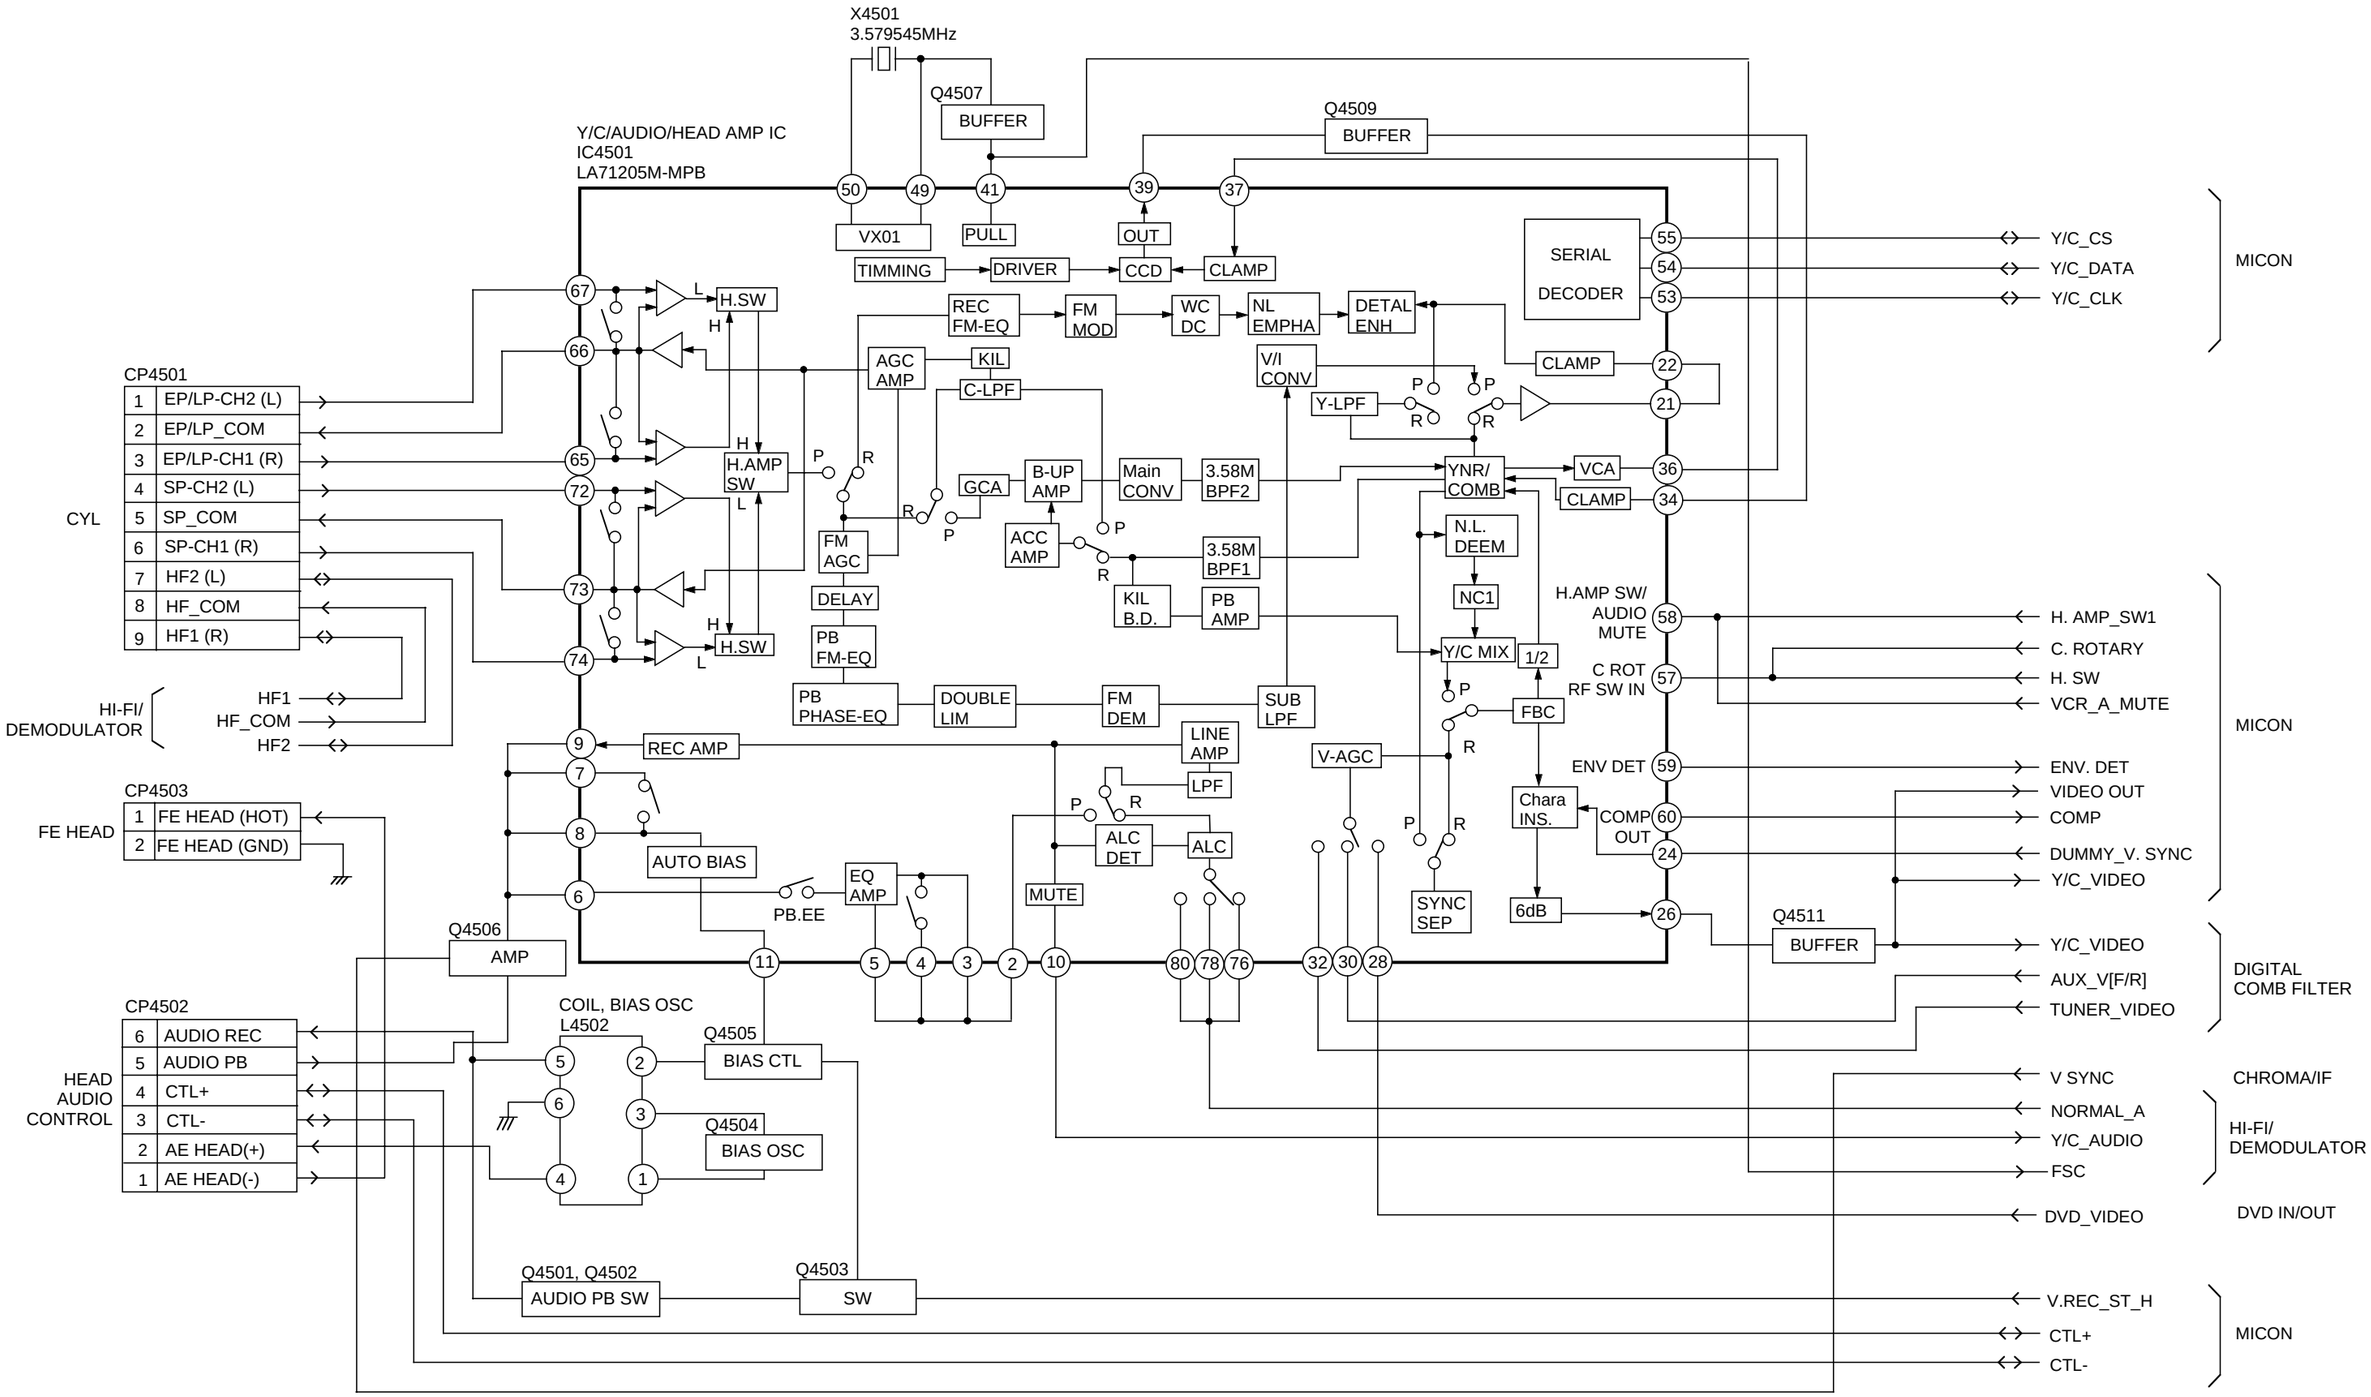

MICON BLOCK DIAGRAM

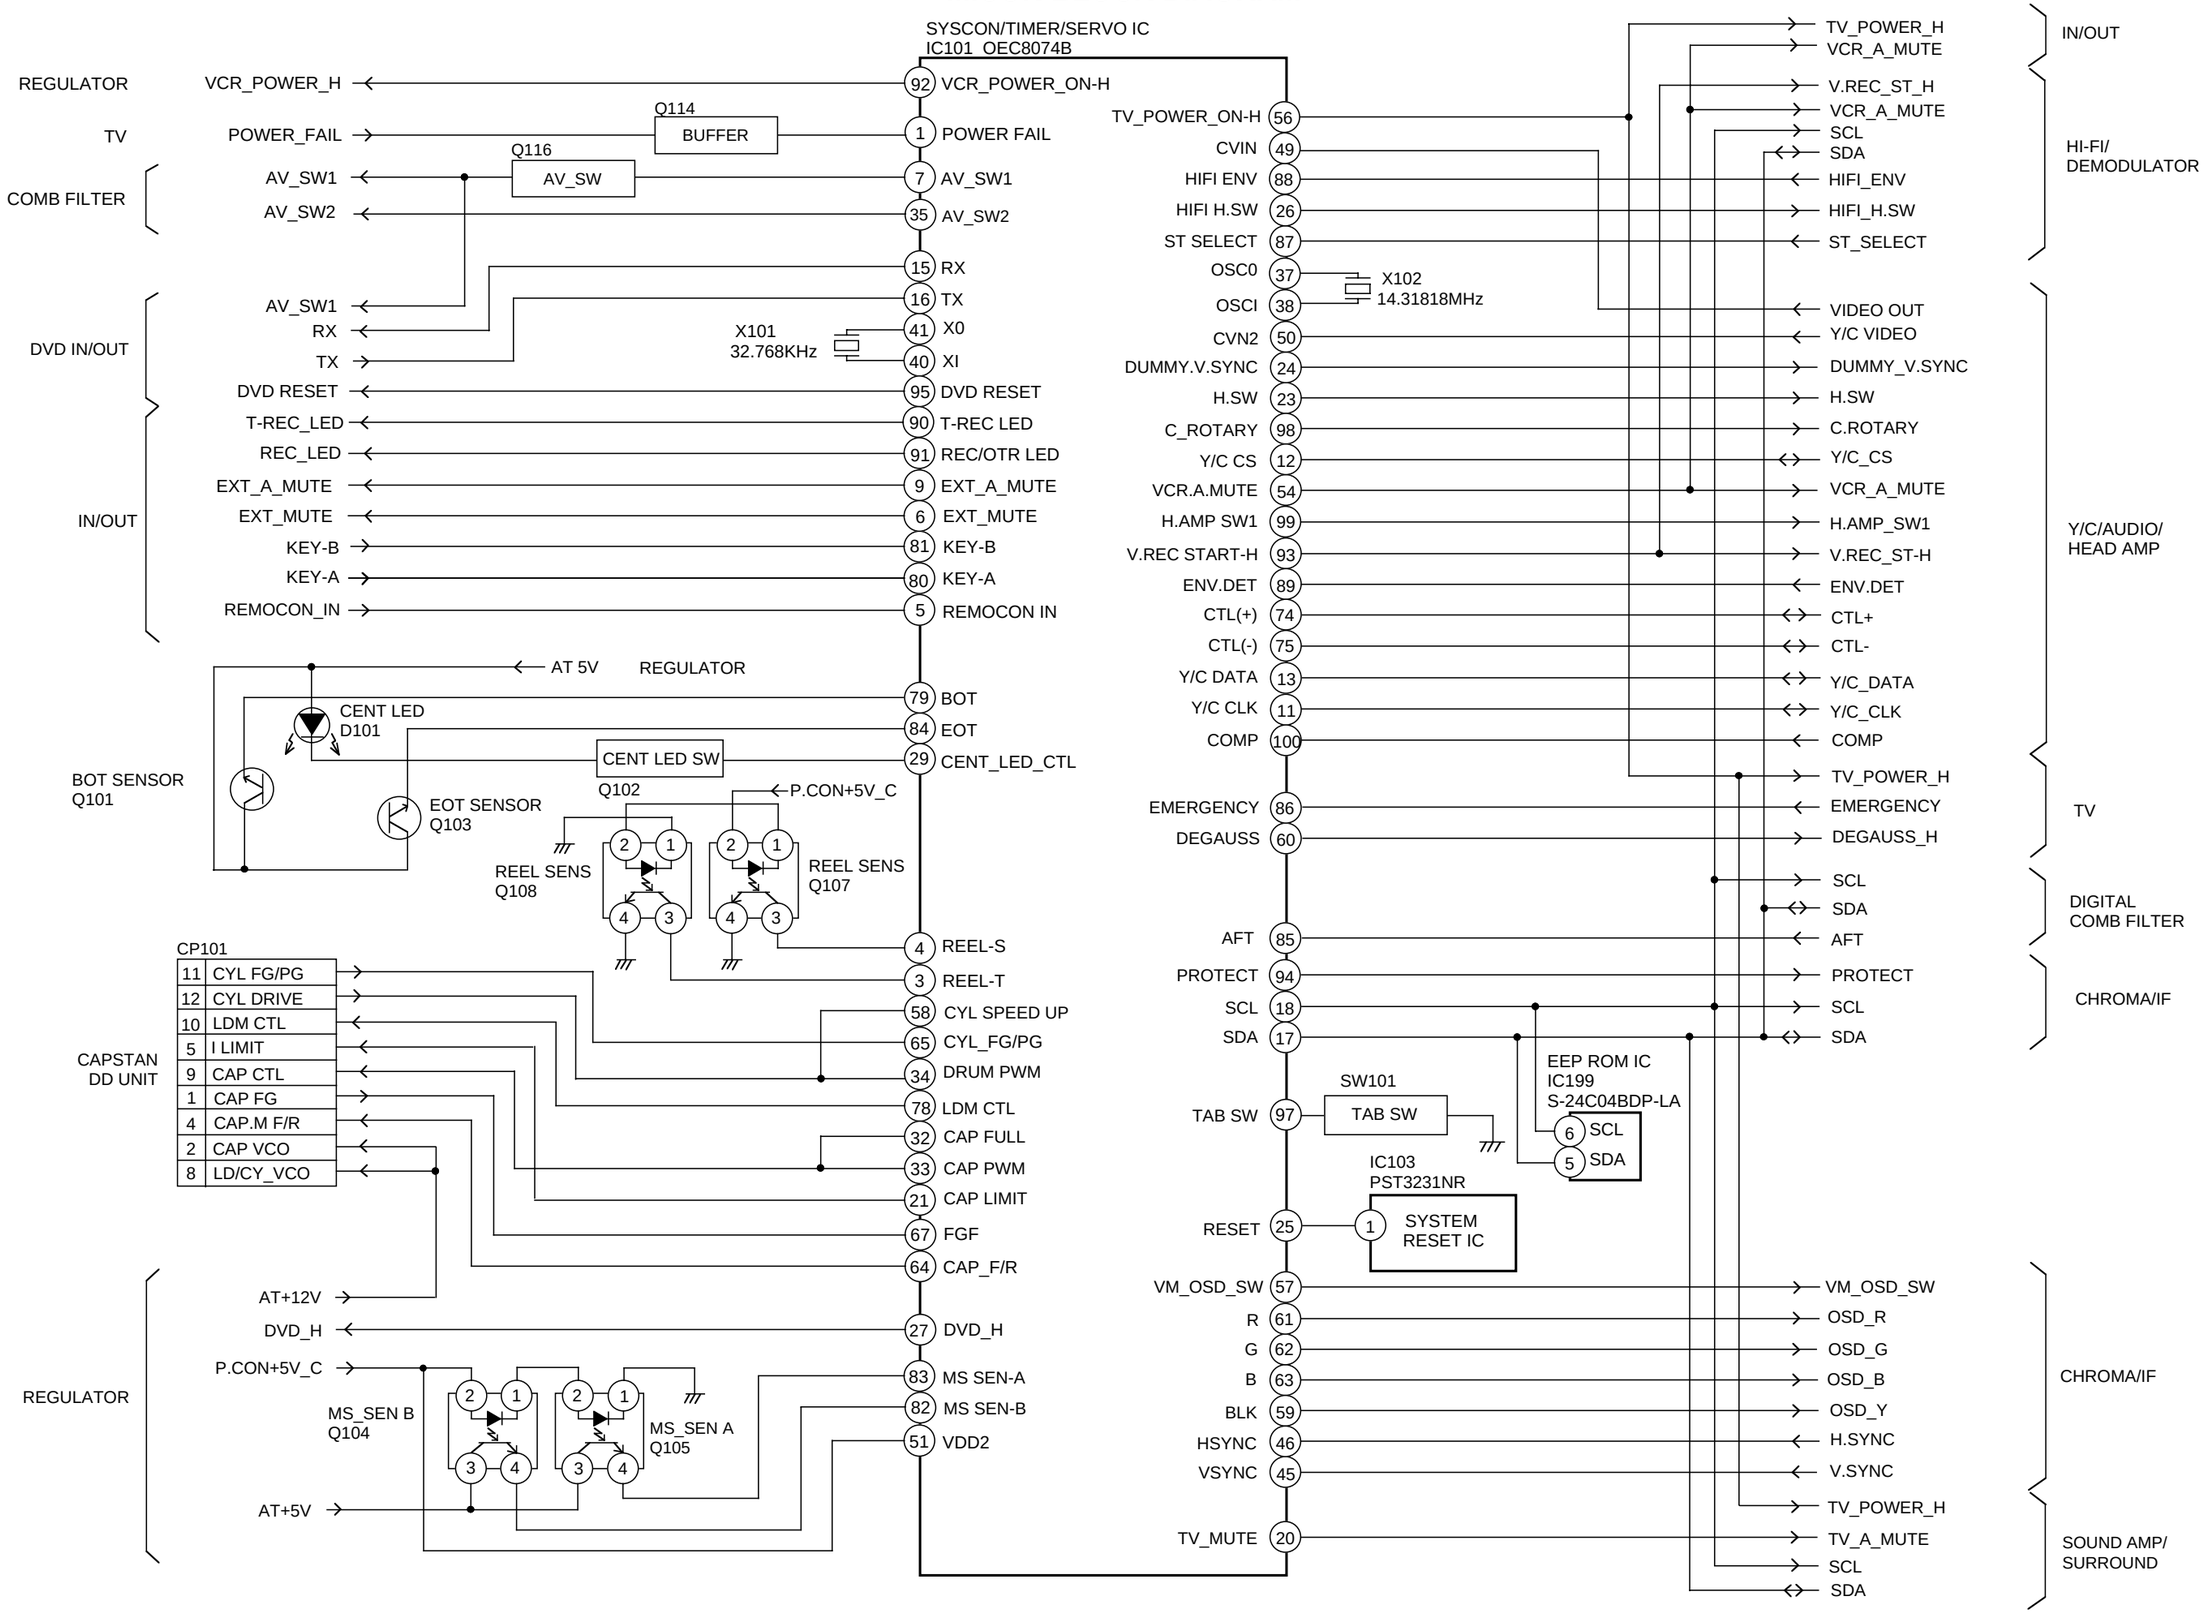

IN/OUT BLOCK DIAGRAM

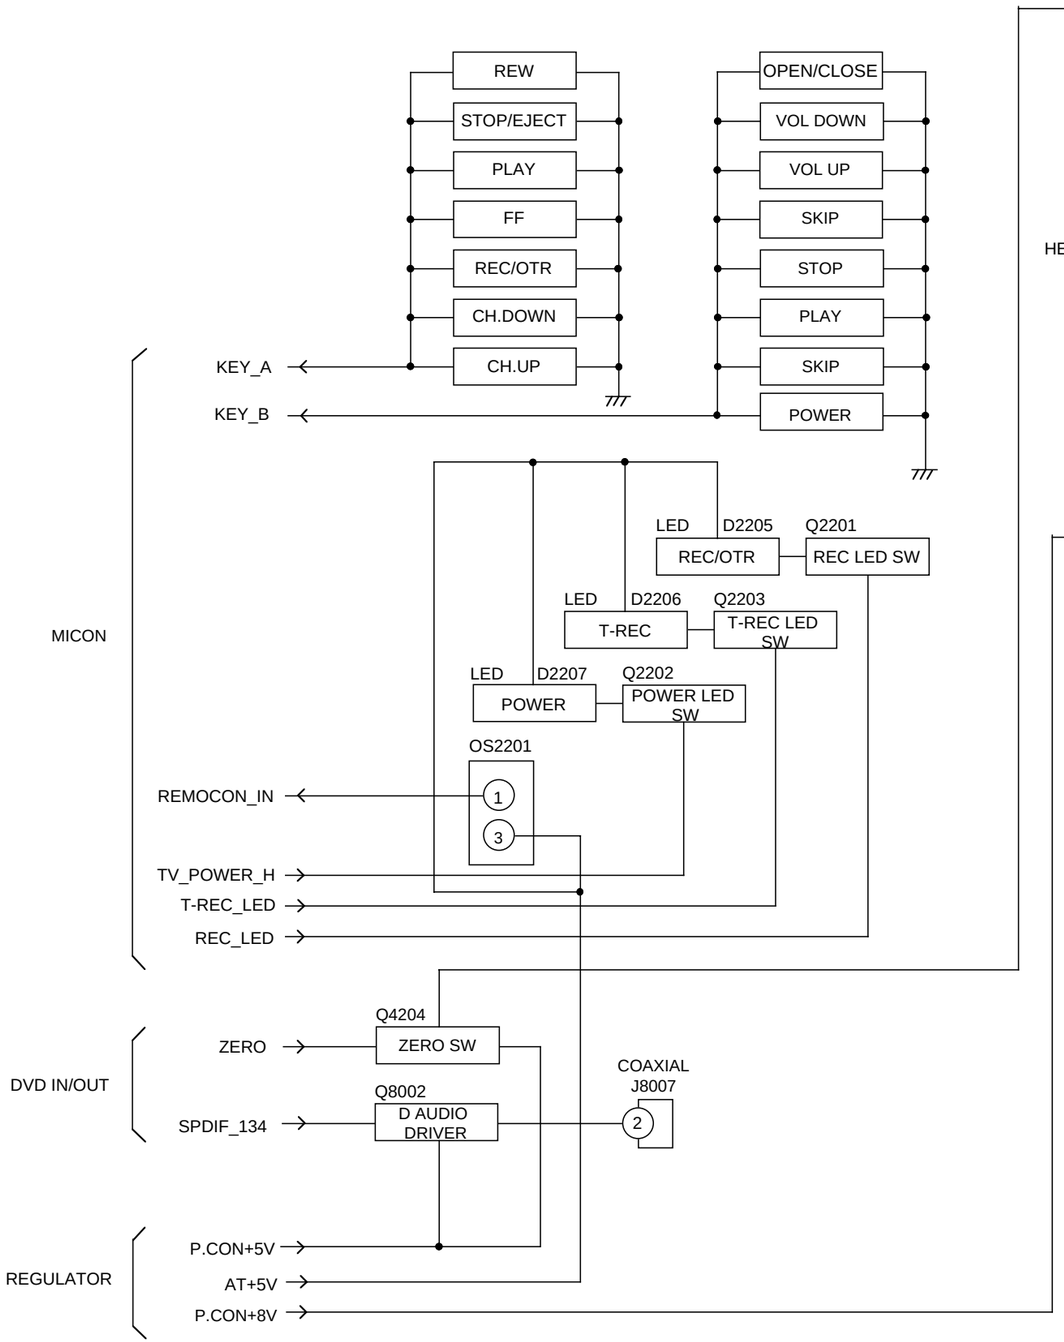

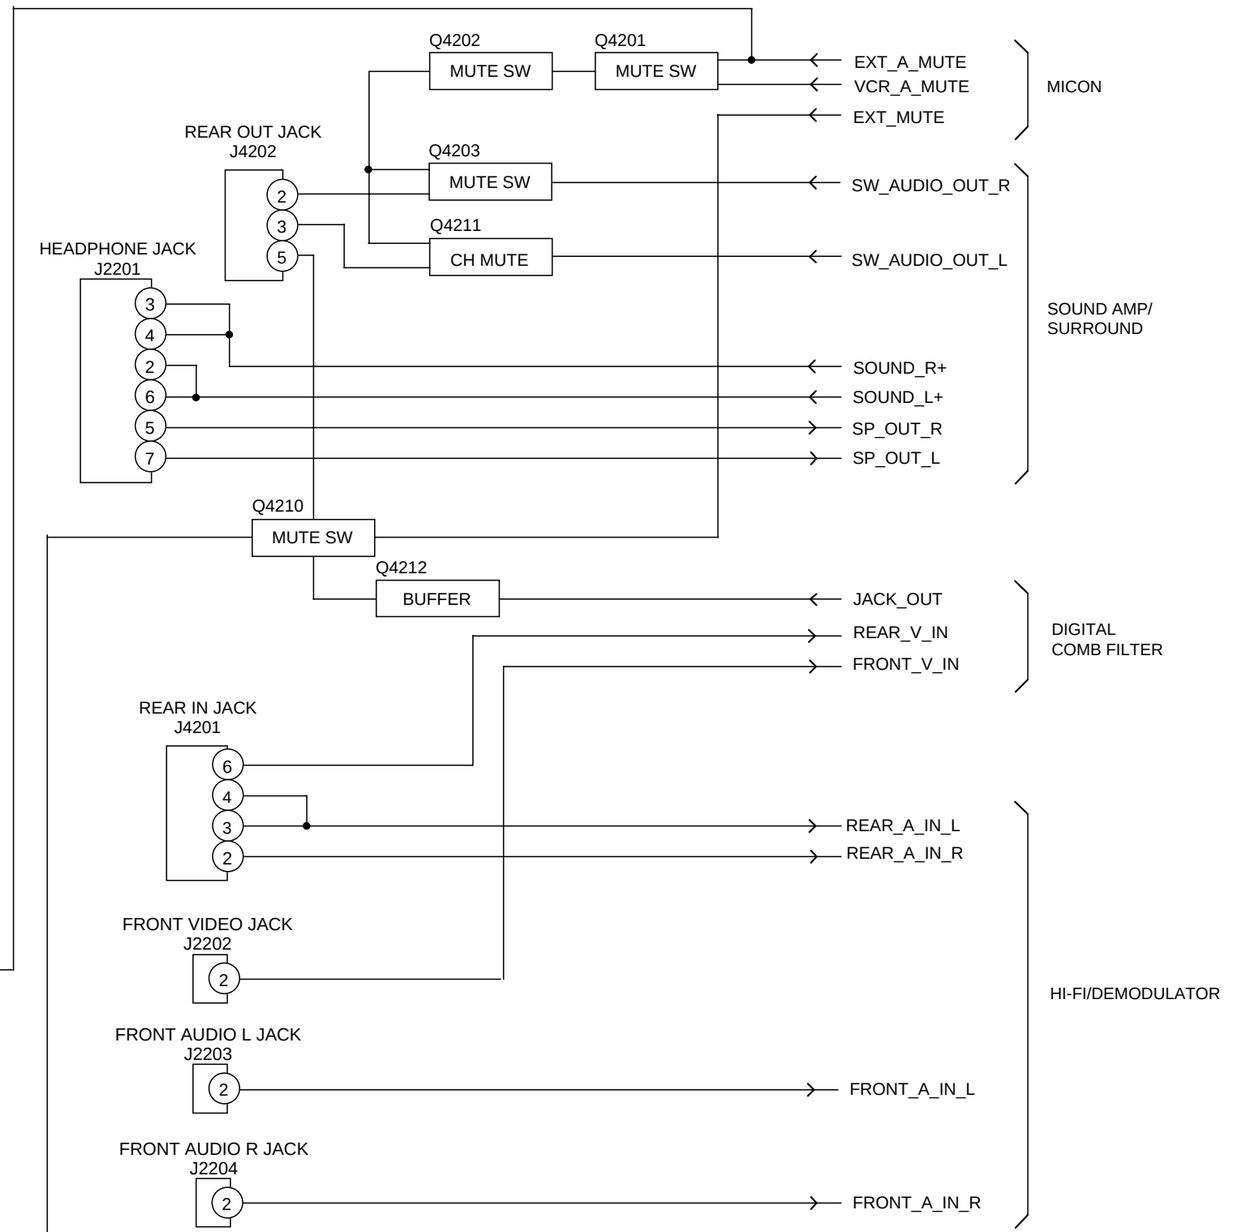

CHROMA/IF BLOCK DIAGRAM

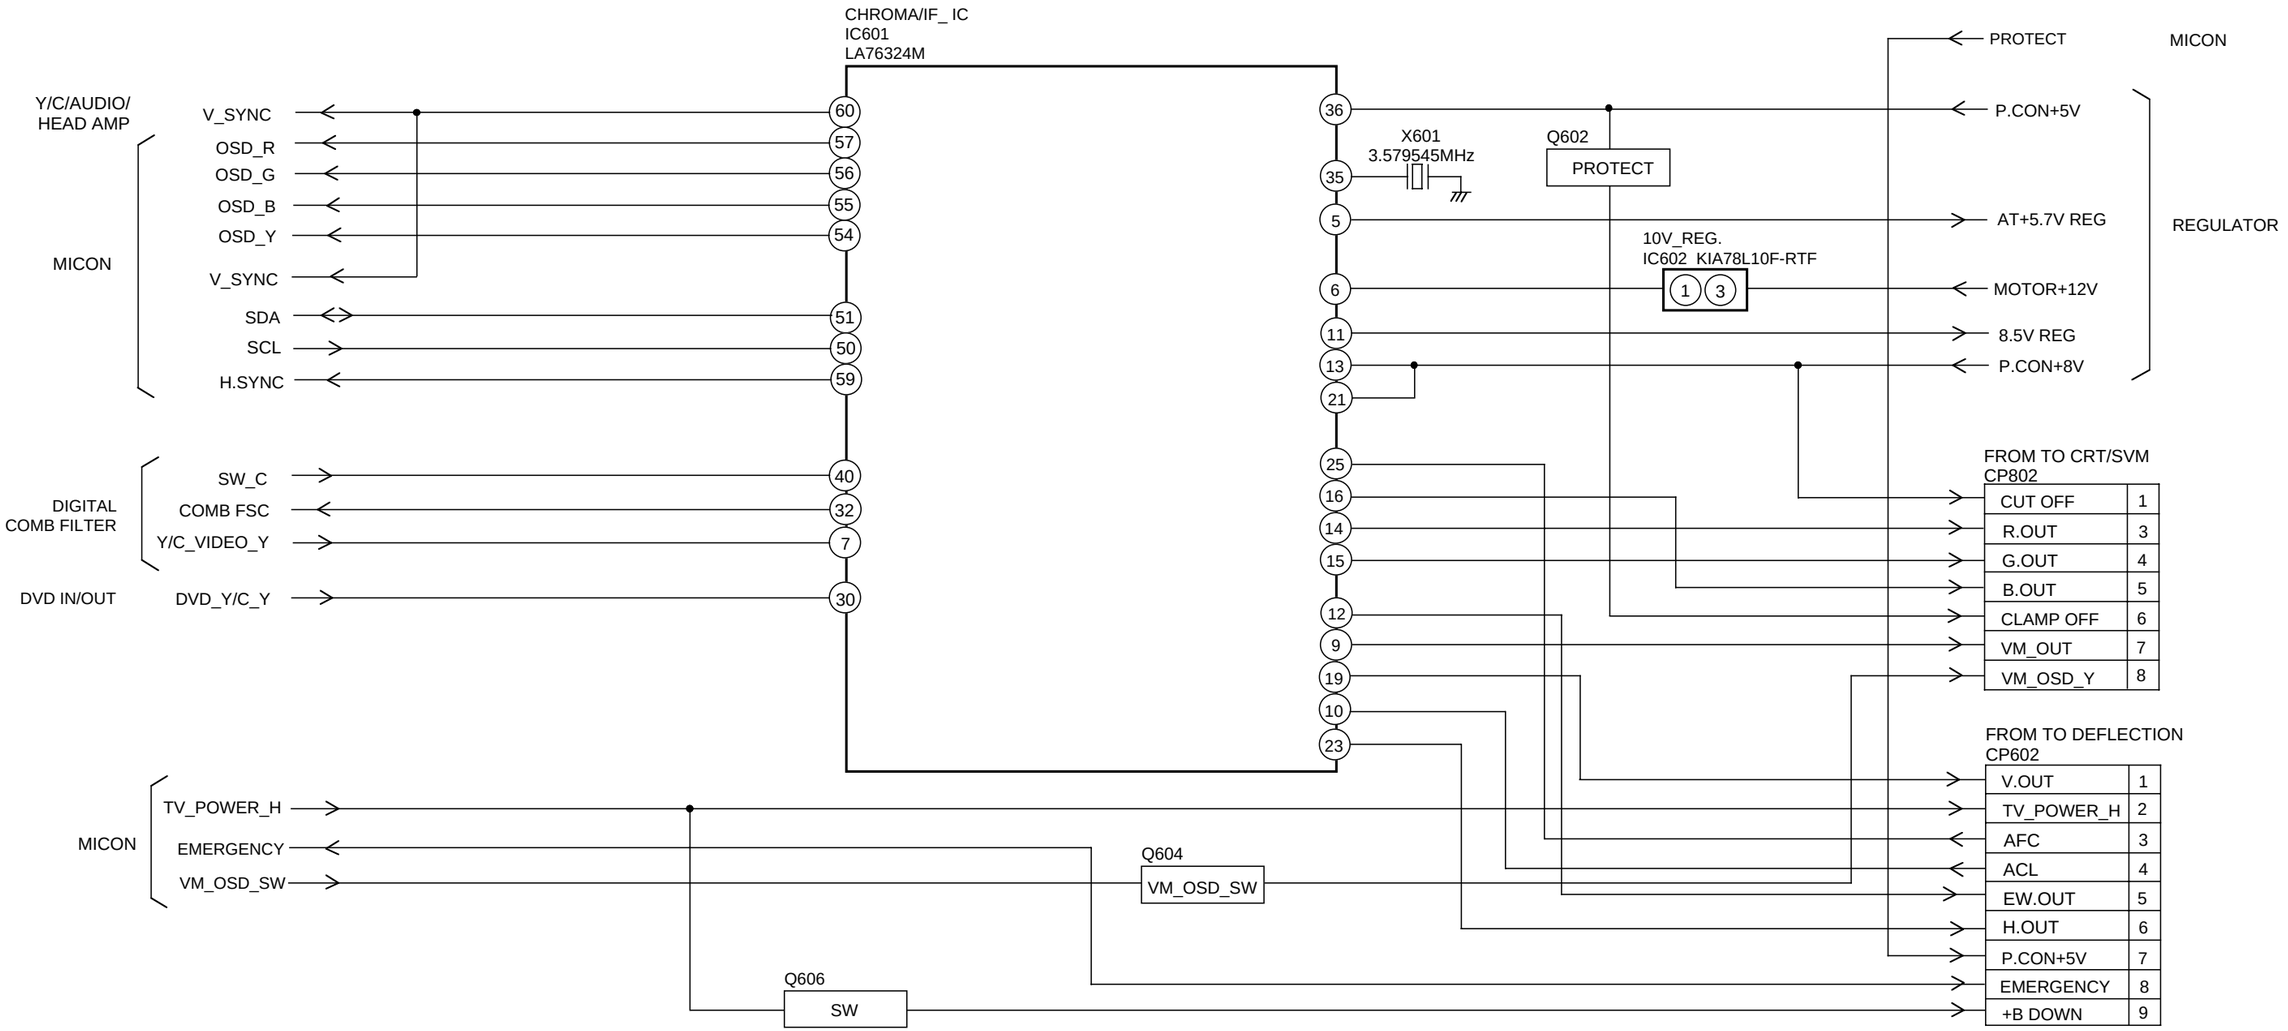

SOUND AMP/SURROUND BLOCK DIAGRAM

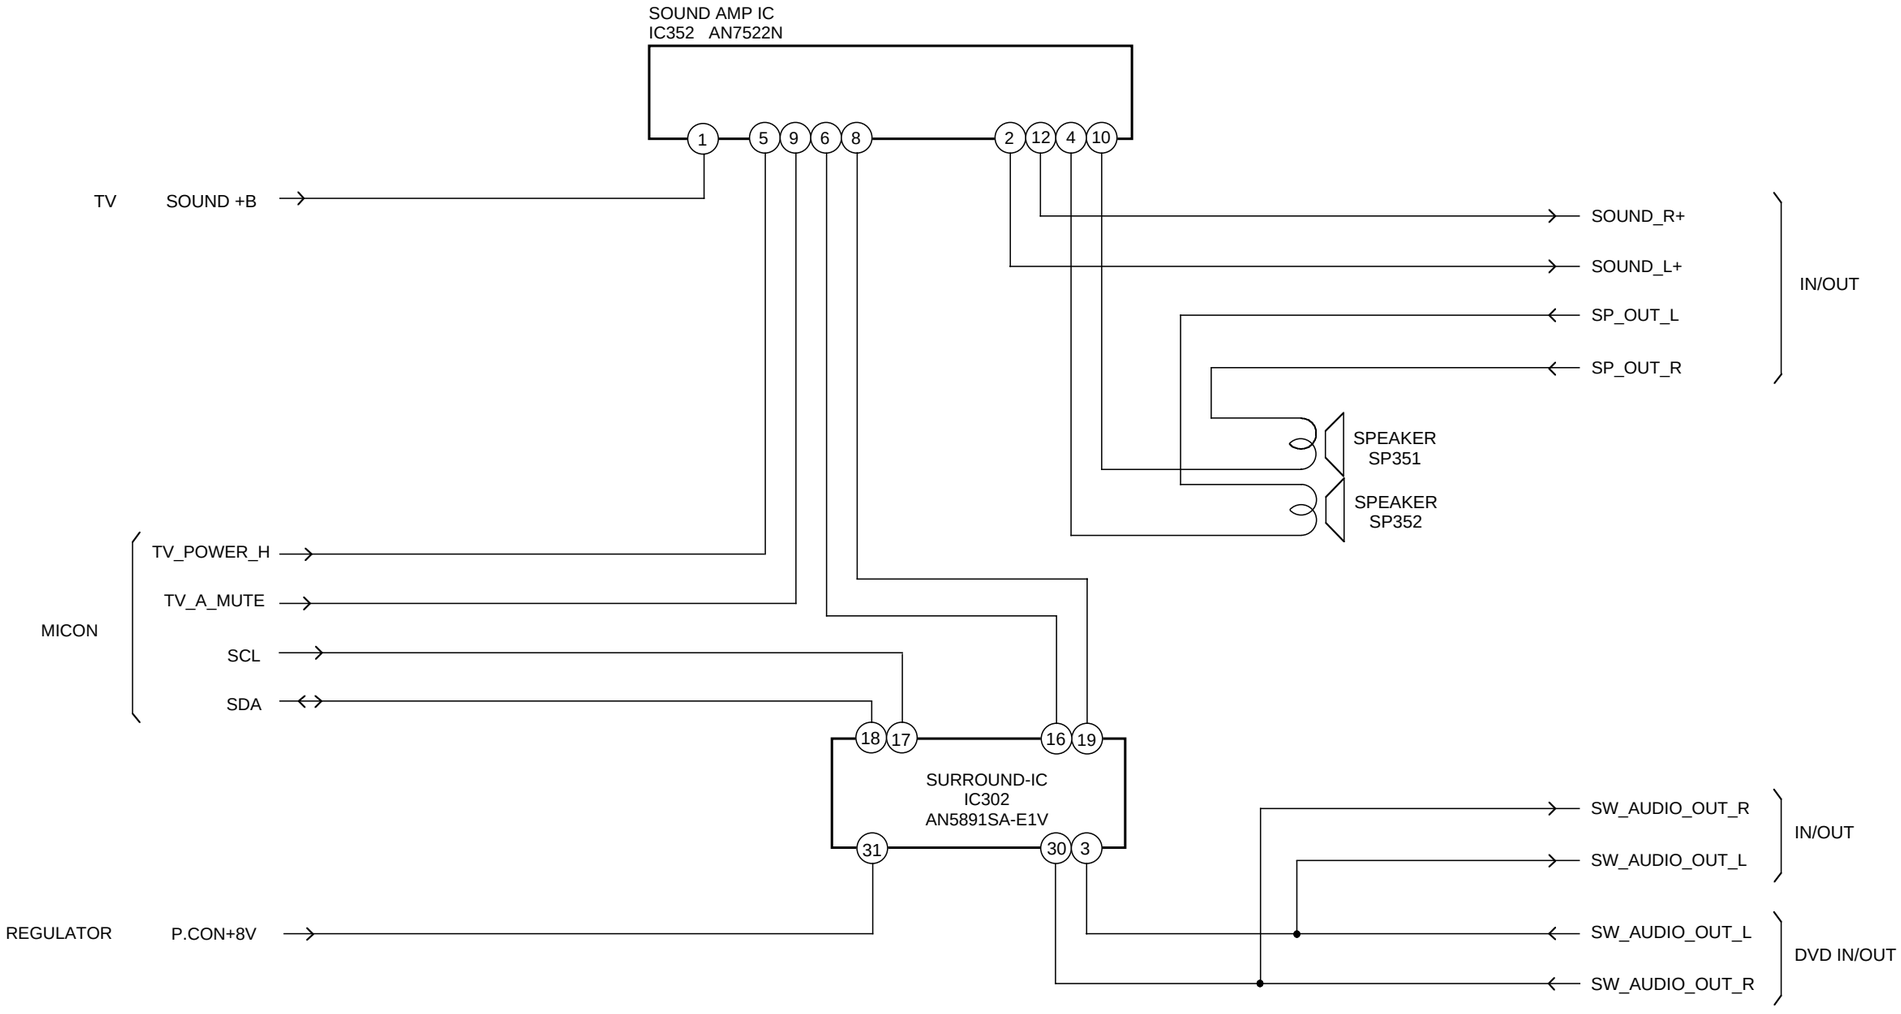

Hi-Fi/DEMODULATOR BLOCK DIAGRAM

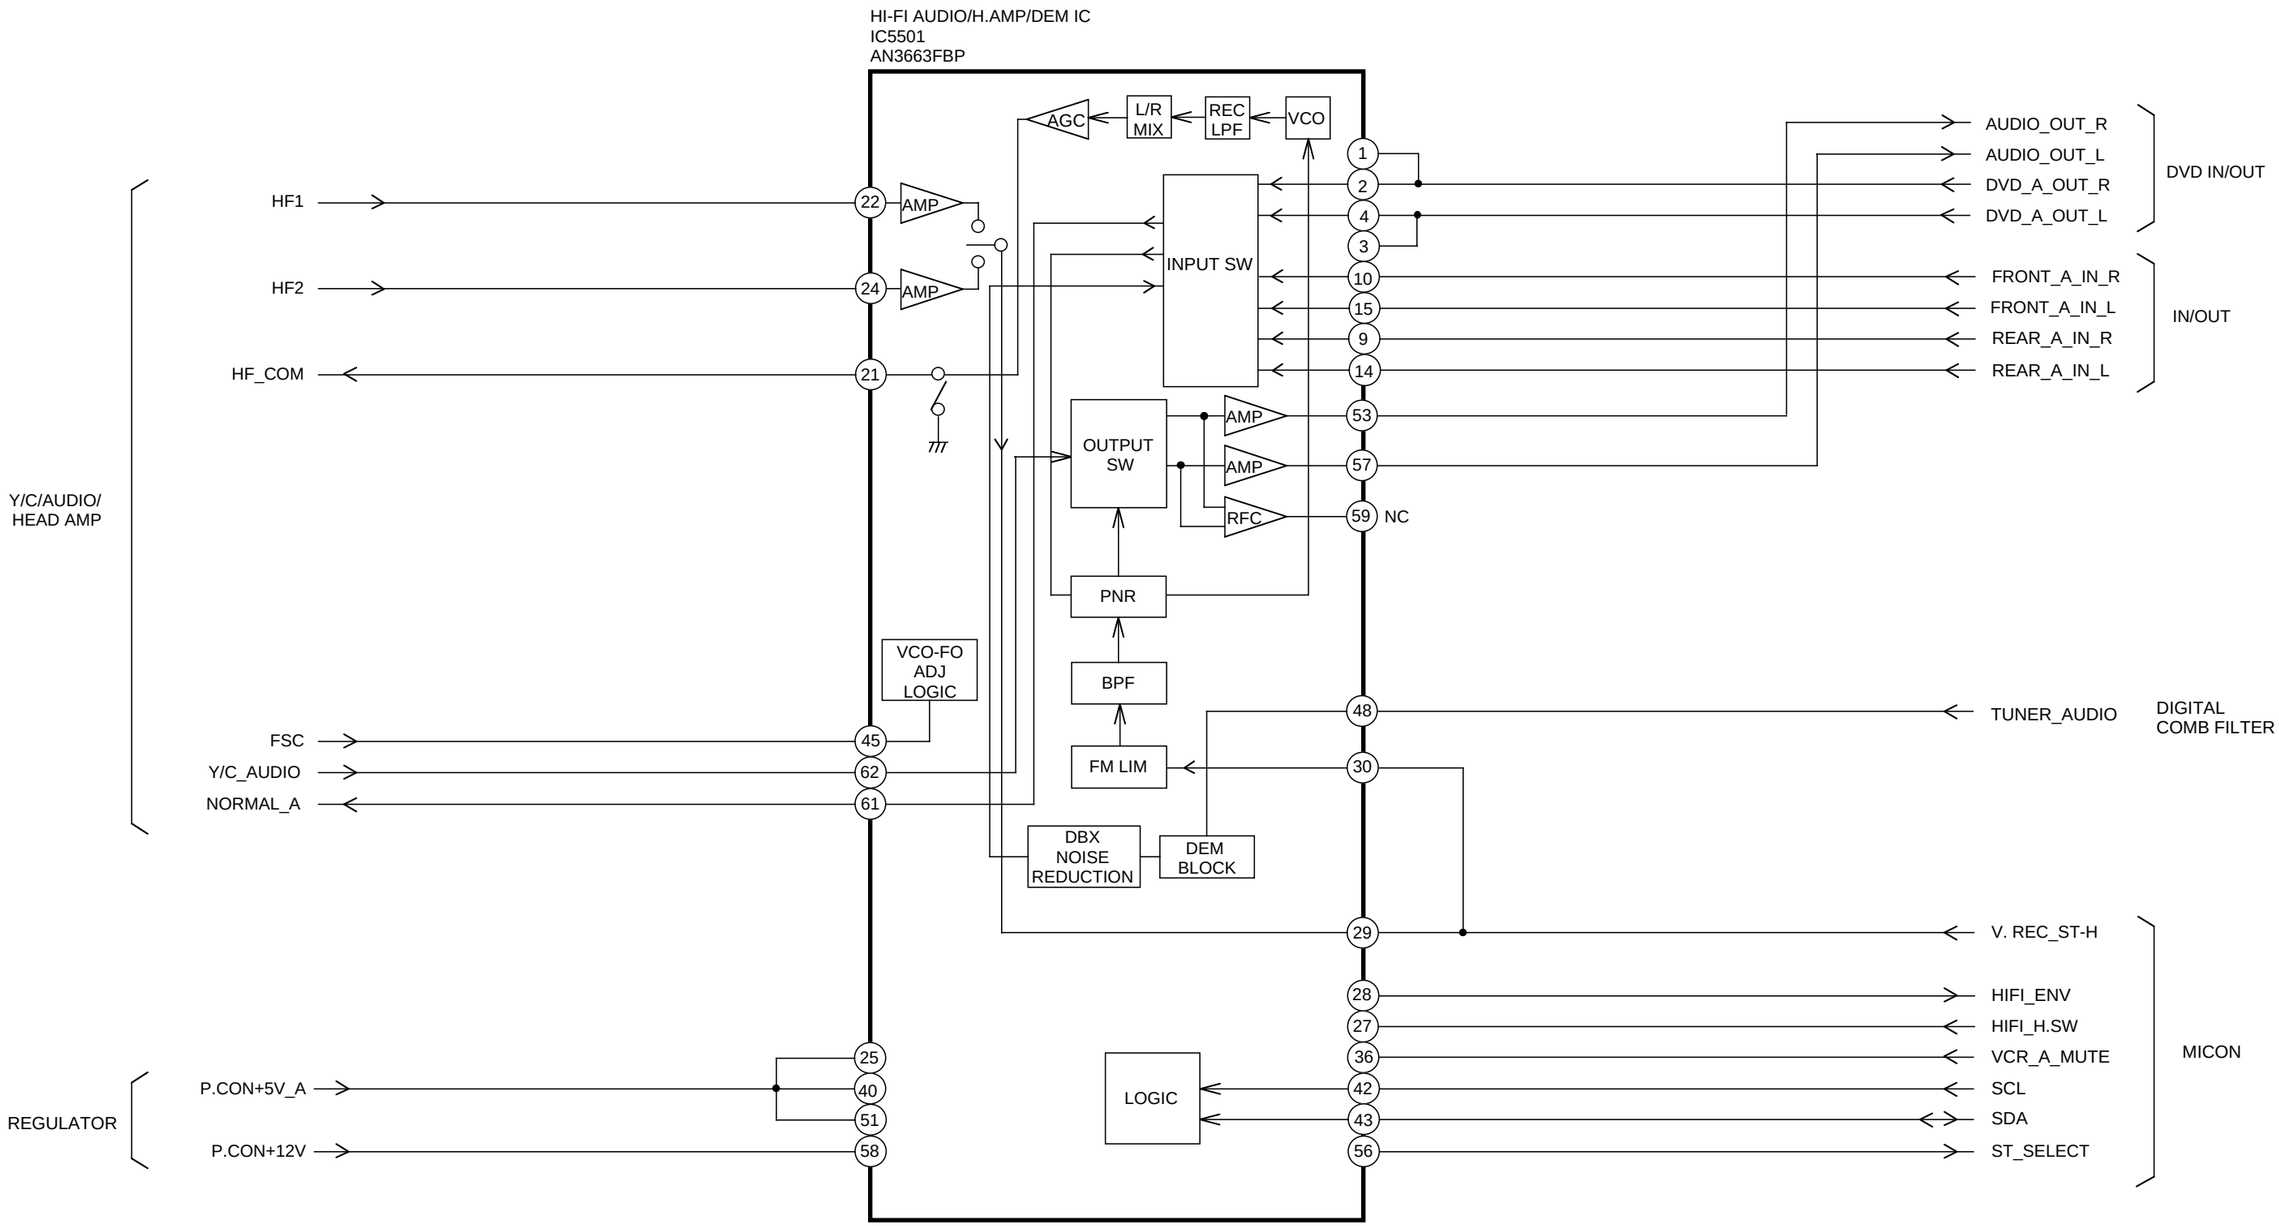

DIGITAL COMB FILTER BLOCK DIAGRAM

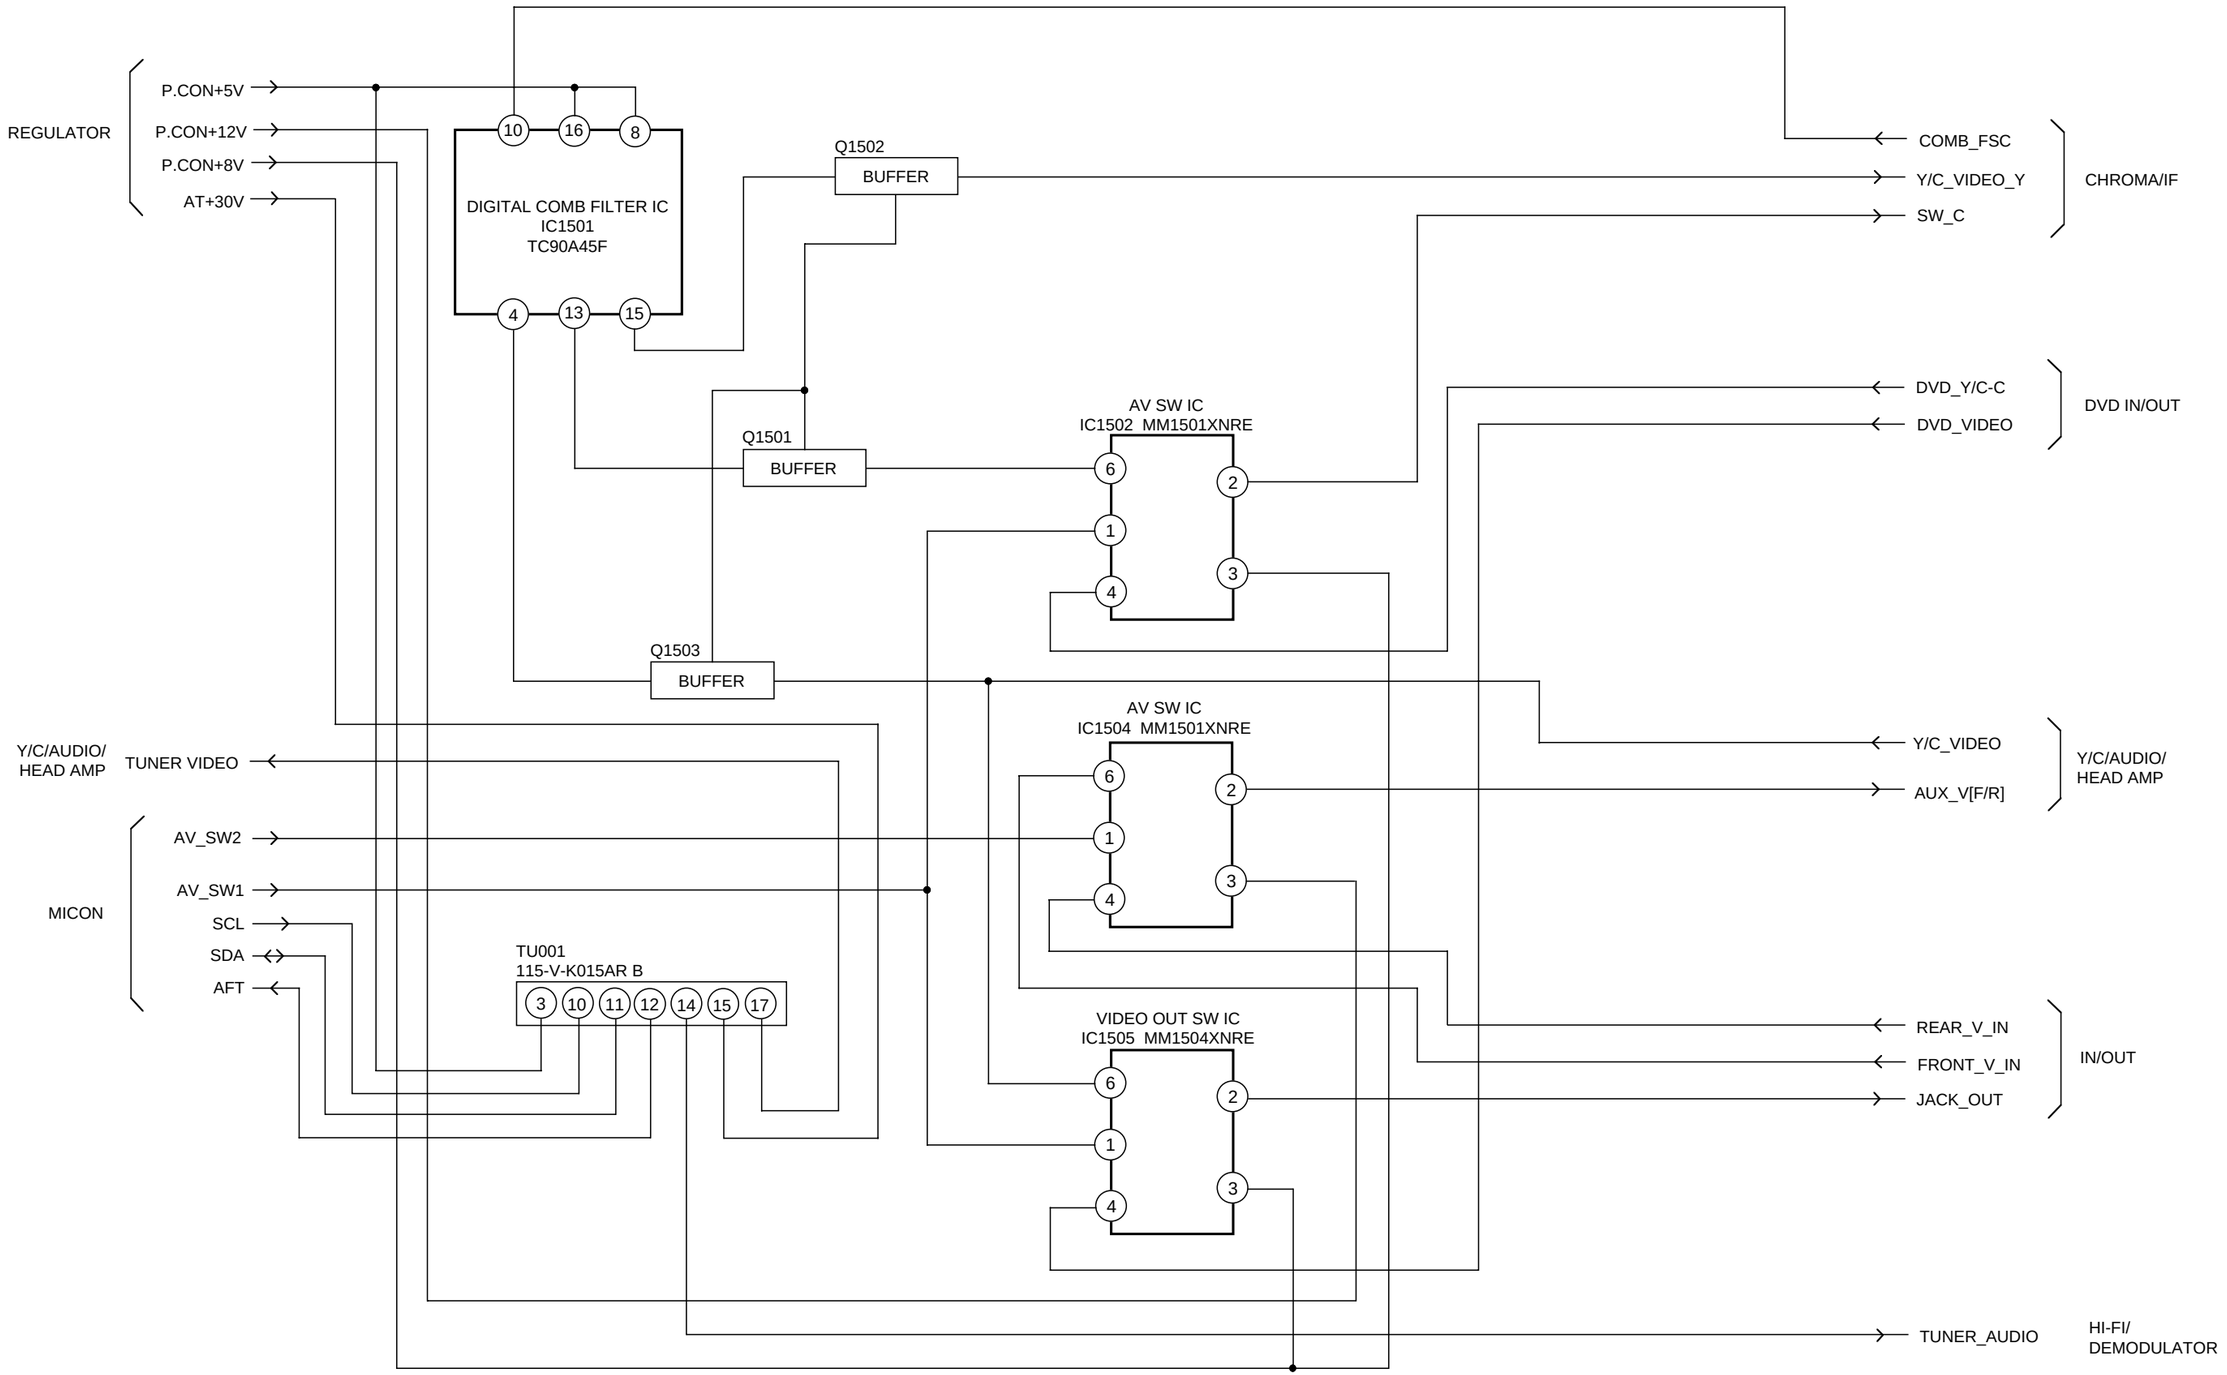

DVD IN/OUT BLOCK DIAGRAM
(MW27FN1(-R))

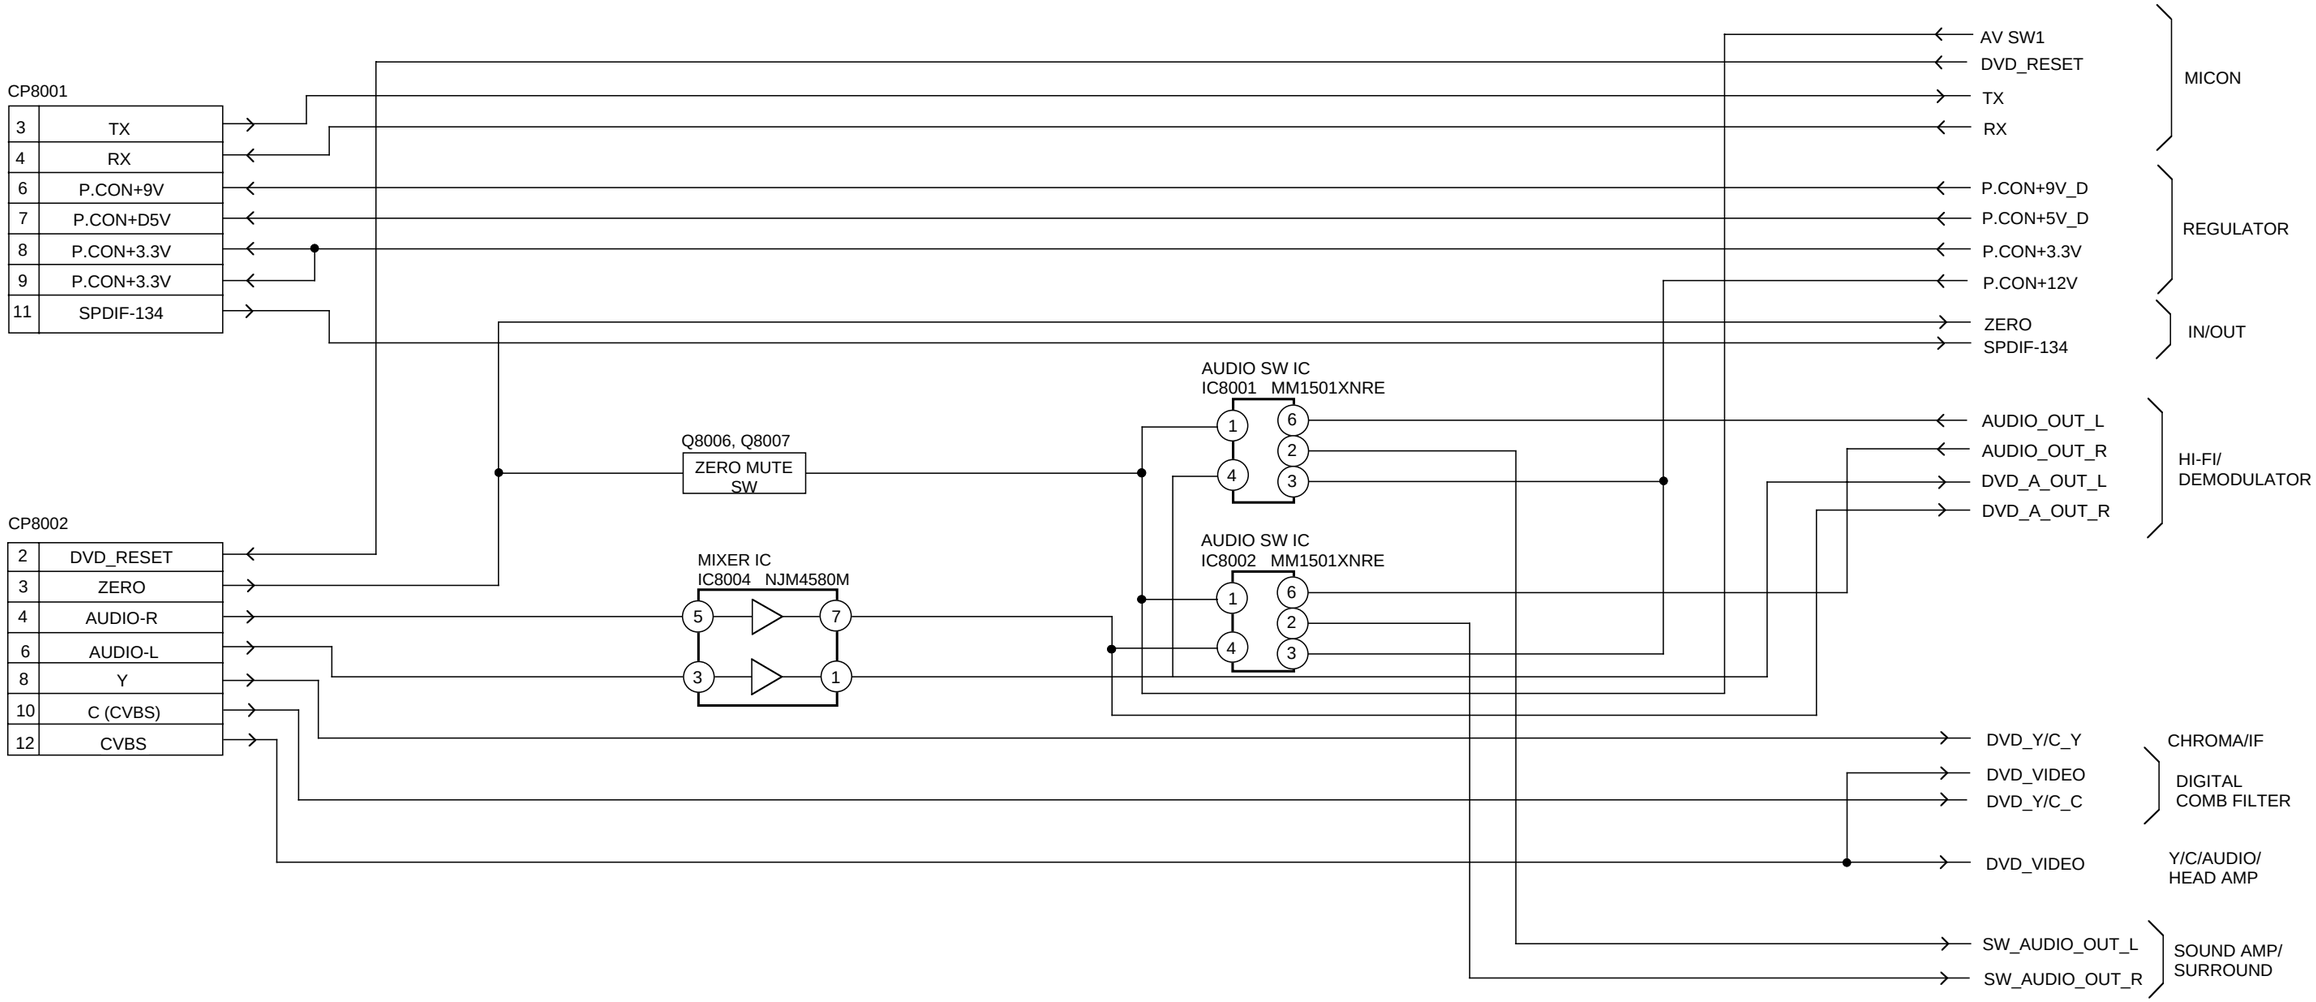

DVD IN/OUT BLOCK DIAGRAM
(MW27FN1C(-R))

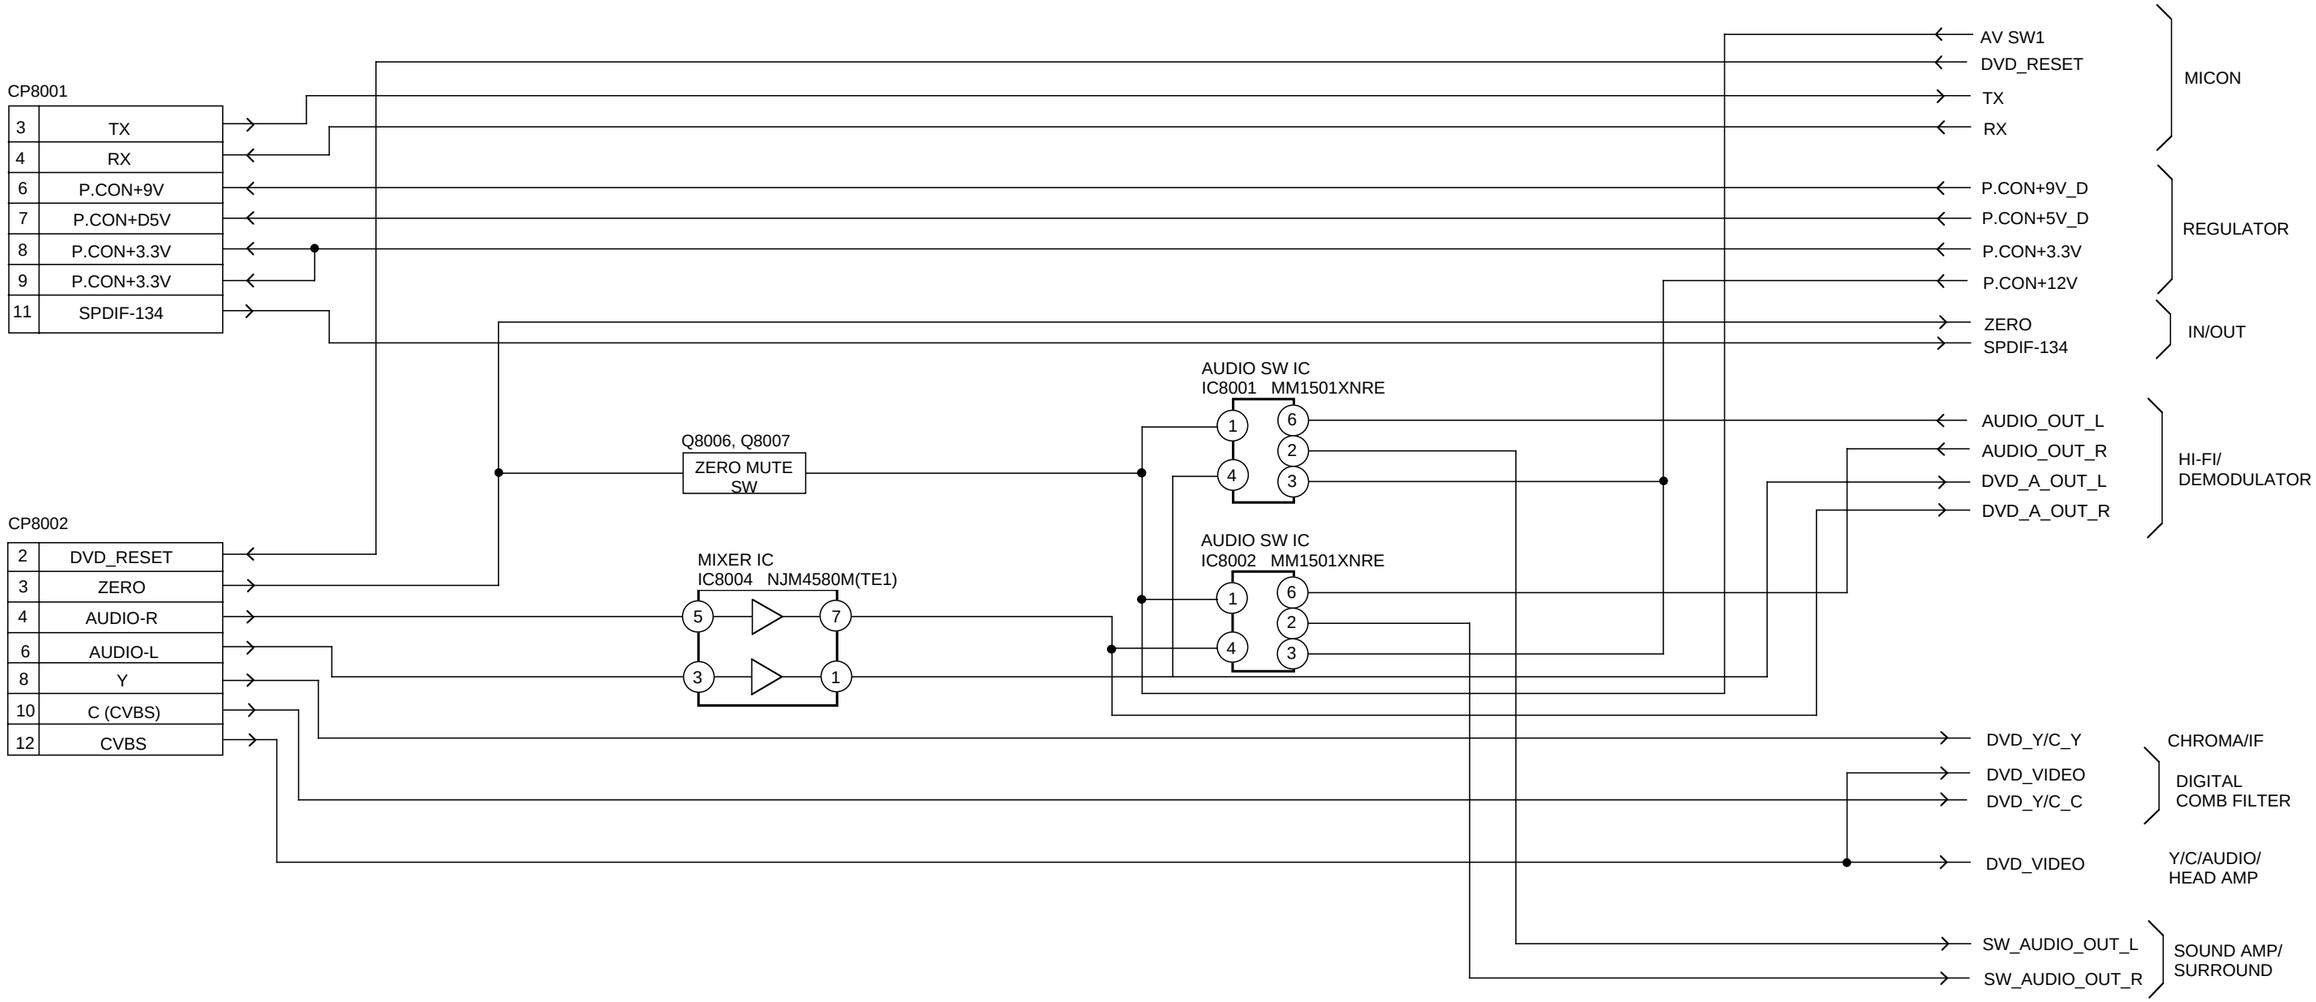

REGULATOR BLOCK DIAGRAM

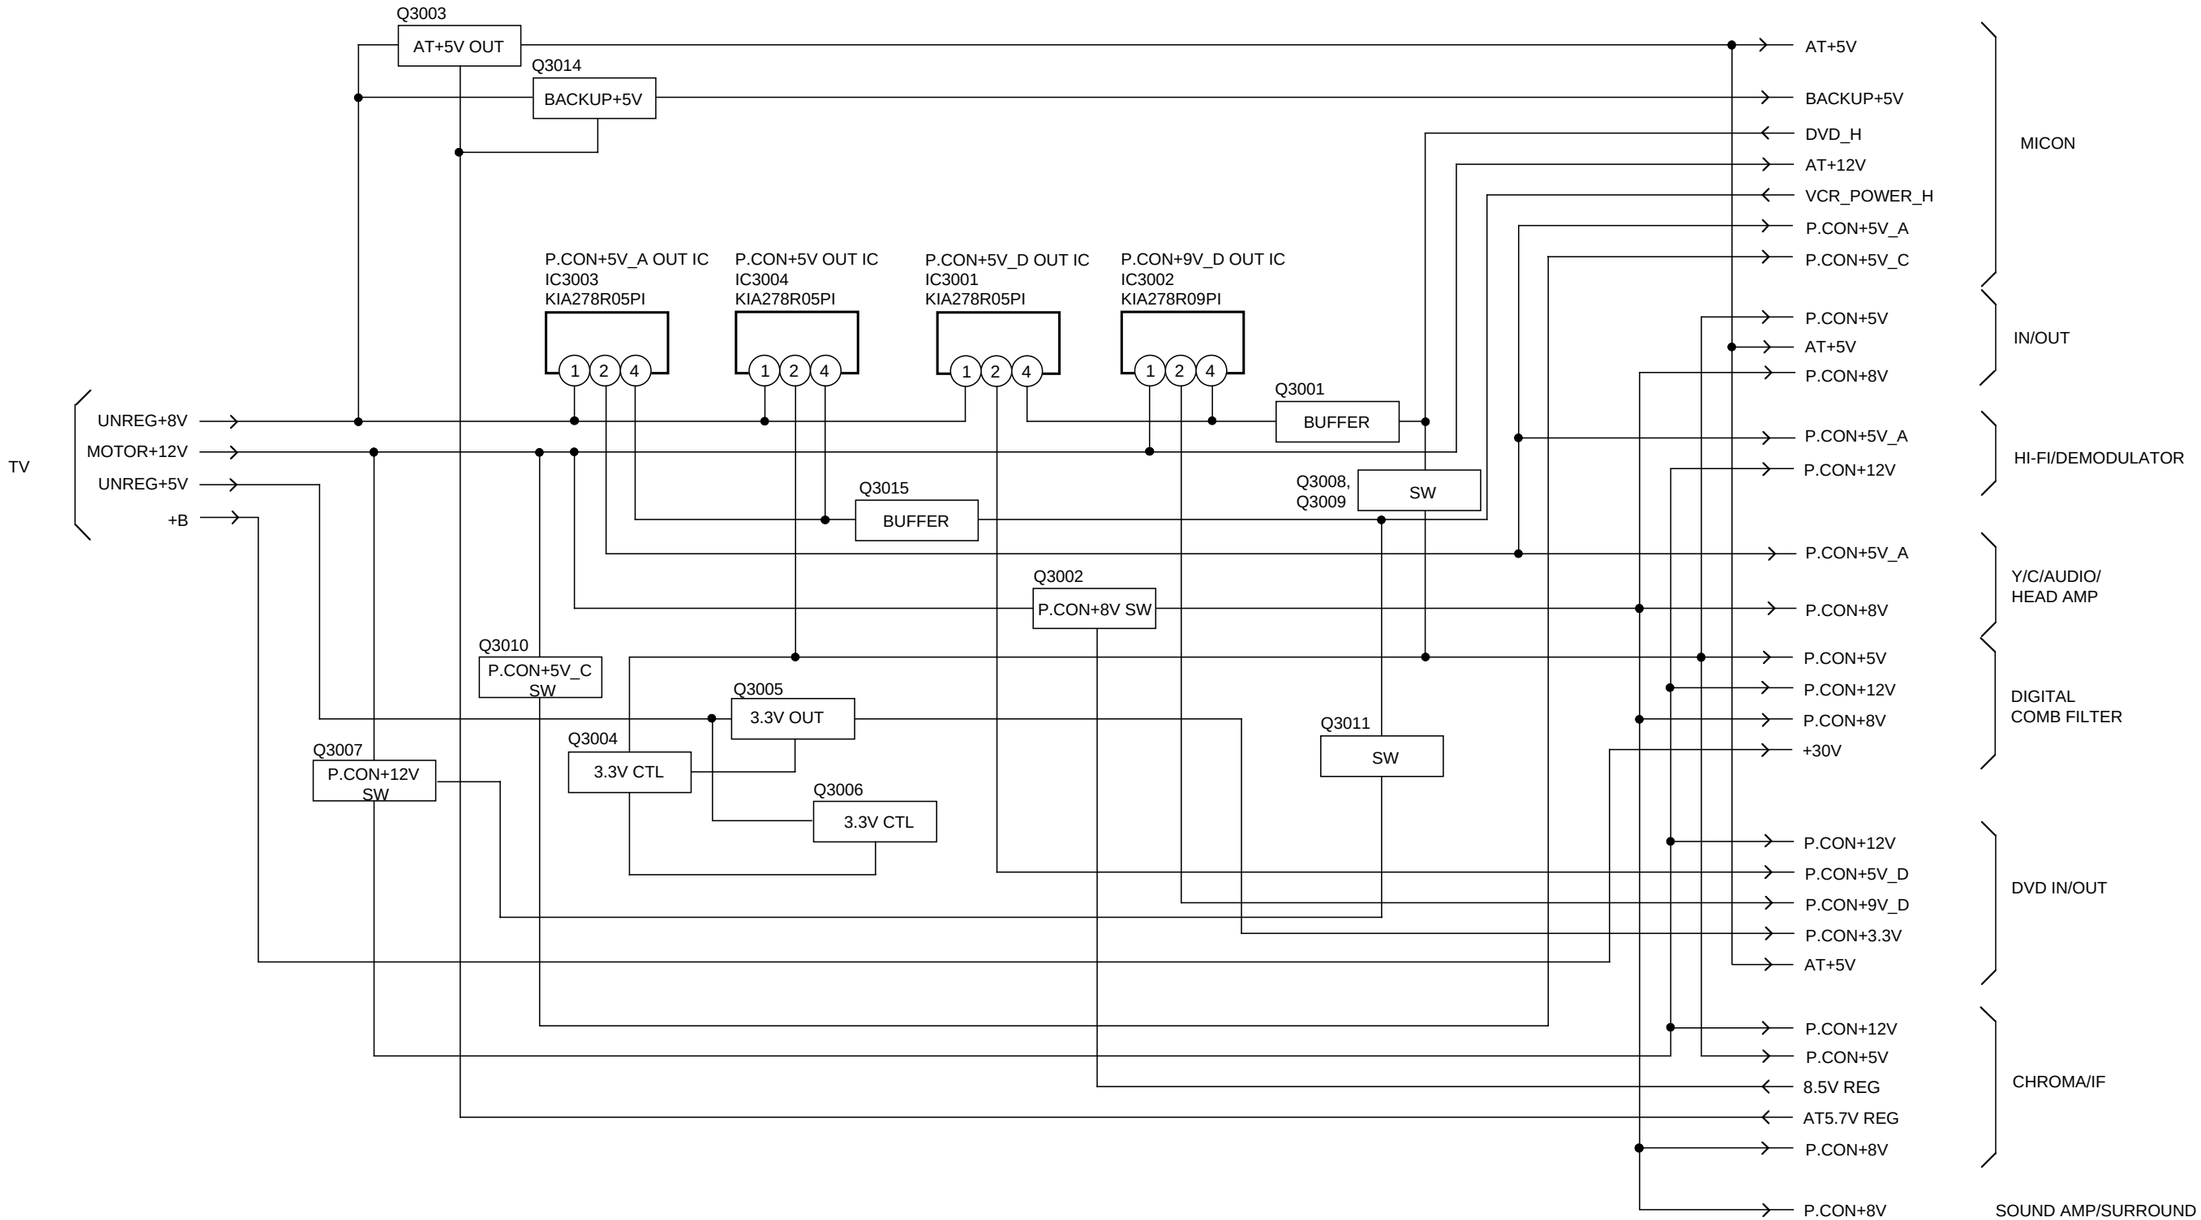

TV BLOCK DIAGRAM

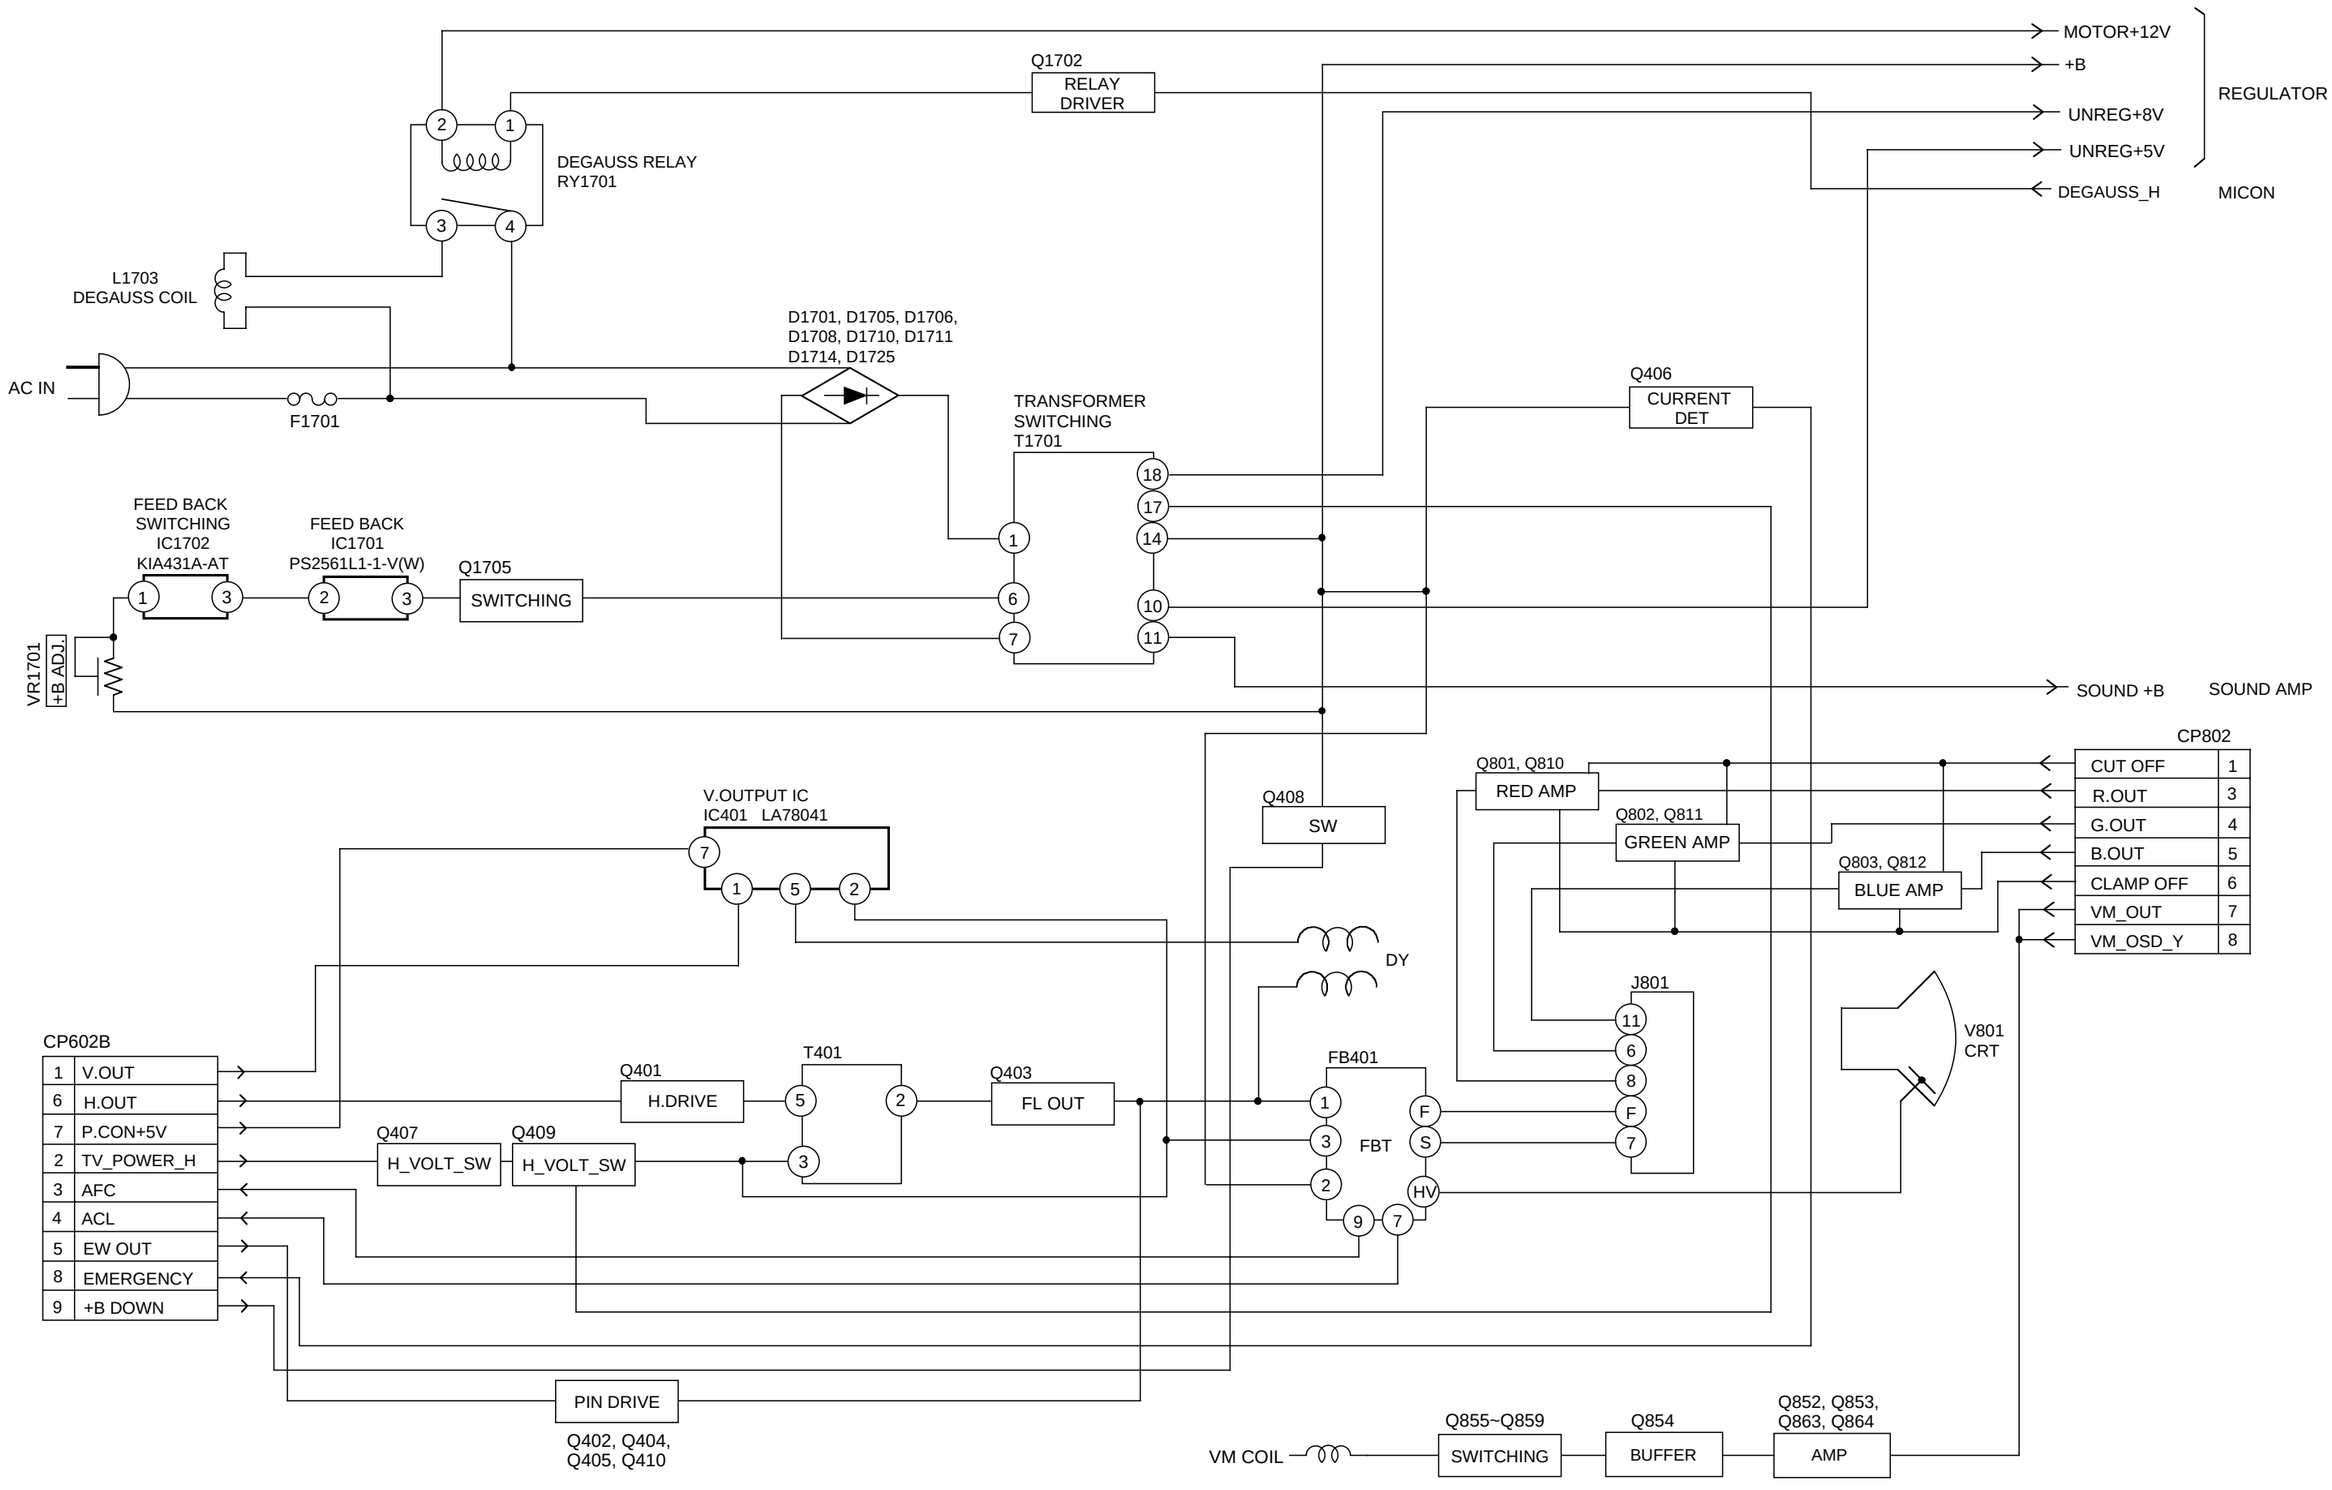

PRINTED CIRCUIT BOARDS

DVD (TOP SIDE)

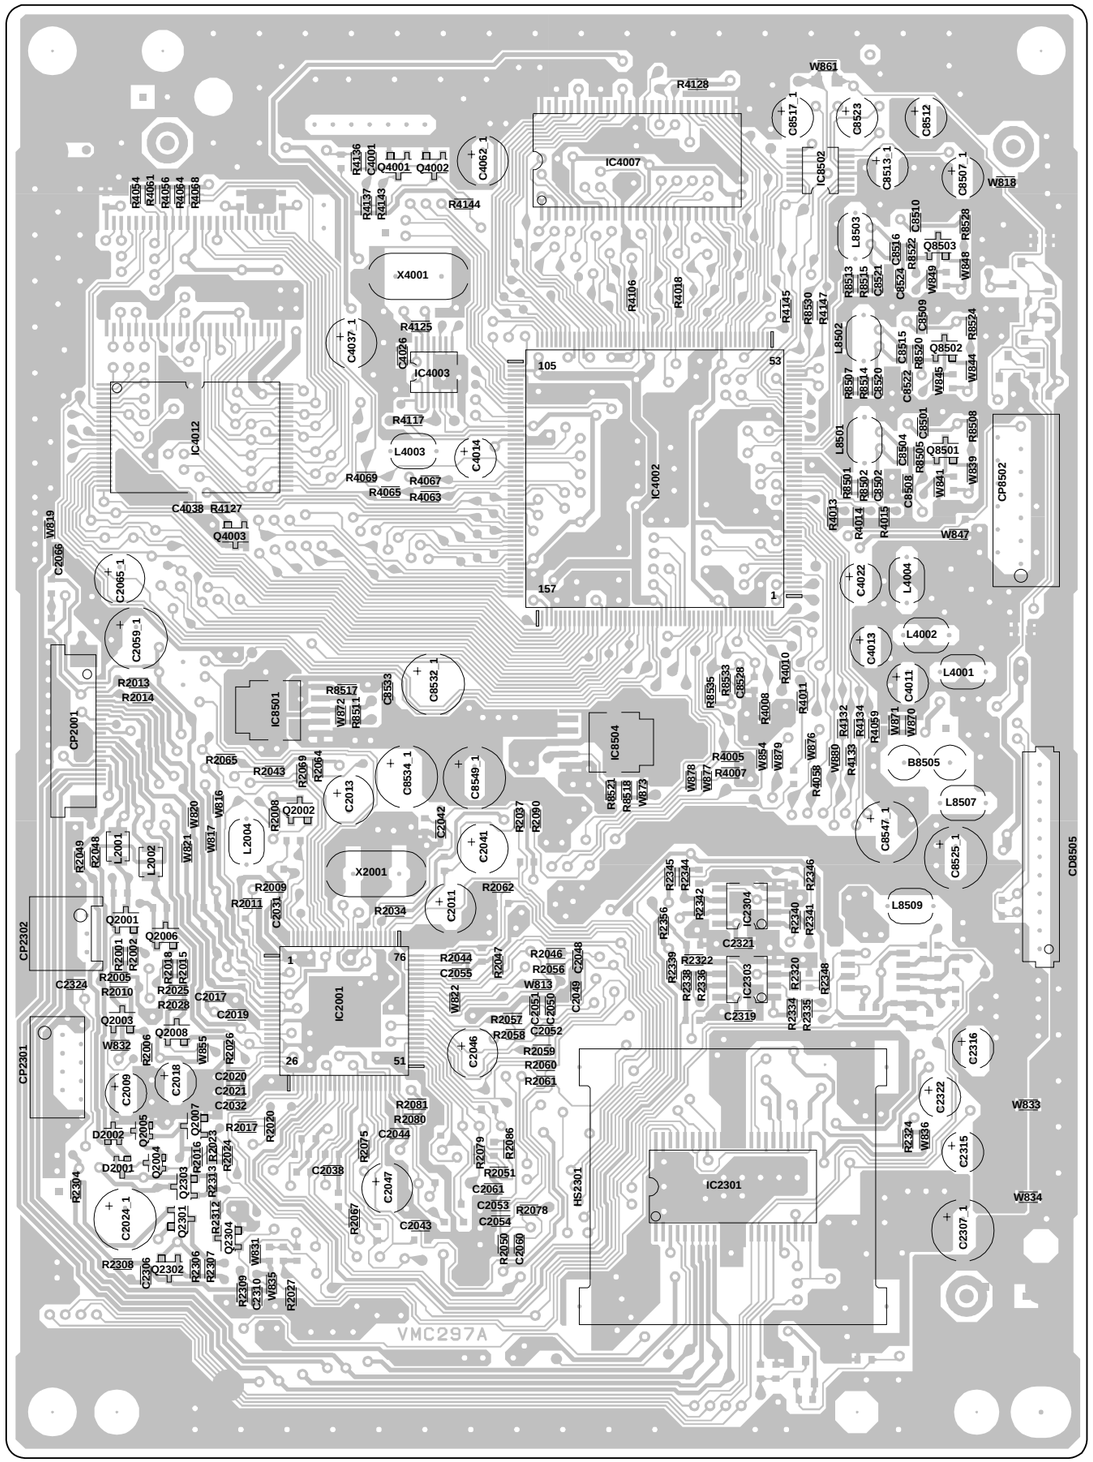

DVD (BOTTOM SIDE)

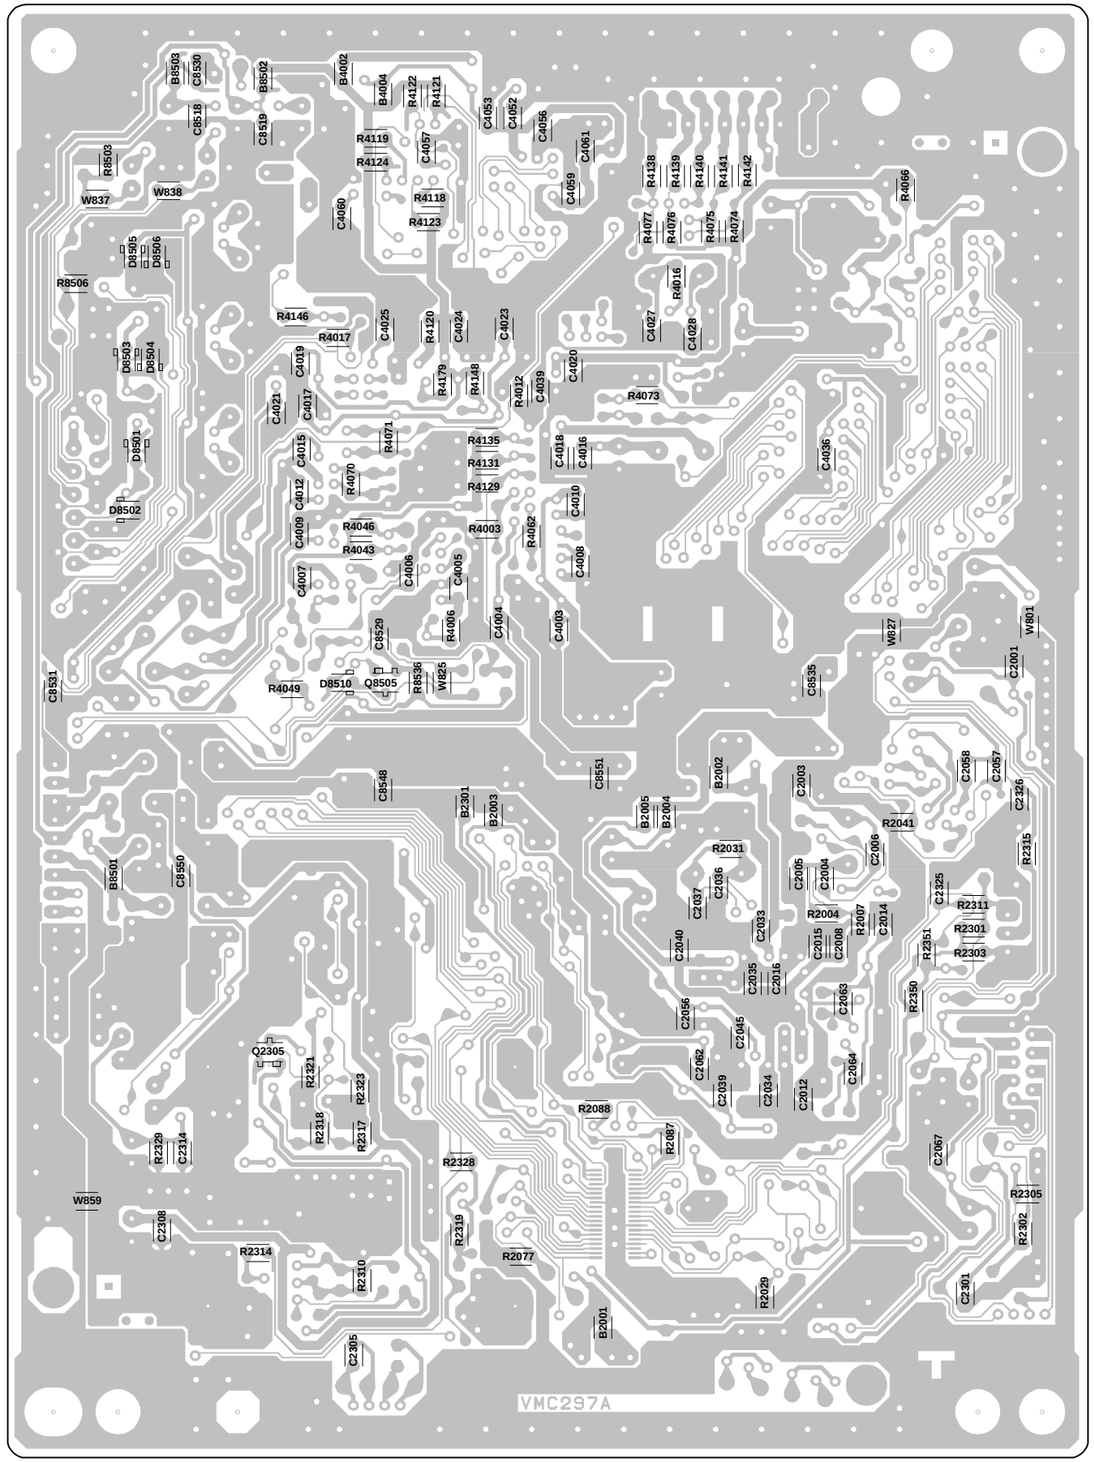

PRINTED CIRCUIT BOARDS
VCR (INSERTED PARTS)
SOLDER SIDE
(MW27FN1(-R))

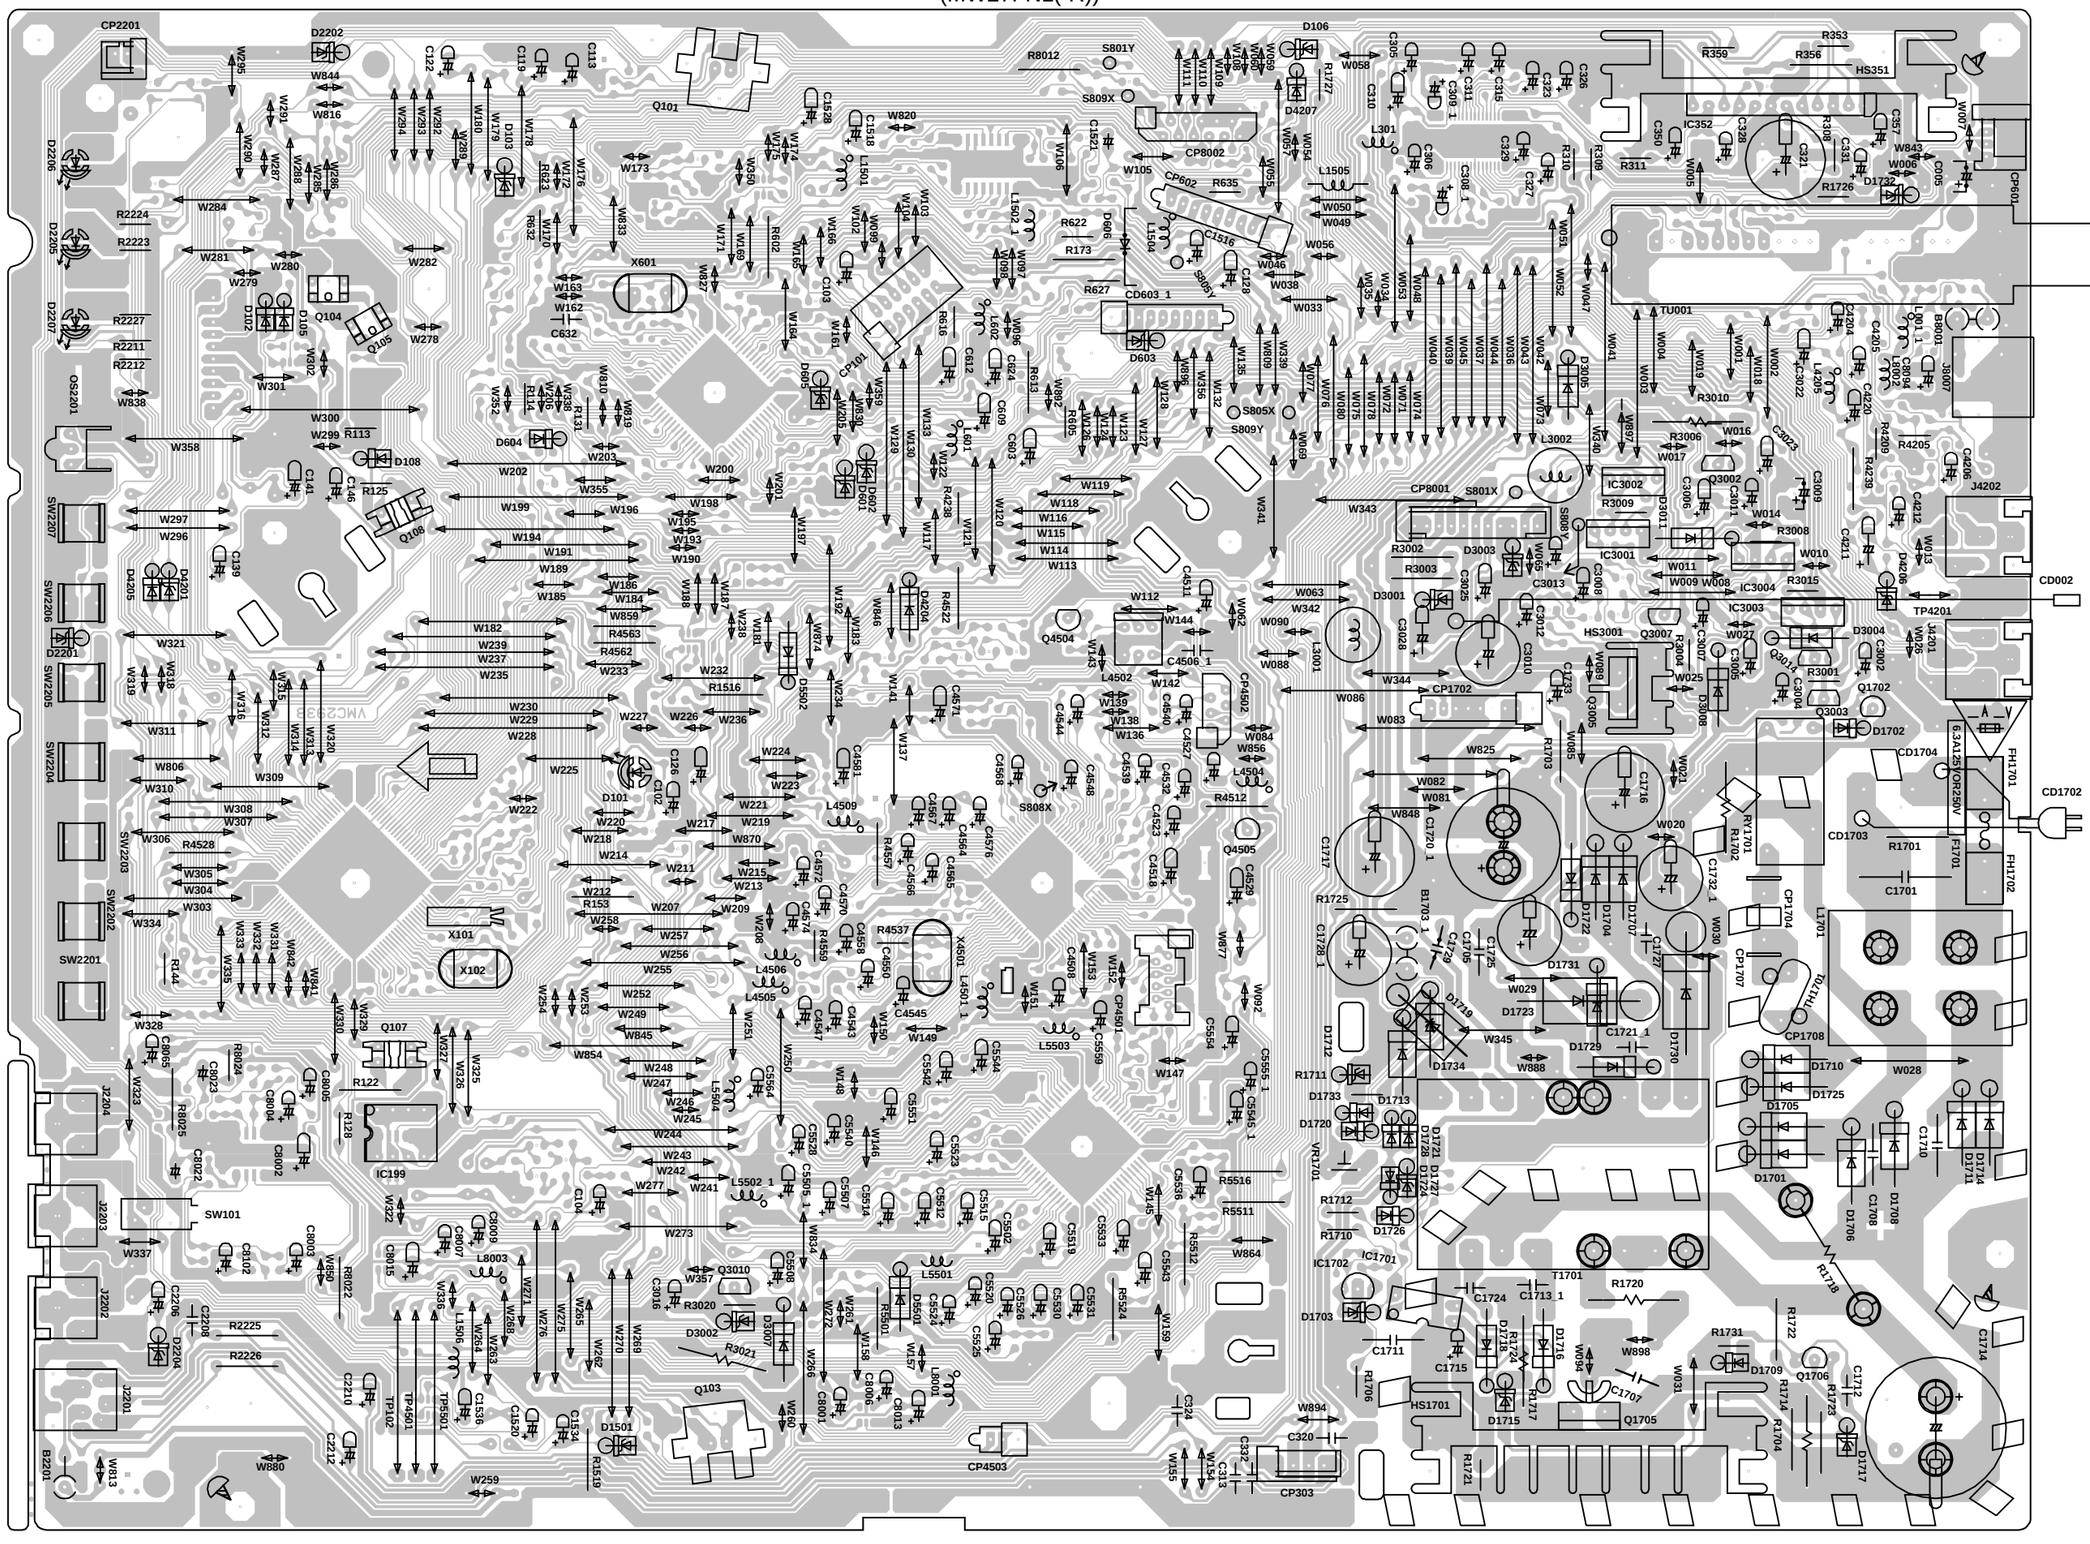
CP2201
D2202
W844
W816
W295
W291
W290
W287
W288
W285
W286
W284
W283
W292
W293
W294
C122
C119
C113
W180
W179
W178
D103
W176
W172
R623
W173
W833
W832
W831
W830
W829
W828
W827
W826
W825
W824
W823
W822
W821
W820
W819
W818
W817
W816
W815
W814
W813
W812
W811
W810
W809
W808
W807
W806
W805
W804
W803
W802
W801
W800
W799
W798
W797
W796
W795
W794
W793
W792
W791
W790
W789
W788
W787
W786
W785
W784
W783
W782
W781
W780
W779
W778
W777
W776
W775
W774
W773
W772
W771
W770
W769
W768
W767
W766
W765
W764
W763
W762
W761
W760
W759
W758
W757
W756
W755
W754
W753
W752
W751
W750
W749
W748
W747
W746
W745
W744
W743
W742
W741
W740
W739
W738
W737
W736
W735
W734
W733
W732
W731
W730
W729
W728
W727
W726
W725
W724
W723
W722
W721
W720
W719
W718
W717
W716
W715
W714
W713
W712
W711
W710
W709
W708
W707
W706
W705
W704
W703
W702
W701
W700
W699
W698
W697
W696
W695
W694
W693
W692
W691
W690
W689
W688
W687
W686
W685
W684
W683
W682
W681
W680
W679
W678
W677
W676
W675
W674
W673
W672
W671
W670
W669
W668
W667
W666
W665
W664
W663
W662
W661
W660
W659
W658
W657
W656
W655
W654
W653
W652
W651
W650
W649
W648
W647
W646
W645
W644
W643
W642
W641
W640
W639
W638
W637
W636
W635
W634
W633
W632
W631
W630
W629
W628
W627
W626
W625
W624
W623
W622
W621
W620
W619
W618
W617
W616
W615
W614
W613
W612
W611
W610
W609
W608
W607
W606
W605
W604
W603
W602
W601
W600
W599
W598
W597
W596
W595
W594
W593
W592
W591
W590
W589
W588
W587
W586
W585
W584
W583
W582
W581
W580
W579
W578
W577
W576
W575
W574
W573
W572
W571
W570
W569
W568
W567
W566
W565
W564
W563
W562
W561
W560
W559
W558
W557
W556
W555
W554
W553
W552
W551
W550
W549
W548
W547
W546
W545
W544
W543
W542
W541
W540
W539
W538
W537
W536
W535
W534
W533
W532
W531
W530
W529
W528
W527
W526
W525
W524
W523
W522
W521
W520
W519
W518
W517
W516
W515
W514
W513
W512
W511
W510
W509
W508
W507
W506
W505
W504
W503
W502
W501
W500
W499
W498
W497
W496
W495
W494
W493
W492
W491
W490
W489
W488
W487
W486
W485
W484
W483
W482
W481
W480
W479
W478
W477
W476
W475
W474
W473
W472
W471
W470
W469
W468
W467
W466
W465
W464
W463
W462
W461
W460
W459
W458
W457
W456
W455
W454
W453
W452
W451
W450
W449
W448
W447
W446
W445
W444
W443
W442
W441
W440
W439
W438
W437
W436
W435
W434
W433
W432
W431
W430
W429
W428
W427
W426
W425
W424
W423
W422
W421
W420
W419
W418
W417
W416
W415
W414
W413
W412
W411
W410
W409
W408
W407
W406
W405
W404
W403
W402
W401
W400
W399
W398
W397
W396
W395
W394
W393
W392
W391
W390
W389
W388
W387
W386
W385
W384
W383
W382
W381
W380
W379
W378
W377
W376
W375
W374
W373
W372
W371
W370
W369
W368
W367
W366
W365
W364
W363
W362
W361
W360
W359
W358
W357
W356
W355
W354
W353
W352
W351
W350
W349
W348
W347
W346
W345
W344
W343
W342
W341
W340
W339
W338
W337
W336
W335
W334
W333
W332
W331
W330
W329
W328
W327
W326
W325
W324
W323
W322
W321
W320
W319
W318
W317
W316
W315
W314
W313
W312
W311
W310
W309
W308
W307
W306
W305
W304
W303
W302
W301
W300
W299
W298
W297
W296
W295
W294
W293
W292
W291
W290
W289
W288
W287
W286
W285
W284
W283
W282
W281
W280
W279
W278
W277
W276
W275
W274
W273
W272
W271
W270
W269
W268
W267
W266
W265
W264
W263
W262
W261
W260
W259
W258
W257
W256
W255
W254
W253
W252
W251
W250
W249
W248
W247
W246
W245
W244
W243
W242
W241
W240
W239
W238
W237
W236
W235
W234
W233
W232
W231
W230
W229
W228
W227
W226
W225
W224
W223
W222
W221
W220
W219
W218
W217
W216
W215
W214
W213
W212
W211
W210
W209
W208
W207
W206
W205
W204
W203
W202
W201
W200
W199
W198
W197
W196
W195
W194
W193
W192
W191
W190
W189
W188
W187
W186
W185
W184
W183
W182
W181
W180
W179
W178
W177
W176
W175
W174
W173
W172
W171
W170
W169
W168
W167
W166
W165
W164
W163
W162
W161
W160
W159
W158
W157
W156
W155
W154
W153
W152
W151
W150
W149
W148
W147
W146
W145
W144
W143
W142
W141
W140
W139
W138
W137
W136
W135
W134
W133
W132
W131
W130
W129
W128
W127
W126
W125
W124
W123
W122
W121
W120
W119
W118
W117
W116
W115
W114
W113
W112
W111
W110
W109
W108
W107
W106
W105
W104
W103
W102
W101
W100
W099
W098
W097
W096
W095
W094
W093
W092
W091
W090
W089
W088
W087
W086
W085
W084
W083
W082
W081
W080
W079
W078
W077
W076
W075
W074
W073
W072
W071
W070
W069
W068
W067
W066
W065
W064
W063
W062
W061
W060
W059
W058
W057
W056
W055
W054
W053
W052
W051
W050
W049
W048
W047
W046
W045
W044
W043
W042
W041
W040
W039
W038
W037
W036
W035
W034
W033
W032
W031
W030
W029
W028
W027
W026
W025
W024
W023
W022
W021
W020
W019
W018
W017
W016
W015
W014
W013
W012
W011
W010
W009
W008
W007
W006
W005
W004
W003
W002
W001
W000
R8012
S801Y
S809X
Q101
C1528
C1518
L1501
W820
W175
W174
W106
C1521
W105
CP8002
CP602
R635
L1505
W050
W049
W057
W054
D106
R1727
W058
C305
C310
C311
C309_1
C315
C323
C326
C329
C327
R310
R309
L301
C306
C308_1
R359
R356
R353
HS351
IC352
C350
C328
C321
R308
C331
R311
W005
W843
W006
D1732
R1726
C357
C005
CP601
W007
W284
W281
W280
W279
W282
W278
R2224
R2223
R2227
R2211
R2212
W838
W358
W300
W299
R113
D108
C141
C146
R125
Q106
W297
W296
D4205
D4201
C139
W321
W319
W318
W316
W315
W312
W311
W806
W310
W309
W308
W307
W306
R4528
W305
W304
W303
W334
W328
W323
C8005
R8025
C8023
C8004
C8002
C8022
W337
SW101
C8003
C8102
R8022
C2206
C2208
R2225
R2226
C2210
C2212
W880
W813
B2201
J2201
J2202
J2203
J2204
SW2201
SW2202
SW2203
SW2204
SW2205
SW2206
SW2207
D2201
D2206
D2205
D2207
OS2201
W302
W301
Q104
Q105
D102
D106
R2232
W1170
W833
X601
W163
W162
C632
W827
W171
W170
W169
R602
W165
W166
W102
W098
W104
W103
W097
L1502_1
R622
D606
R173
R627
CD603_1
D603
W154
C103
W161
CP101
D605
W205
W359
W839
W352
W338
W205
R114
R131
W810
W819
D604
W203
W202
W355
W199
W196
W194
W191
W189
W185
W186
W184
W859
R4563
R4562
W233
W182
W239
W237
W235
W230
W229
W228
W227
W226
W236
W232
R1516
W234
W238
W181
W874
W846
W183
W192
D5502
D4204
R4522
W198
W195
W193
W190
W200
W201
W197
D602
D601
W129
W130
W122
R4238
W117
W121
W120
W119
W118
W116
W115
W114
W113
W112
W144
C4506_1
C4511
W062
W063
W342
W090
L3001
W088
W086
W083
W825
R1703
W085
W082
W081
W848
C1720_1
C1717
R1725
B1703_1
C1728_1
C1729
C1705
C1725
W029
D1723
D1731
D1719
W345
D1734
W888
D1729
C1721_1
D1730
D1712
R1711
D1733
D1713
D1720
VR1701
R1712
R1710
D1726
IC1702
IC1701
T1701
R1720
C1724
C1713_1
D1703
C1711
C1715
R1706
HS1701
D1715
R1718
R1724
D1718
R1717
D1716
W094
C1707
Q1705
W898
W894
C320
CP303
W1355
W154
C313
C324
W1356
CP4503
C4532
C4527
C4523
C4518
L4504
R4512
Q4505
C4529
W877
W092
C5554
C5555_1
C5545_1
W147
C5559
CP4501
W152
W153
C4608
L5503
C5544
C5542
C5551
W148
W146
C5540
C5523
C5538
R5516
R5511
W864
W345
C5543
R5512
C5533
C5519
C5502
C5515
C5512
C5514
C5507
C5505_1
W834
C5508
C5530
C5531
R5524
W139
C5520
C5526
C5524
C5525
R5501
D5503
L5501
L8001
C8013
C8006
W158
W157
W138
W136
W137
C4581
C4568
C4548
S808X
C4539
C4532
C4523
C4518
C4567
C4564
C4576
C4566
C4565
R4557
C4572
C4570
C4558
C4550
C4674
R4559
R4537
X4501
L4501_1
L4506
L4505
C4547
C4543
W150
C4545
W149
W151
W153
W152
C4501
C4554
C5559
C5555_1
C5545_1
W147

PRINTED CIRCUIT BOARDS
VCR (INSERTED PARTS)
SOLDER SIDE
(MW27FN1C(-R))

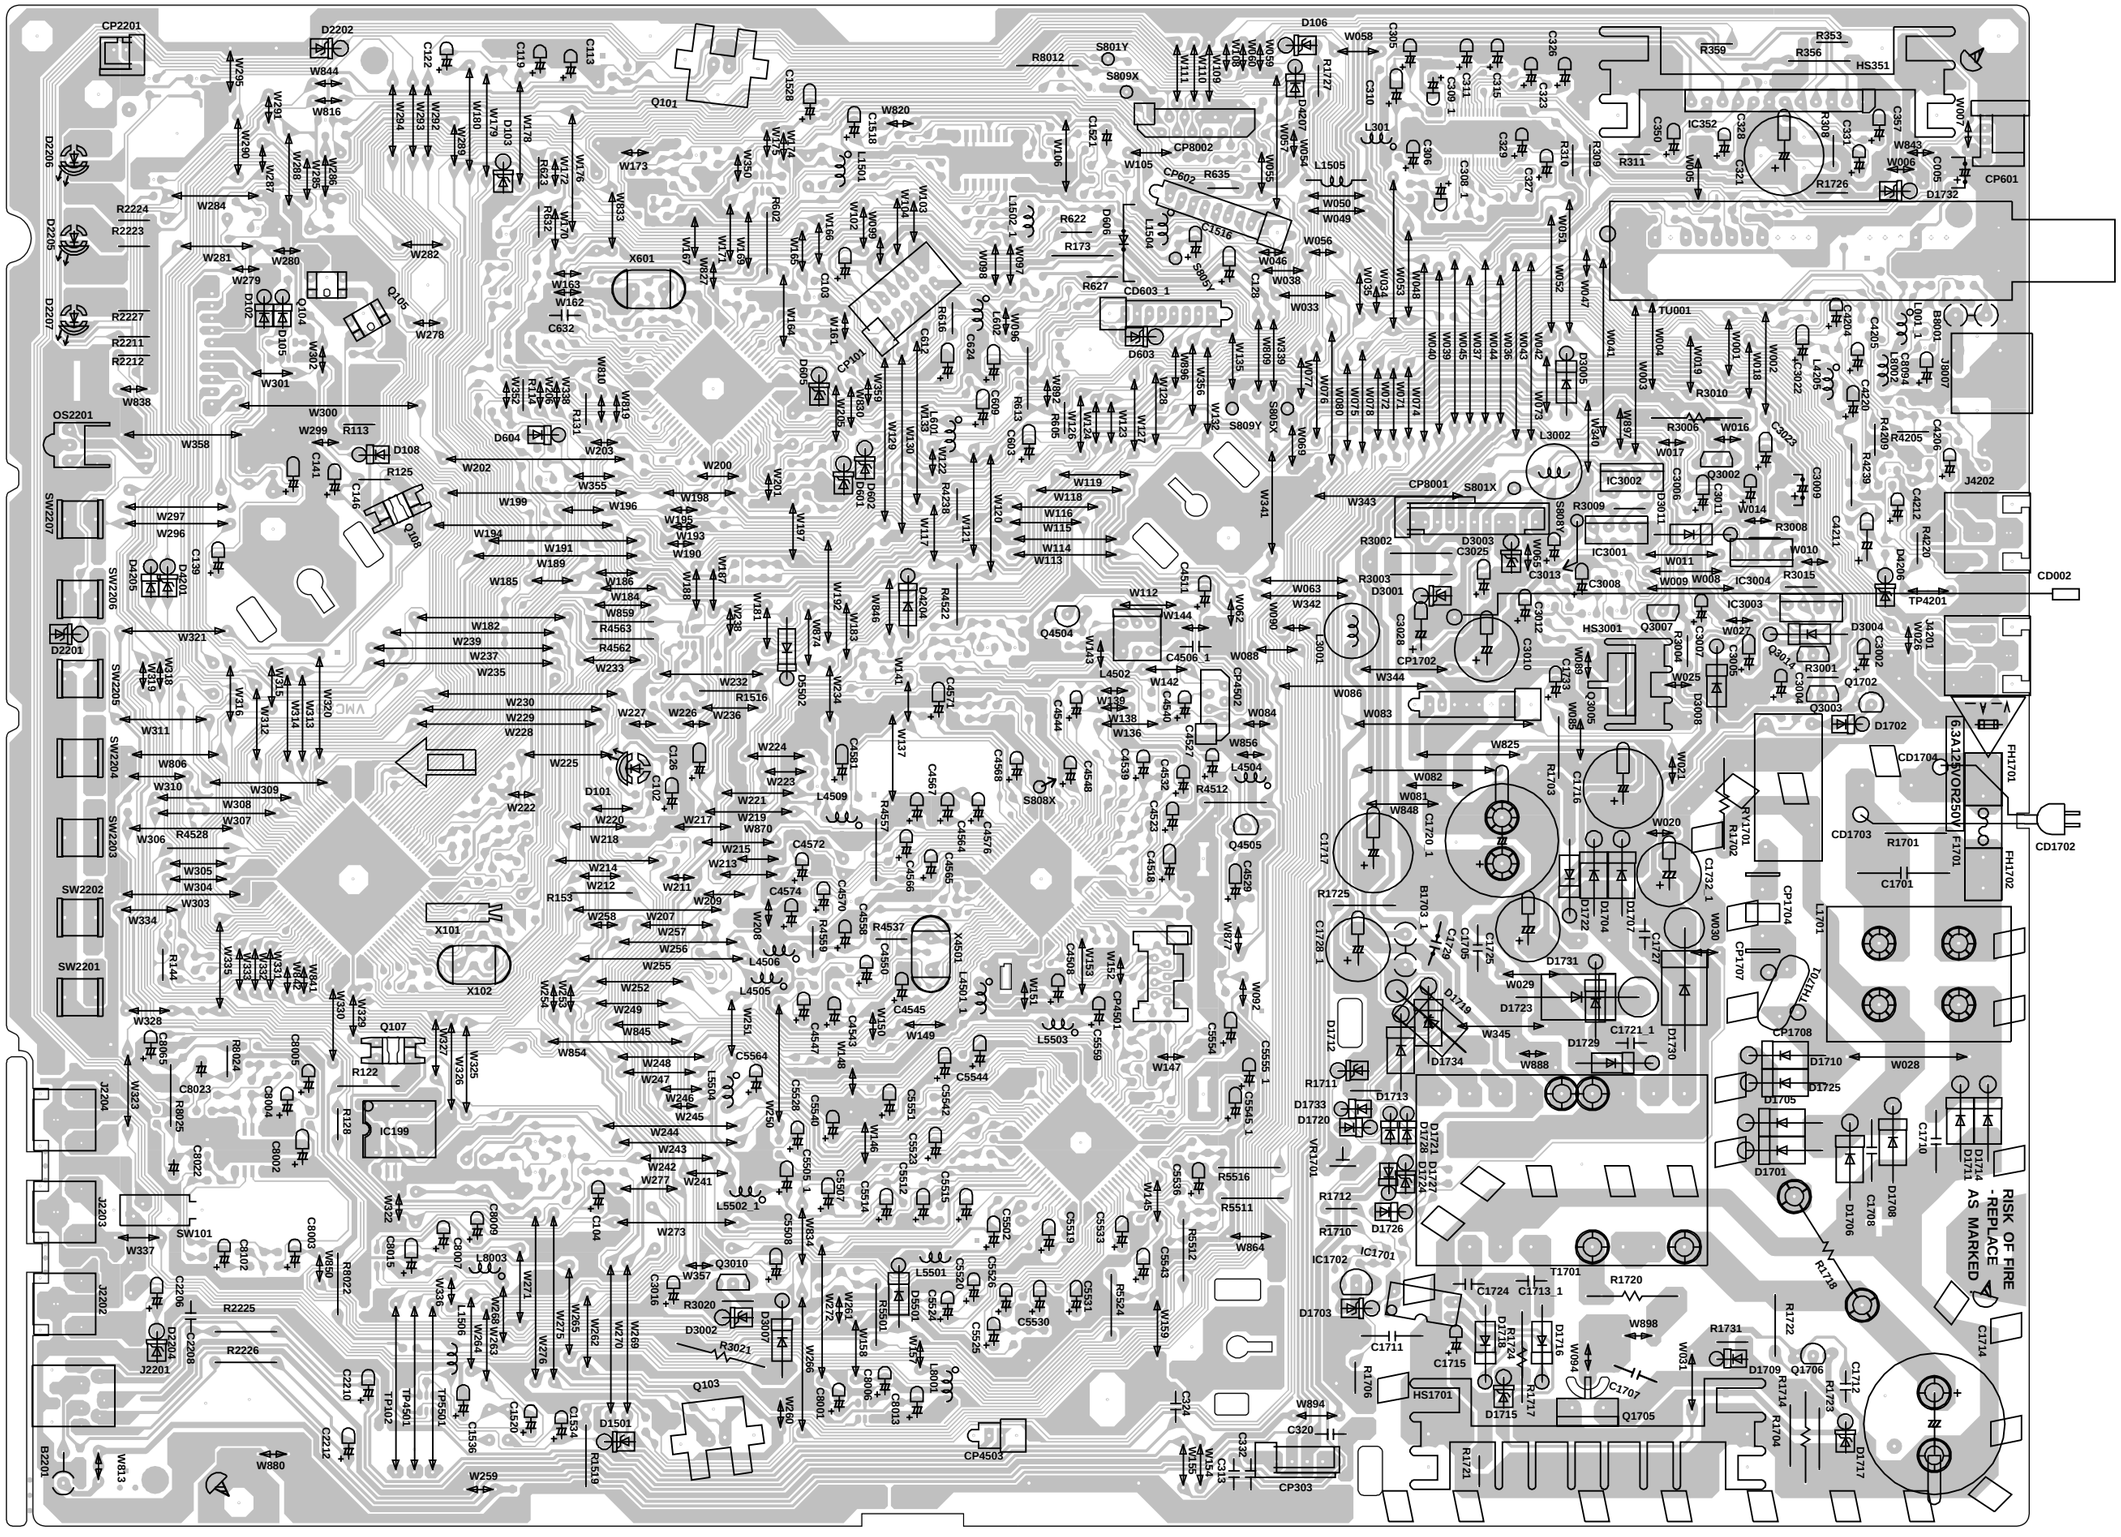
CP2201
D2202
W844
W816
W295
W291
W290
W287
W285
W286
W284
R2224
R2223
W281
W279
W280
D102
Q104
D105
W392
W301
W838
W358
W300
W299
R113
D108
R125
C141
C146
Q108
W297
W296
C139
D2205
D2201
SW2207
SW2206
SW2205
SW2204
SW2203
SW2202
SW2201
OS2201
D2206
D2205
D2207
R2227
R2211
R2212
W292
W294
W293
W282
Q105
W278
C122
C119
C113
W178
W179
W180
D103
W176
W172
R623
R632
W170
W173
W833
X601
W163
W162
C632
W167
W171
W168
W165
W164
W161
C103
W102
W098
W104
W105
R602
C1518
L1501
W820
C1528
Q101
W174
W175
W350
W810
W819
W338
W339
W382
R114
R131
D604
W203
W202
W355
W199
W196
W194
W191
W189
W185
W186
W184
W859
R4563
R4562
W233
W182
W239
W237
W235
W230
W229
W228
W225
W227
W226
W236
W232
R1516
W224
W223
W221
W219
W870
W217
W220
W218
W215
W213
W214
W212
W211
W209
W208
W207
W257
W256
W255
W252
W249
W845
W854
W248
W247
W246
W245
W244
W243
W242
W277
W241
W273
W222
D101
C126
C102
R153
X101
X102
W258
W254
W253
W250
W251
L5504
C5564
C5528
C5540
L5502_1
C5507
C5508
C5508_1
W834
C104
C8009
C8015
C8007
W336
L8003
W271
W268
W263
W264
L1506
W265
W275
W276
W262
W270
W269
C3016
W357
Q3010
R3020
D3002
D3007
R3021
Q103
D1501
R1519
C1520
C1524
C1536
TP4501
TP5501
TP102
C2210
C2212
W880
W259
B2201
W813
W337
SW101
J2203
J2202
J2201
C2206
C2204
C2208
R2225
R2226
W806
W310
W309
W308
W307
R4528
W306
W305
W304
W303
W334
R144
W335
W331
W332
W333
W841
W840
W330
W329
Q107
R122
IC199
W327
W326
W325
W328
J2204
W323
C8065
R8024
C8005
C8004
R8025
C8023
C8022
C8002
C8003
R8022
W650
W322
W324
W321
W319
W318
W316
W315
W312
W314
W313
W320
W311
W806
W310
W309
W308
W307
R4528
W306
W305
W304
W303
W334
W328
W330
W329
Q107
R122
IC199
W327
W326
W325
W323
J2204
C8065
R8024
C8005
C8004
R8025
C8023
C8022
C8002
C8003
R8022
W650
W322
W324
W321
W319
W318
W316
W315
W312
W314
W313
W320
W311
W806
W310
W309
W308
W307
R4528
W306
W305
W304
W303
W334
R144
W335
W331
W332
W333
W841
W840
W330
W329
Q107
R122
IC199
W327
W326
W325
W328
J2204
W323

PRINTED CIRCUIT BOARDS
VCR (CHIP MOUNTED PARTS)
SOLDER SIDE
(MW27FN1(-R))

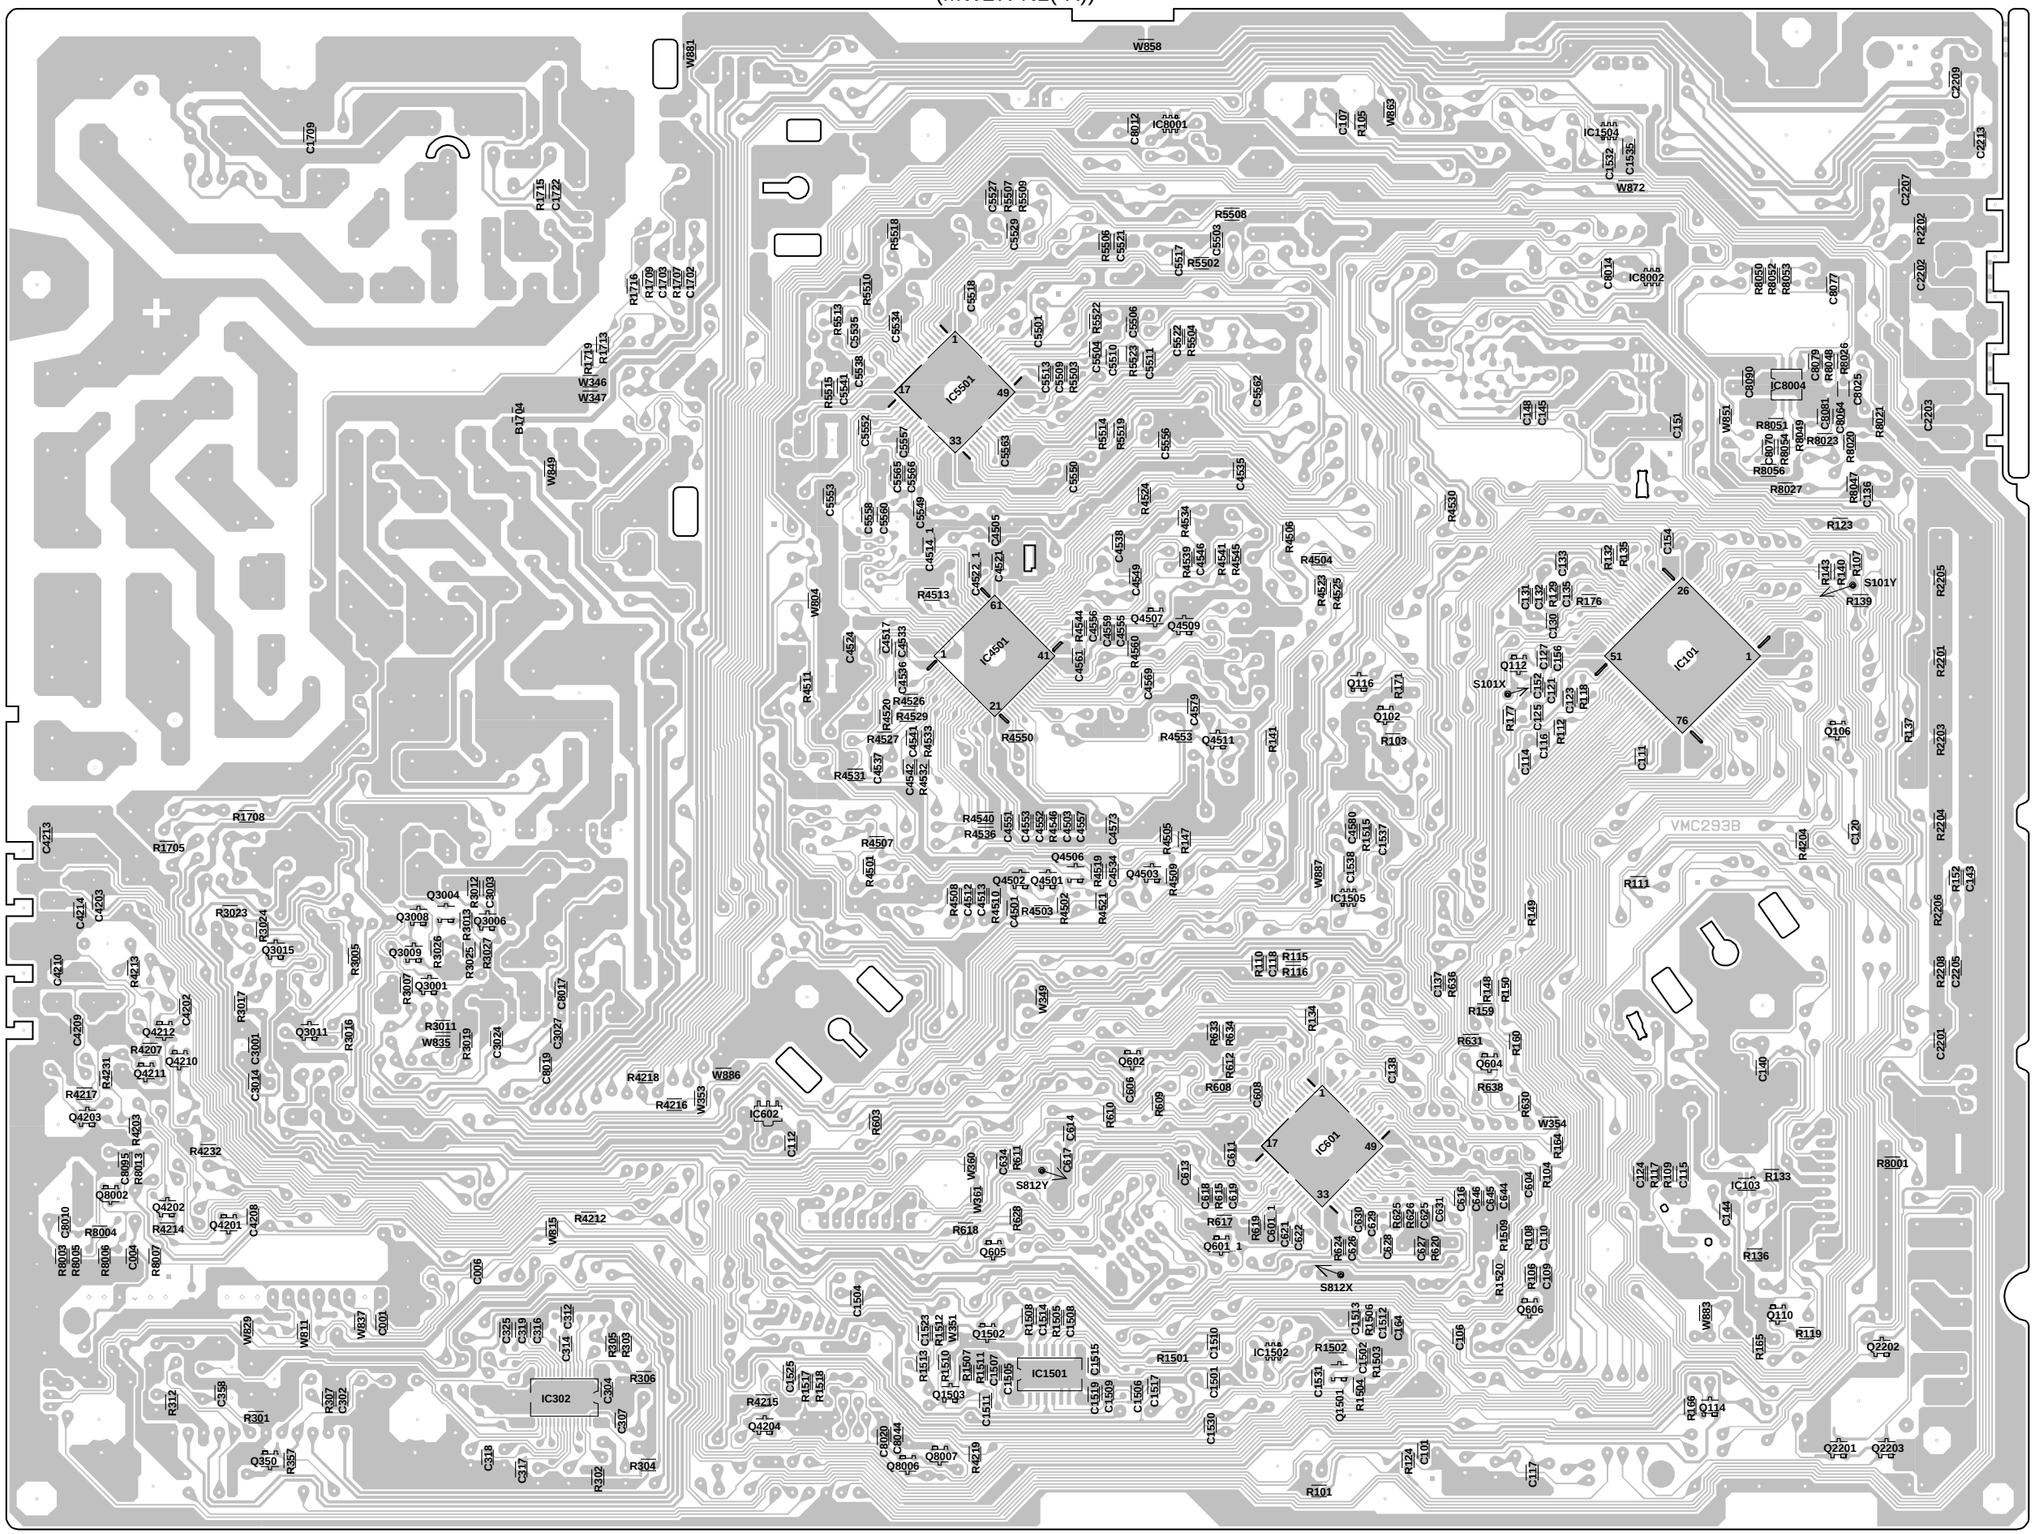

PRINTED CIRCUIT BOARDS
VCR (CHIP MOUNTED PARTS)
SOLDER SIDE
(MW27FN1C(-R))

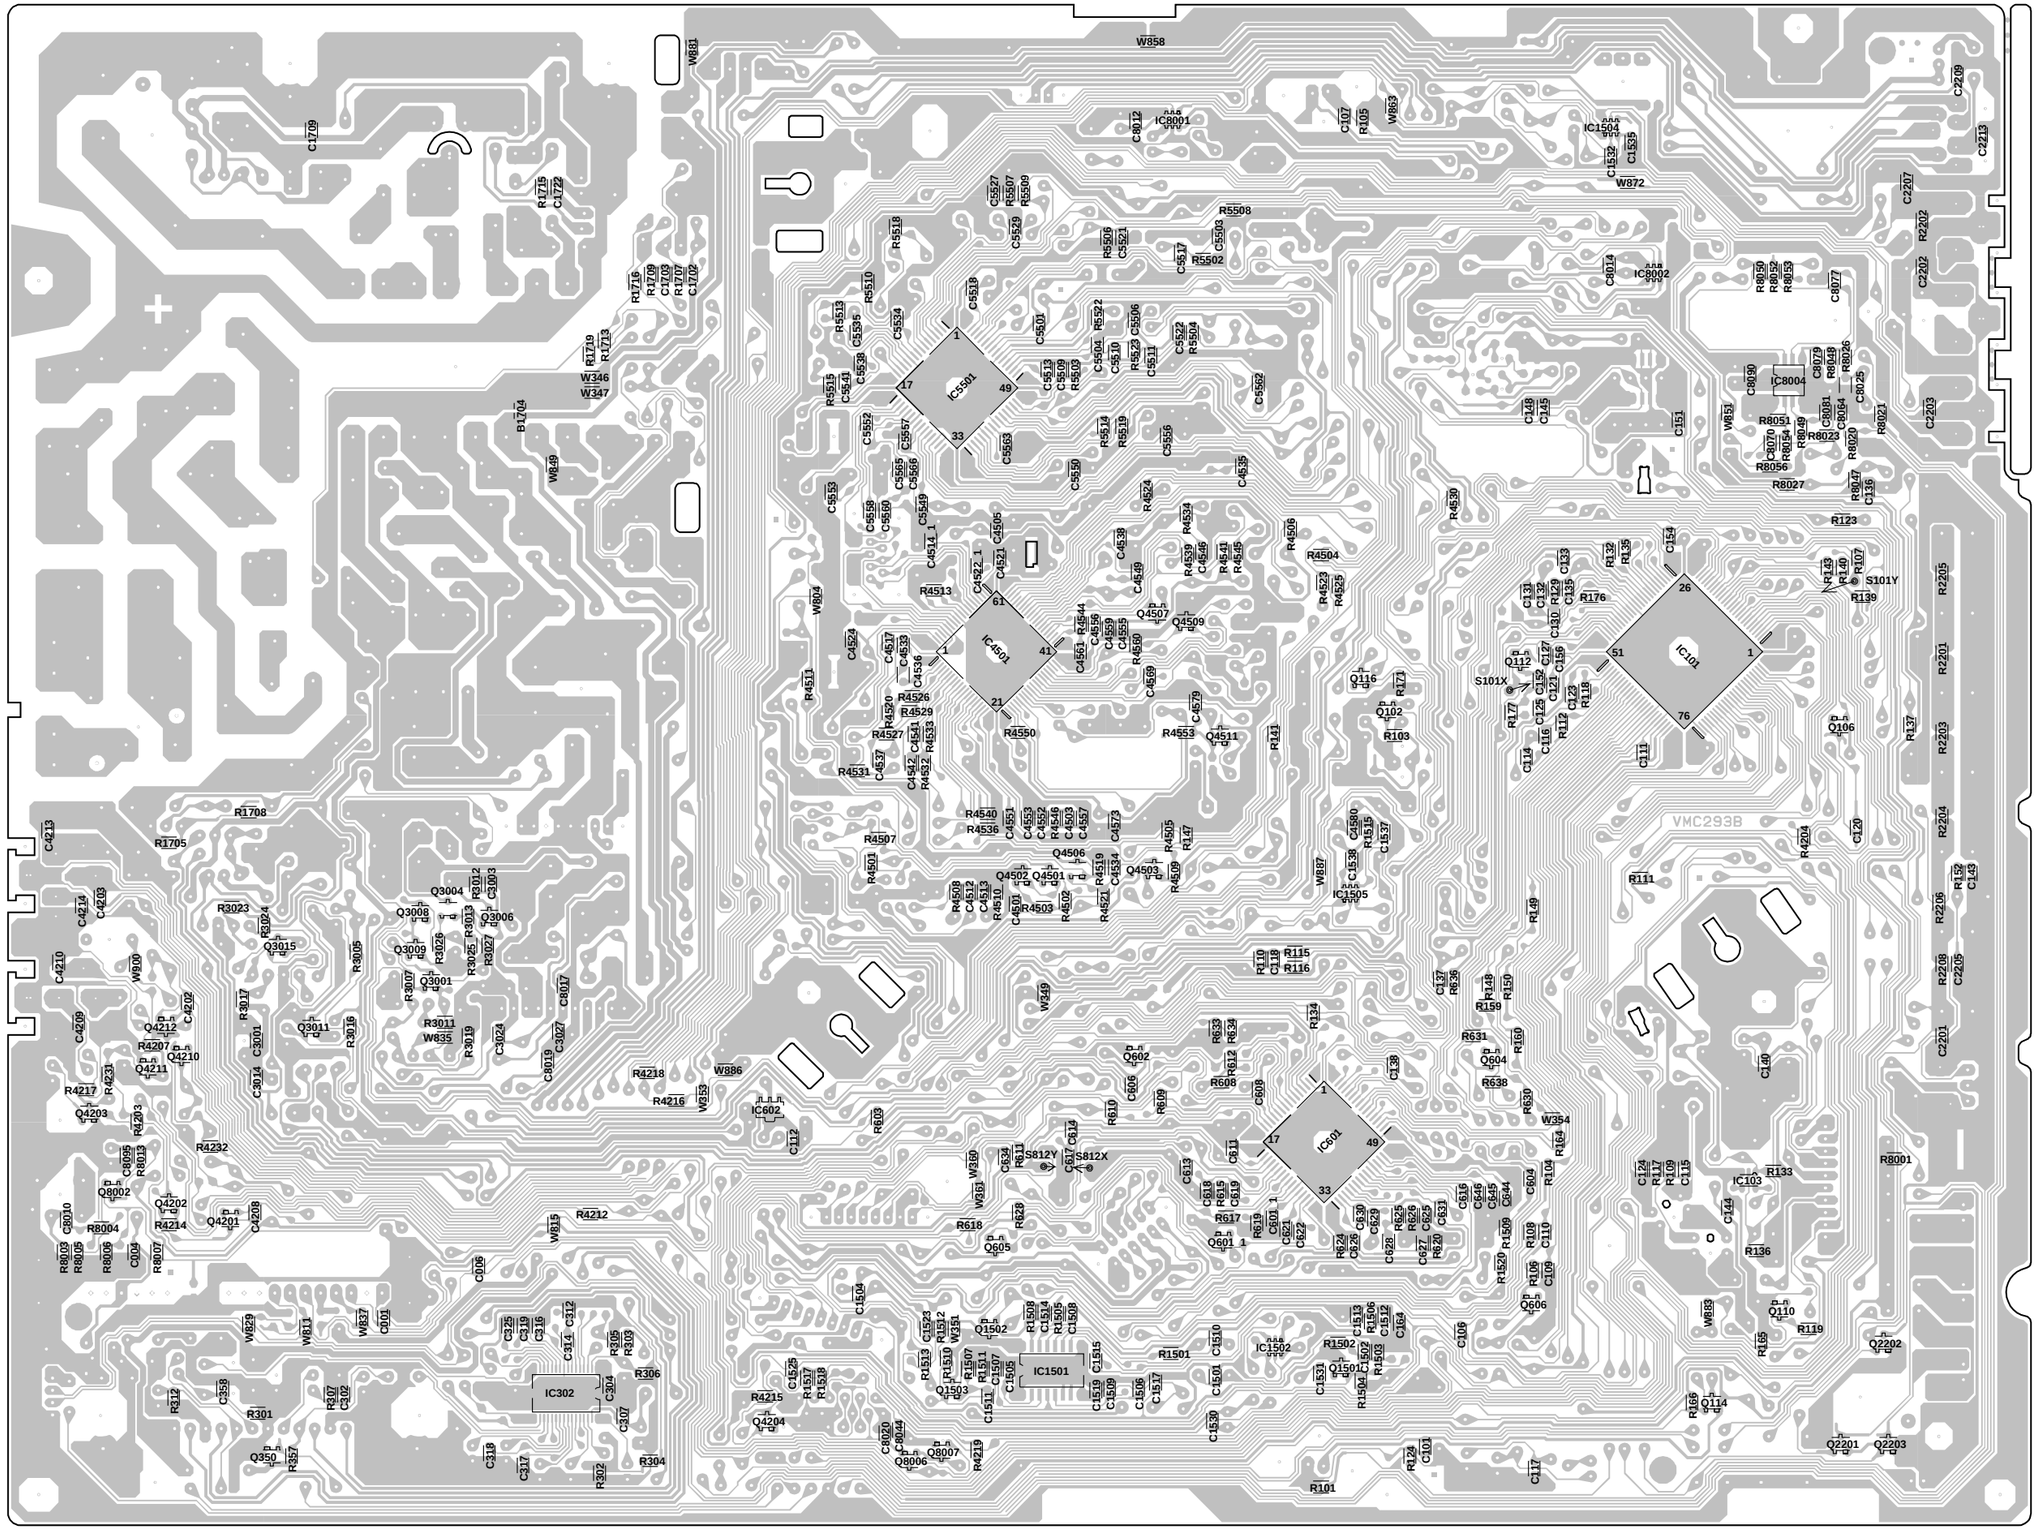

DEFLECTION/OPERATION
SOLDER SIDE

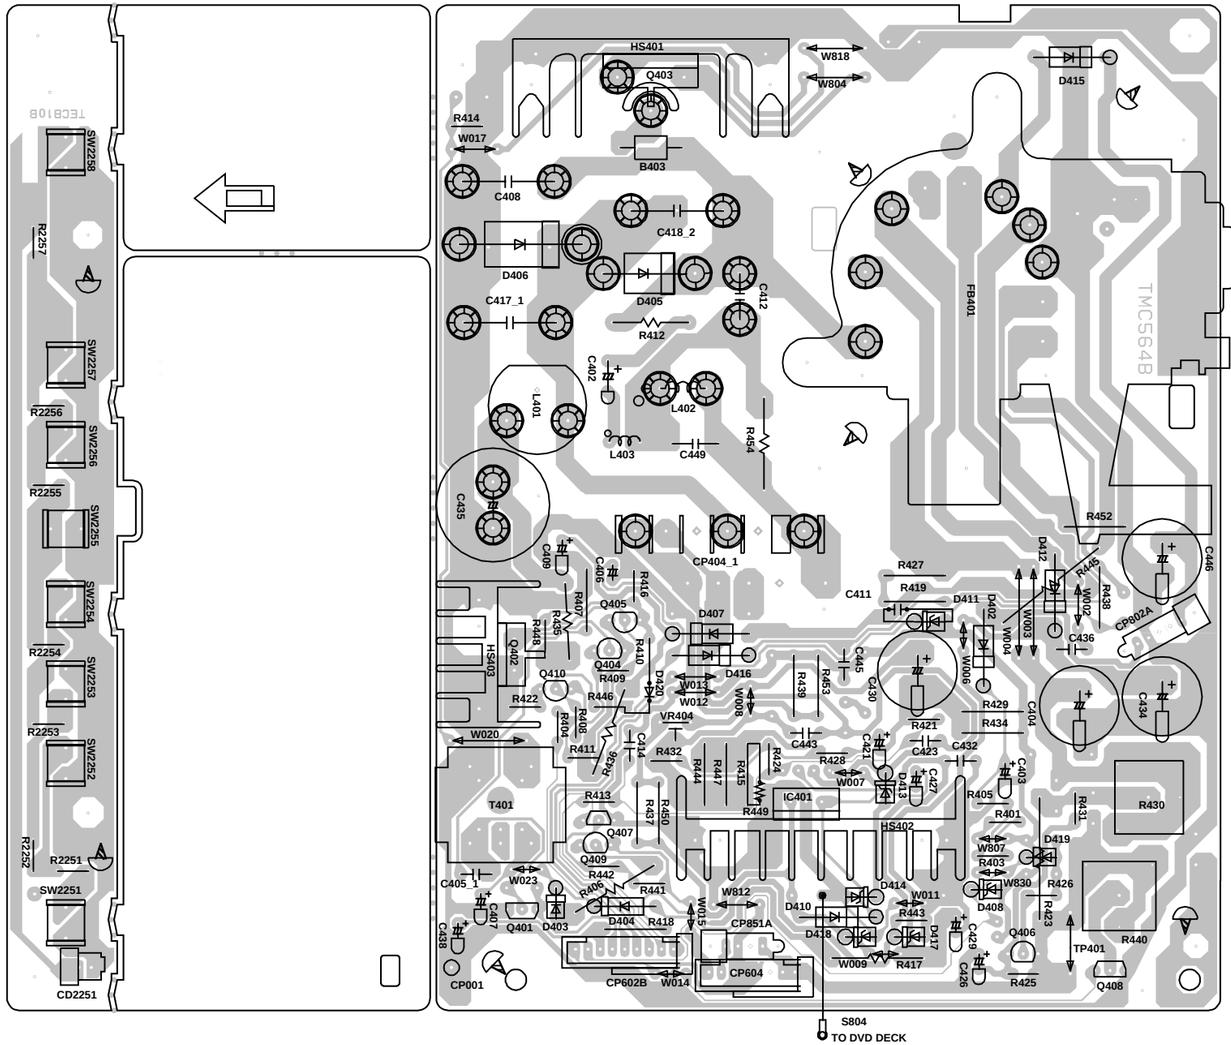

CRT/VM COIL
SOLDER SIDE

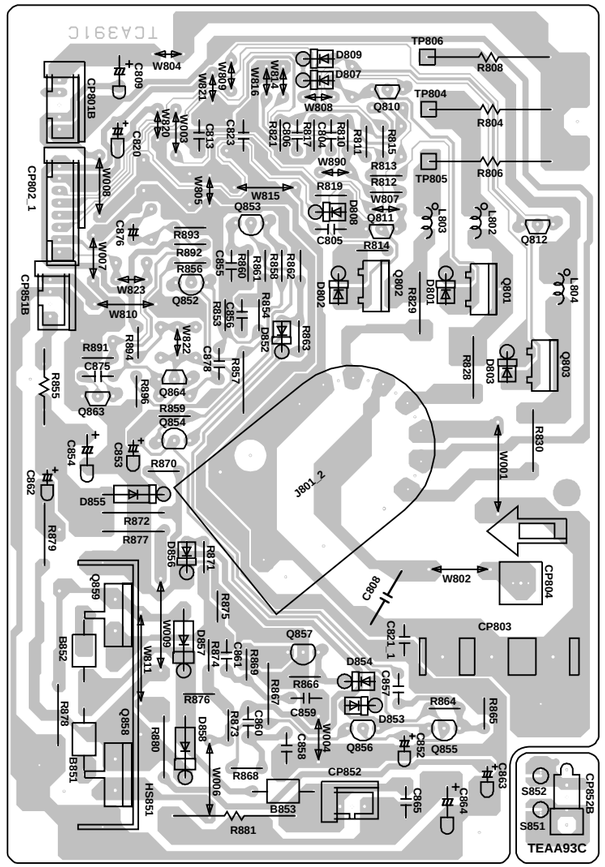

RELAY/SW (INSERTED PARS)
SOLDER SIDE

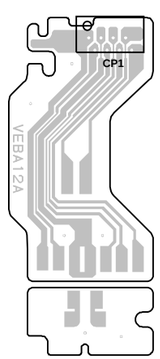

RELAY/SW (CHIP MOUNTED PARS)
SOLDER SIDE

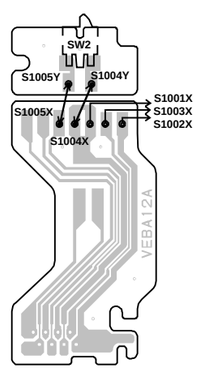

RF_AMP/DSP SCHEMATIC DIAGRAM

(DVD PCB)

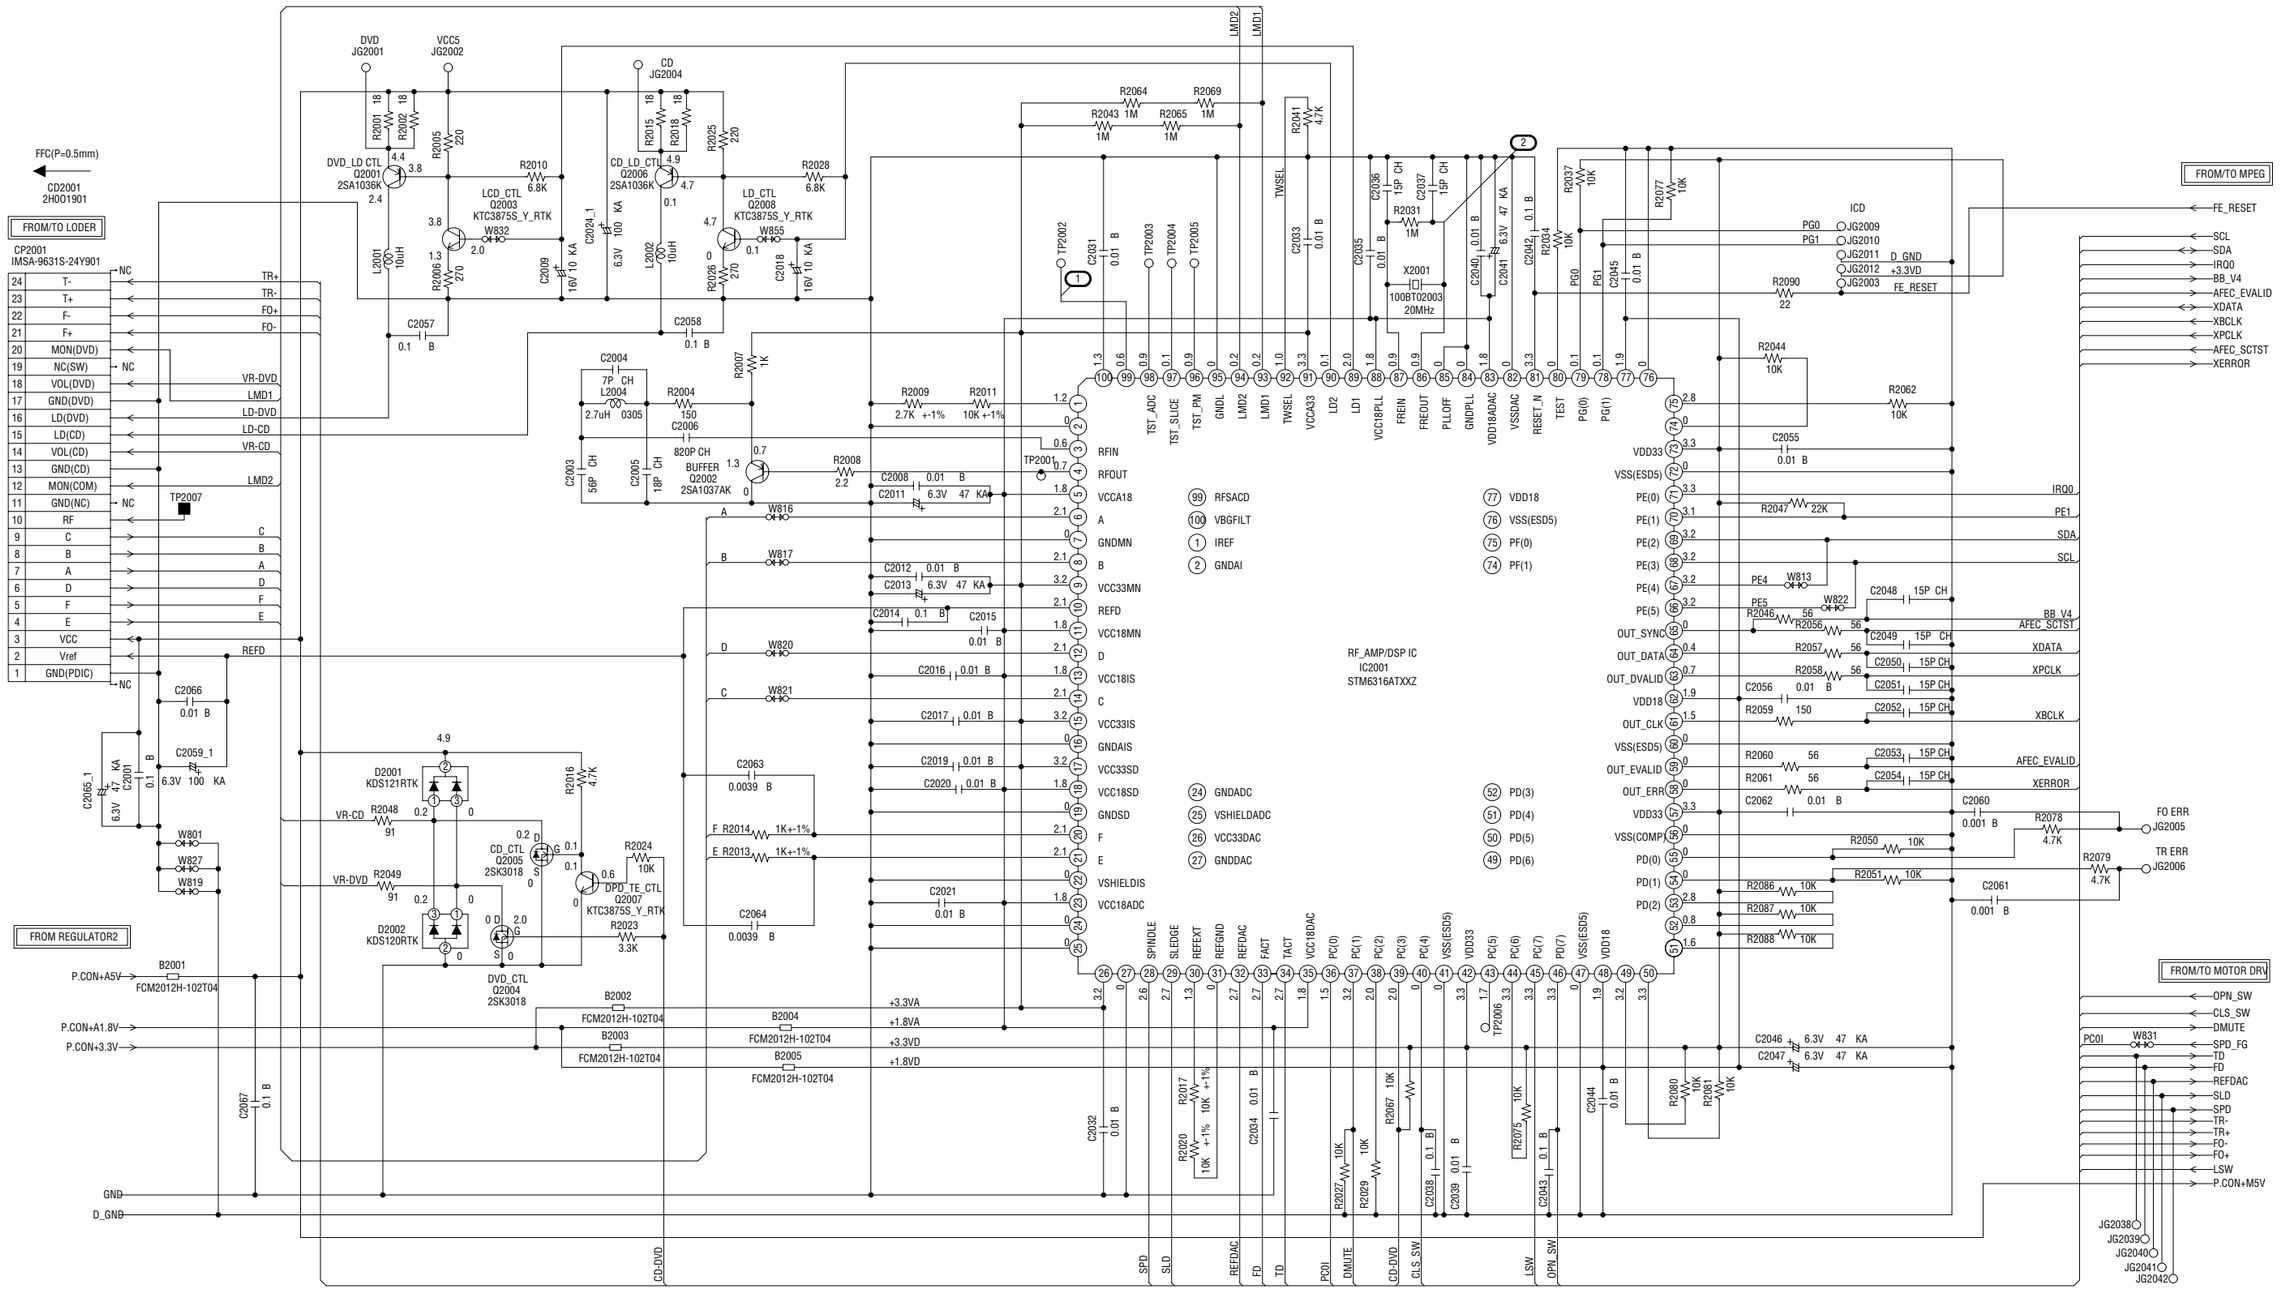

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

MOTOR DRIVE SCHEMATIC DIAGRAM

(DVD PCB)

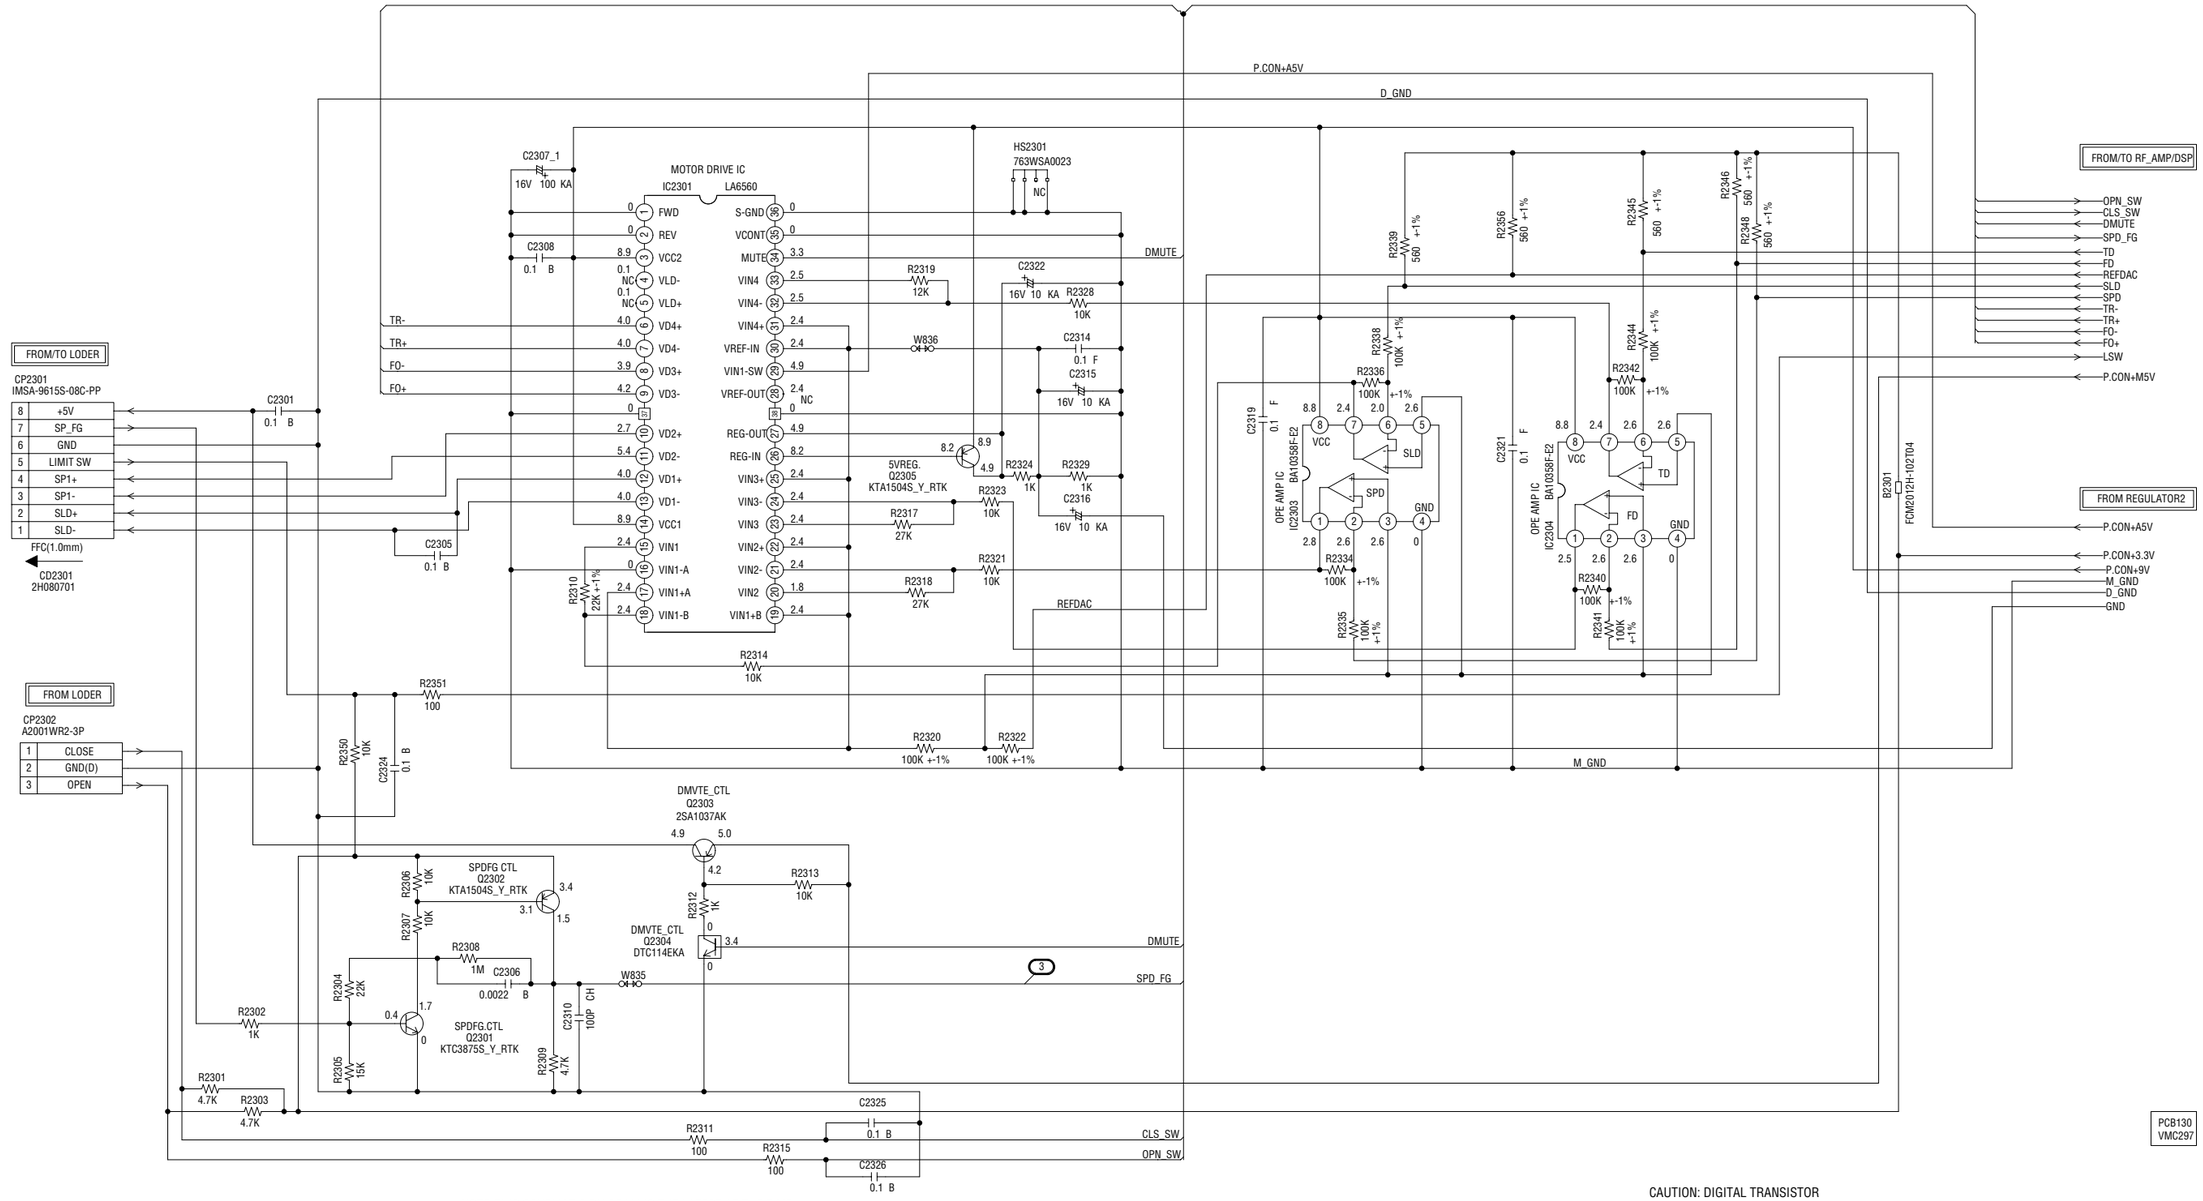

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CAUTION: DIGITAL TRANSISTOR



MPEG SCHEMATIC DIAGRAM

(DVD PCB)

MPEG IC
IC4002
STM5589AVA

CLOCK GENERATOR IC
IC4003
SN74AHCU04PWR

FROM/TO MEMORY

FROM/TO RF_AMP/DSP

FROM/TO REGULATOR2

FROM/TO AUDIO/VIDEO

PCB130
VMC297

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

DIGITAL AUDIO SIGNAL(PB)

MEMORY SCHEMATIC DIAGRAM
(DVD PCB)

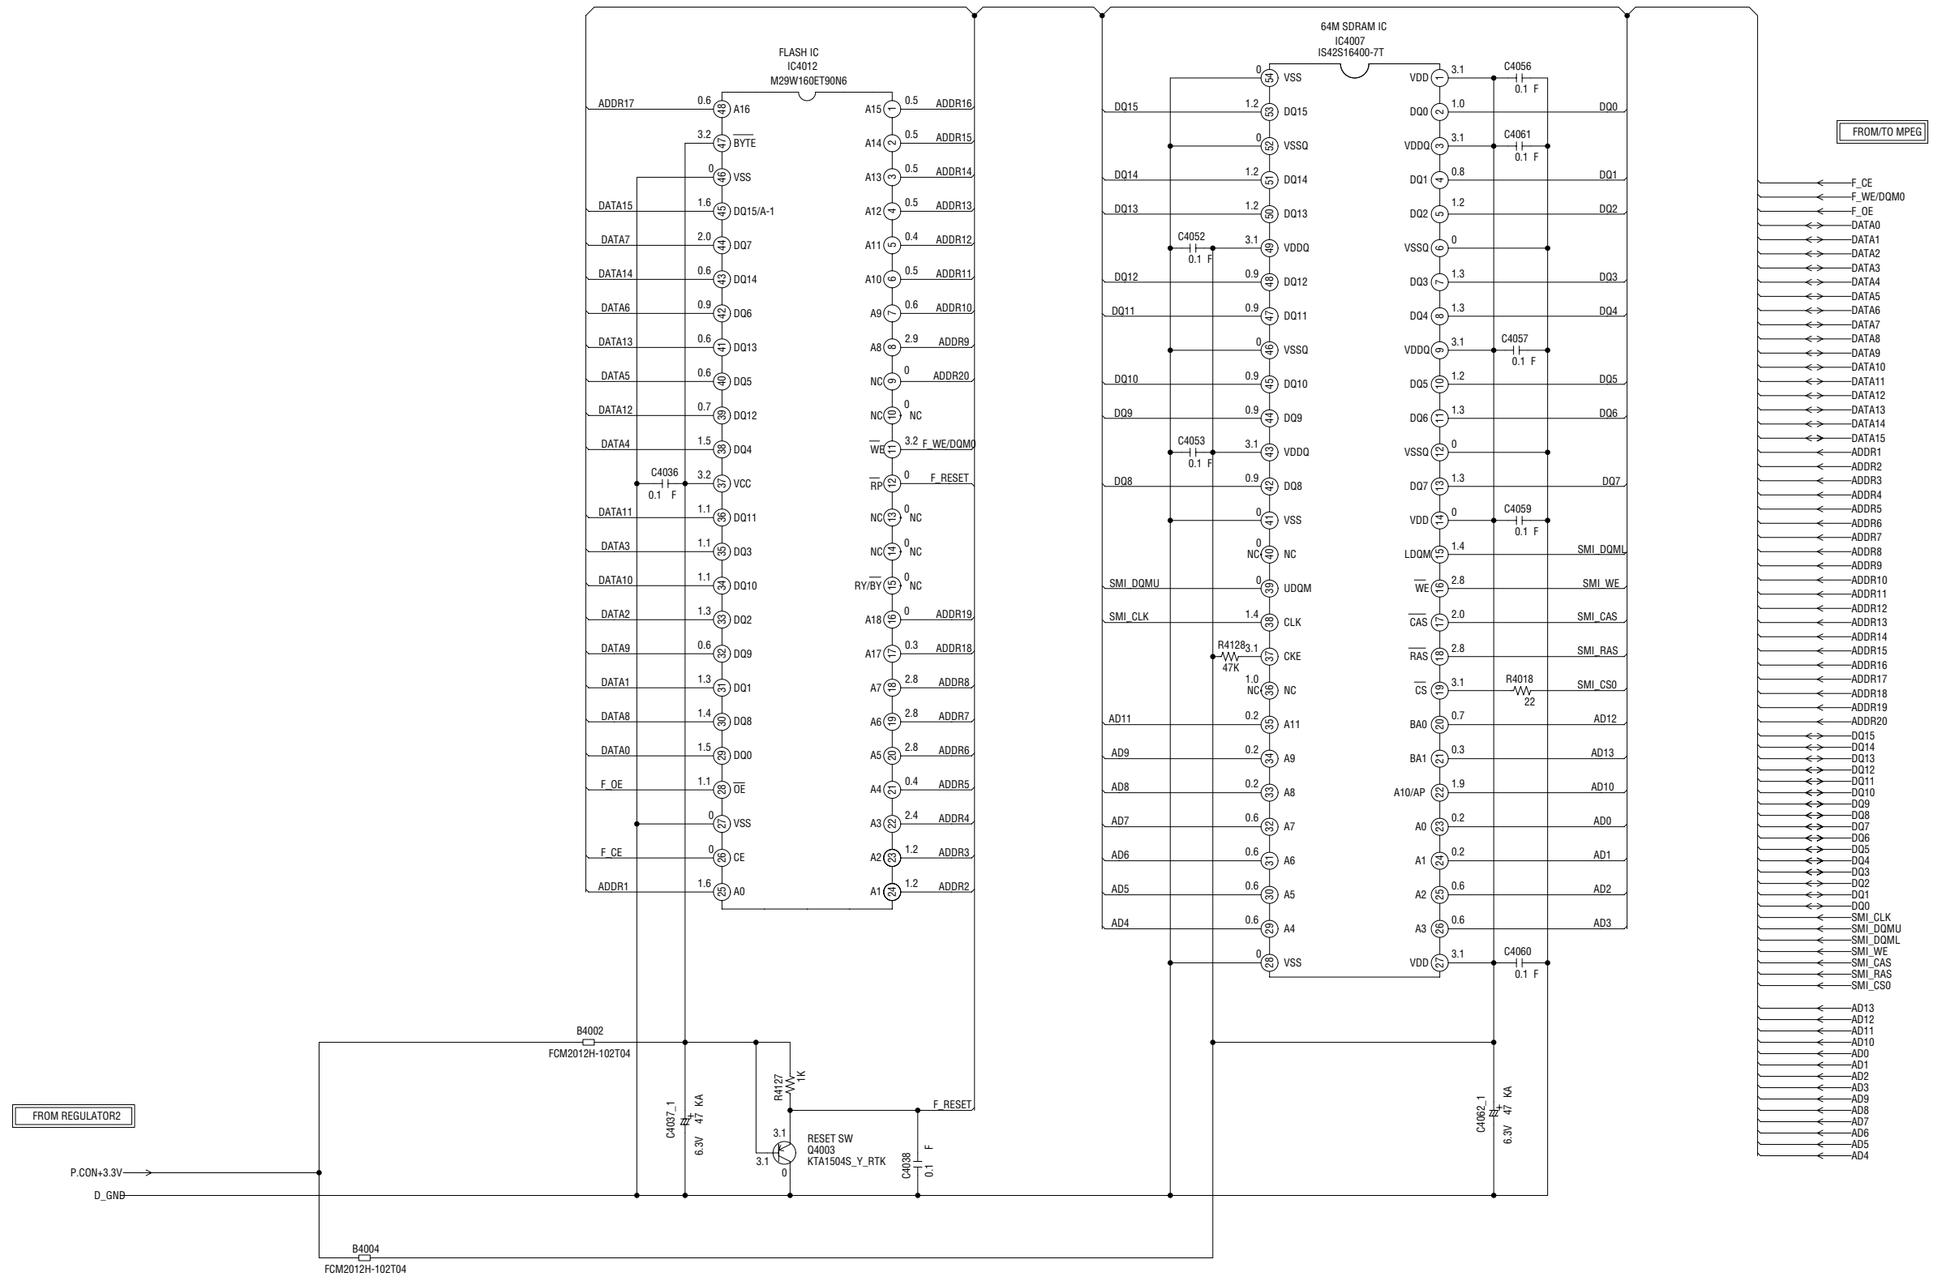

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

AUDIO/VIDEO SCHEMATIC DIAGRAM

(DVD PCB)

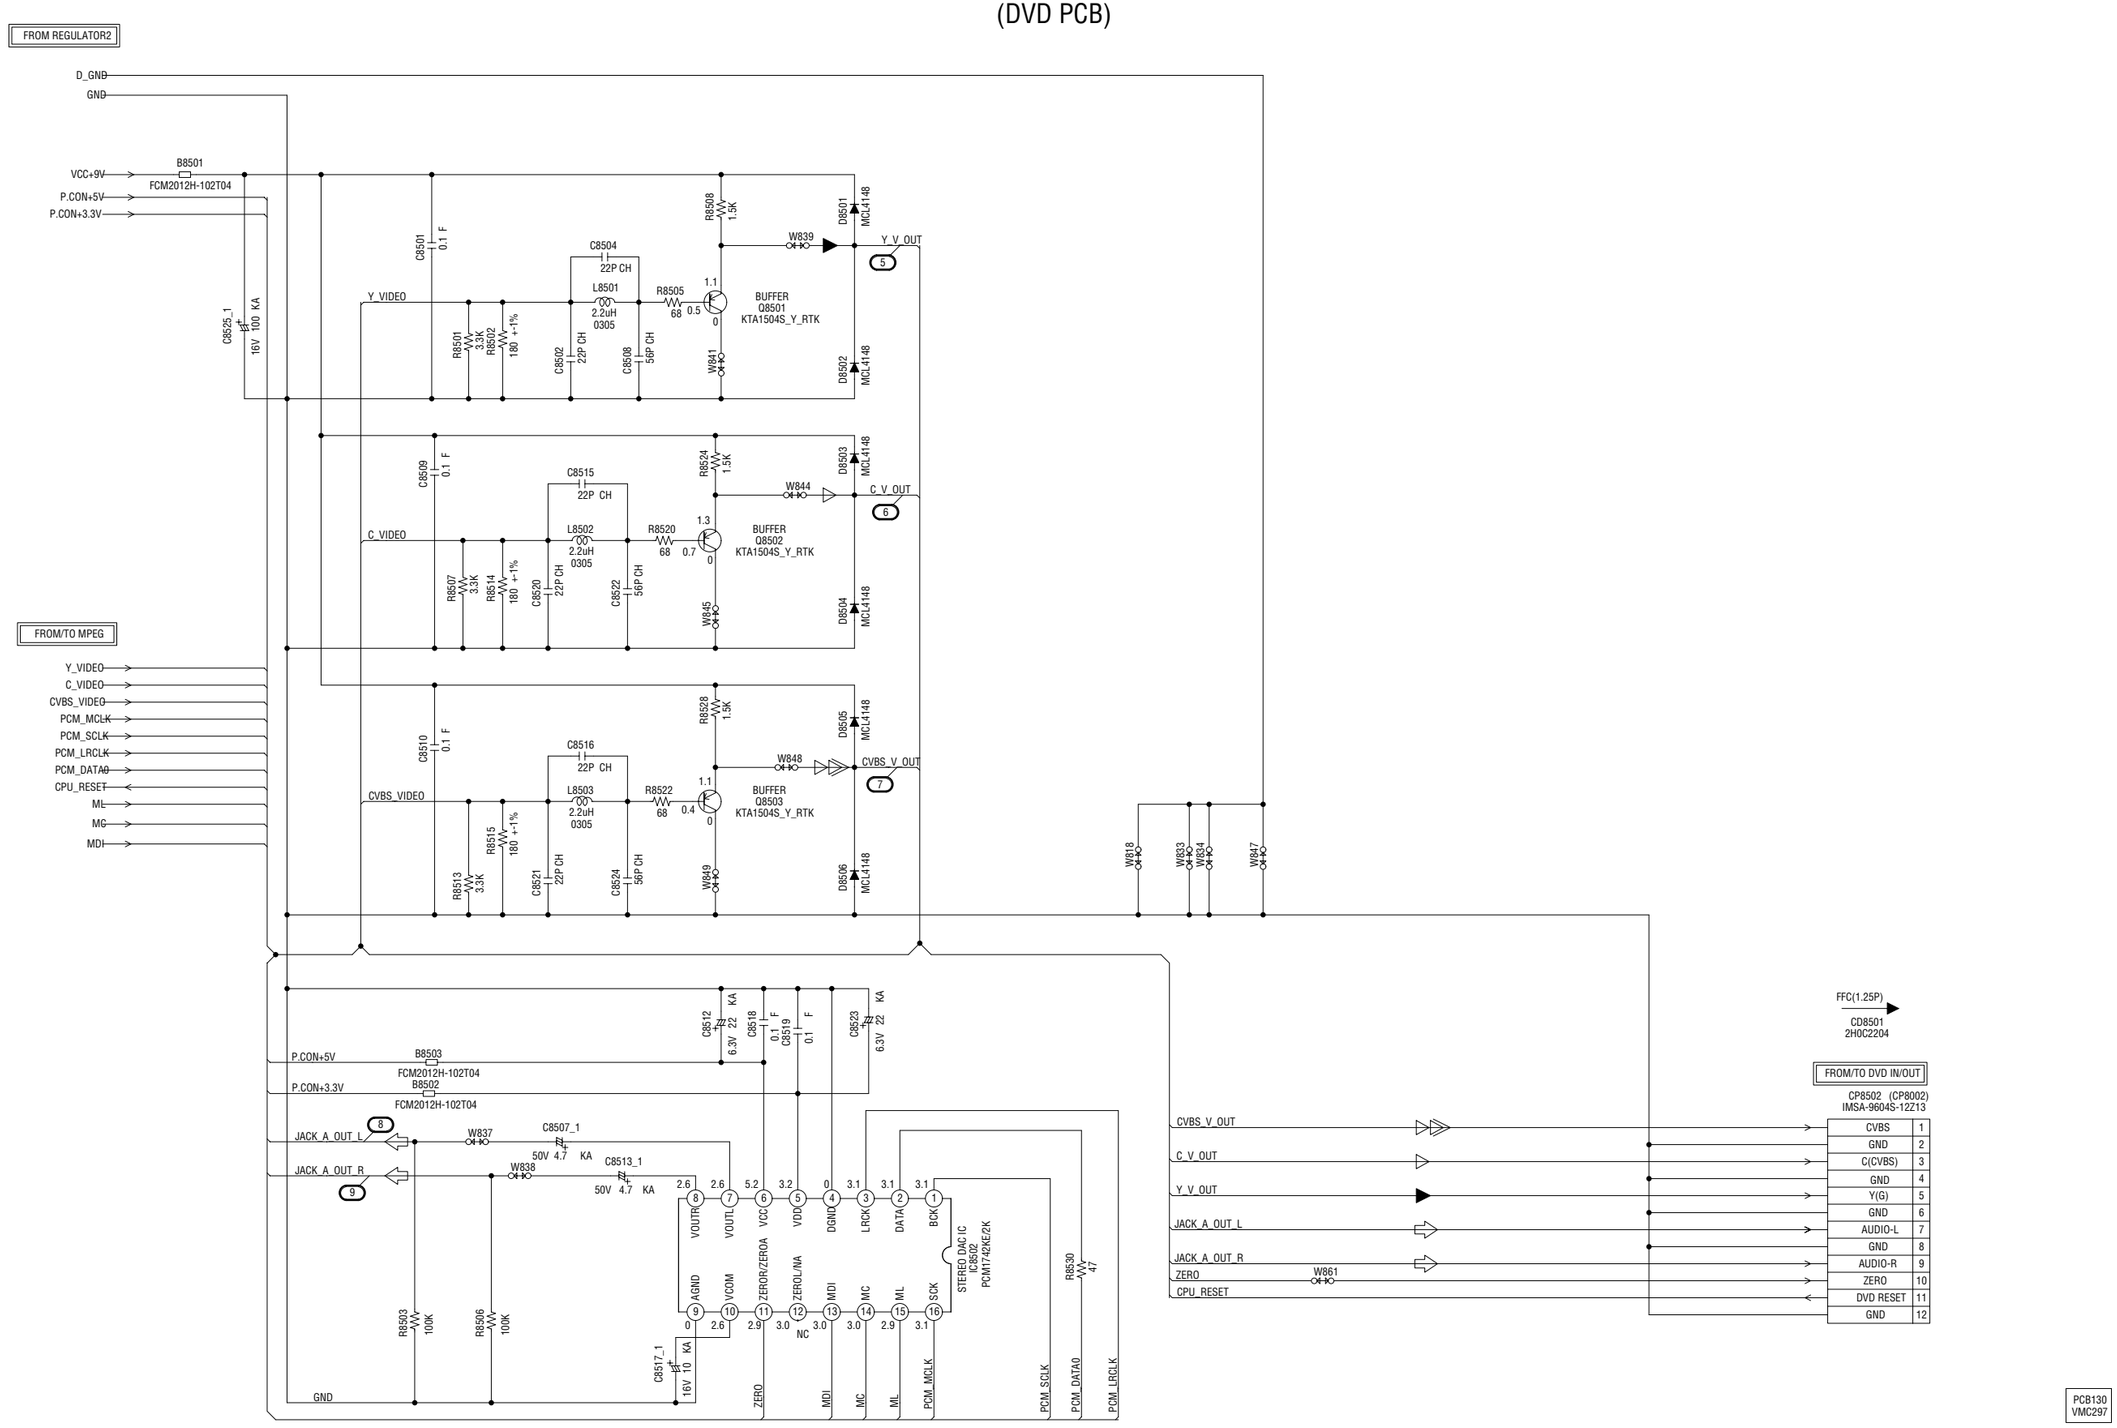

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

AUDIO SIGNAL(REC)
PLAYBACK LUMINANCE SIGNAL
PLAYBACK COLOR SIGNAL
PLAYBACK VIDEO SIGNAL

REGULATOR2 SCHEMATIC DIAGRAM
(DVD PCB)

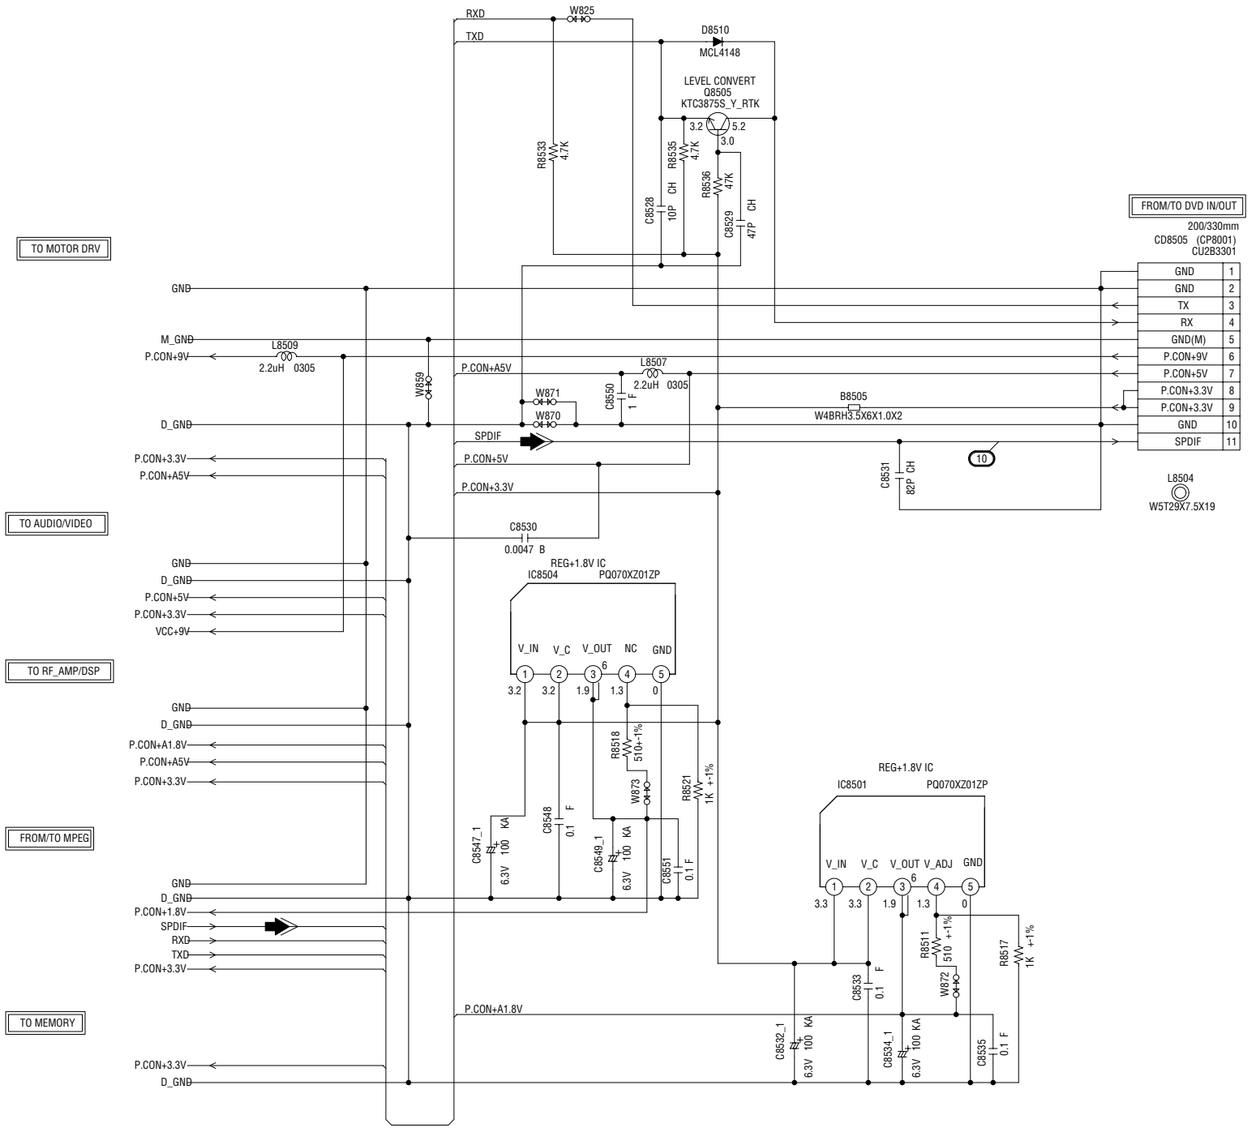

PCB130
VMC297

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

◀ DIGITAL AUDIO SIGNAL(PB)

Y/C/AUDIO/HEAD AMP SCHEMATIC DIAGRAM

(VCR PCB)

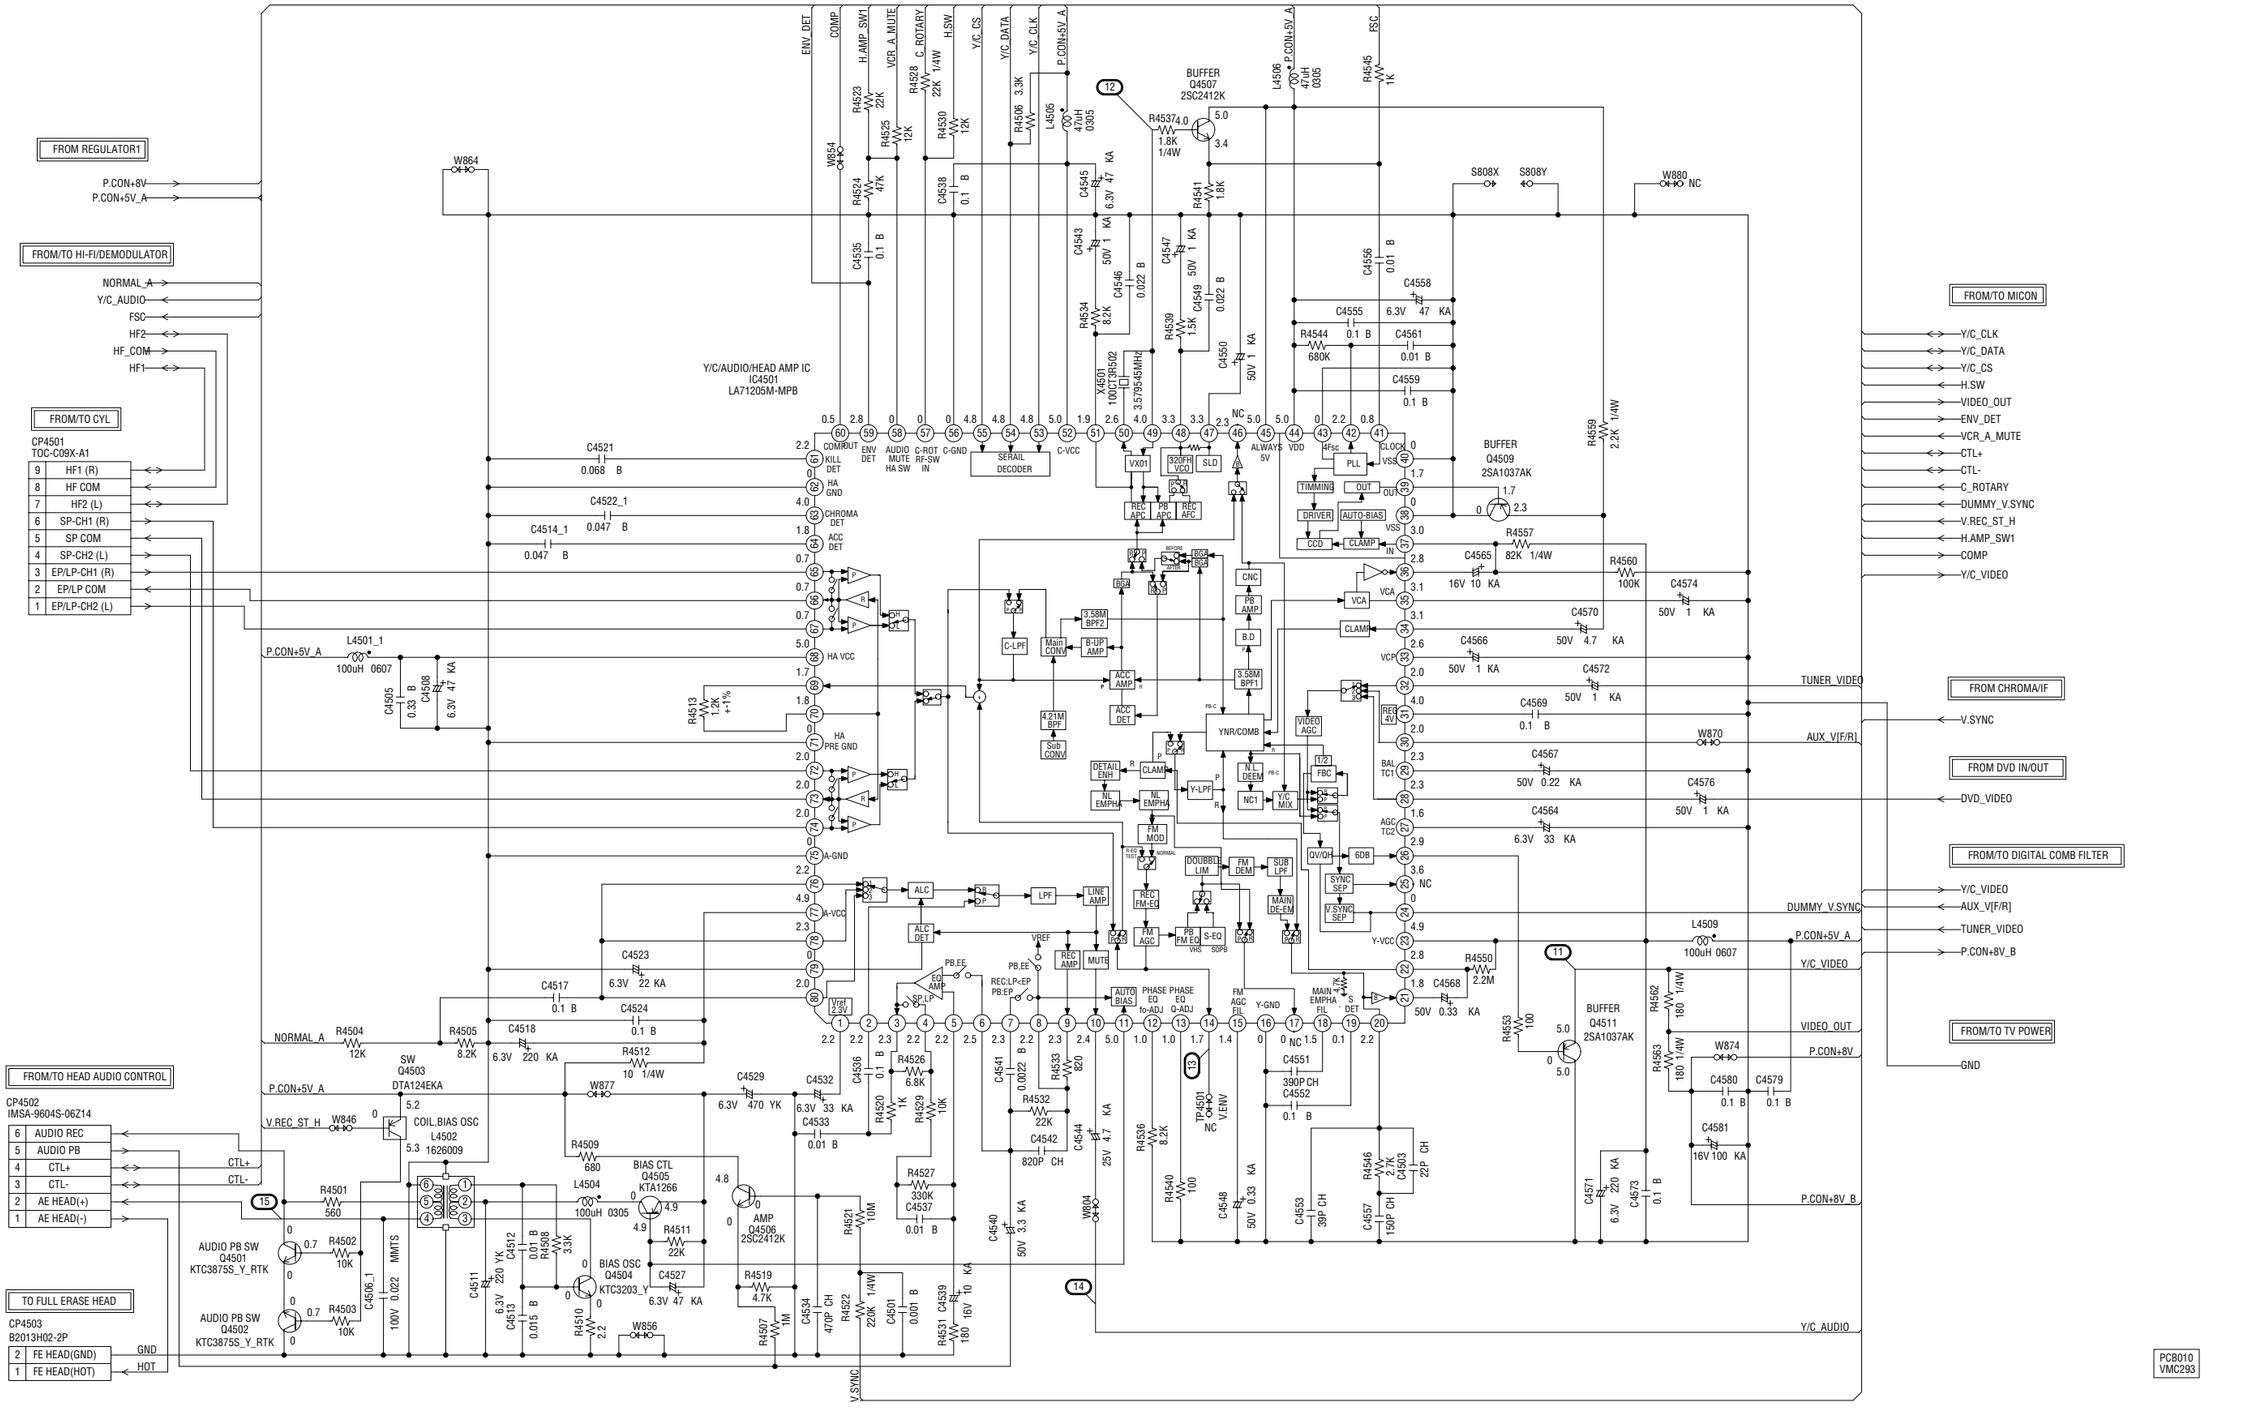

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

MICON SCHEMATIC DIAGRAM (VCR PCB)

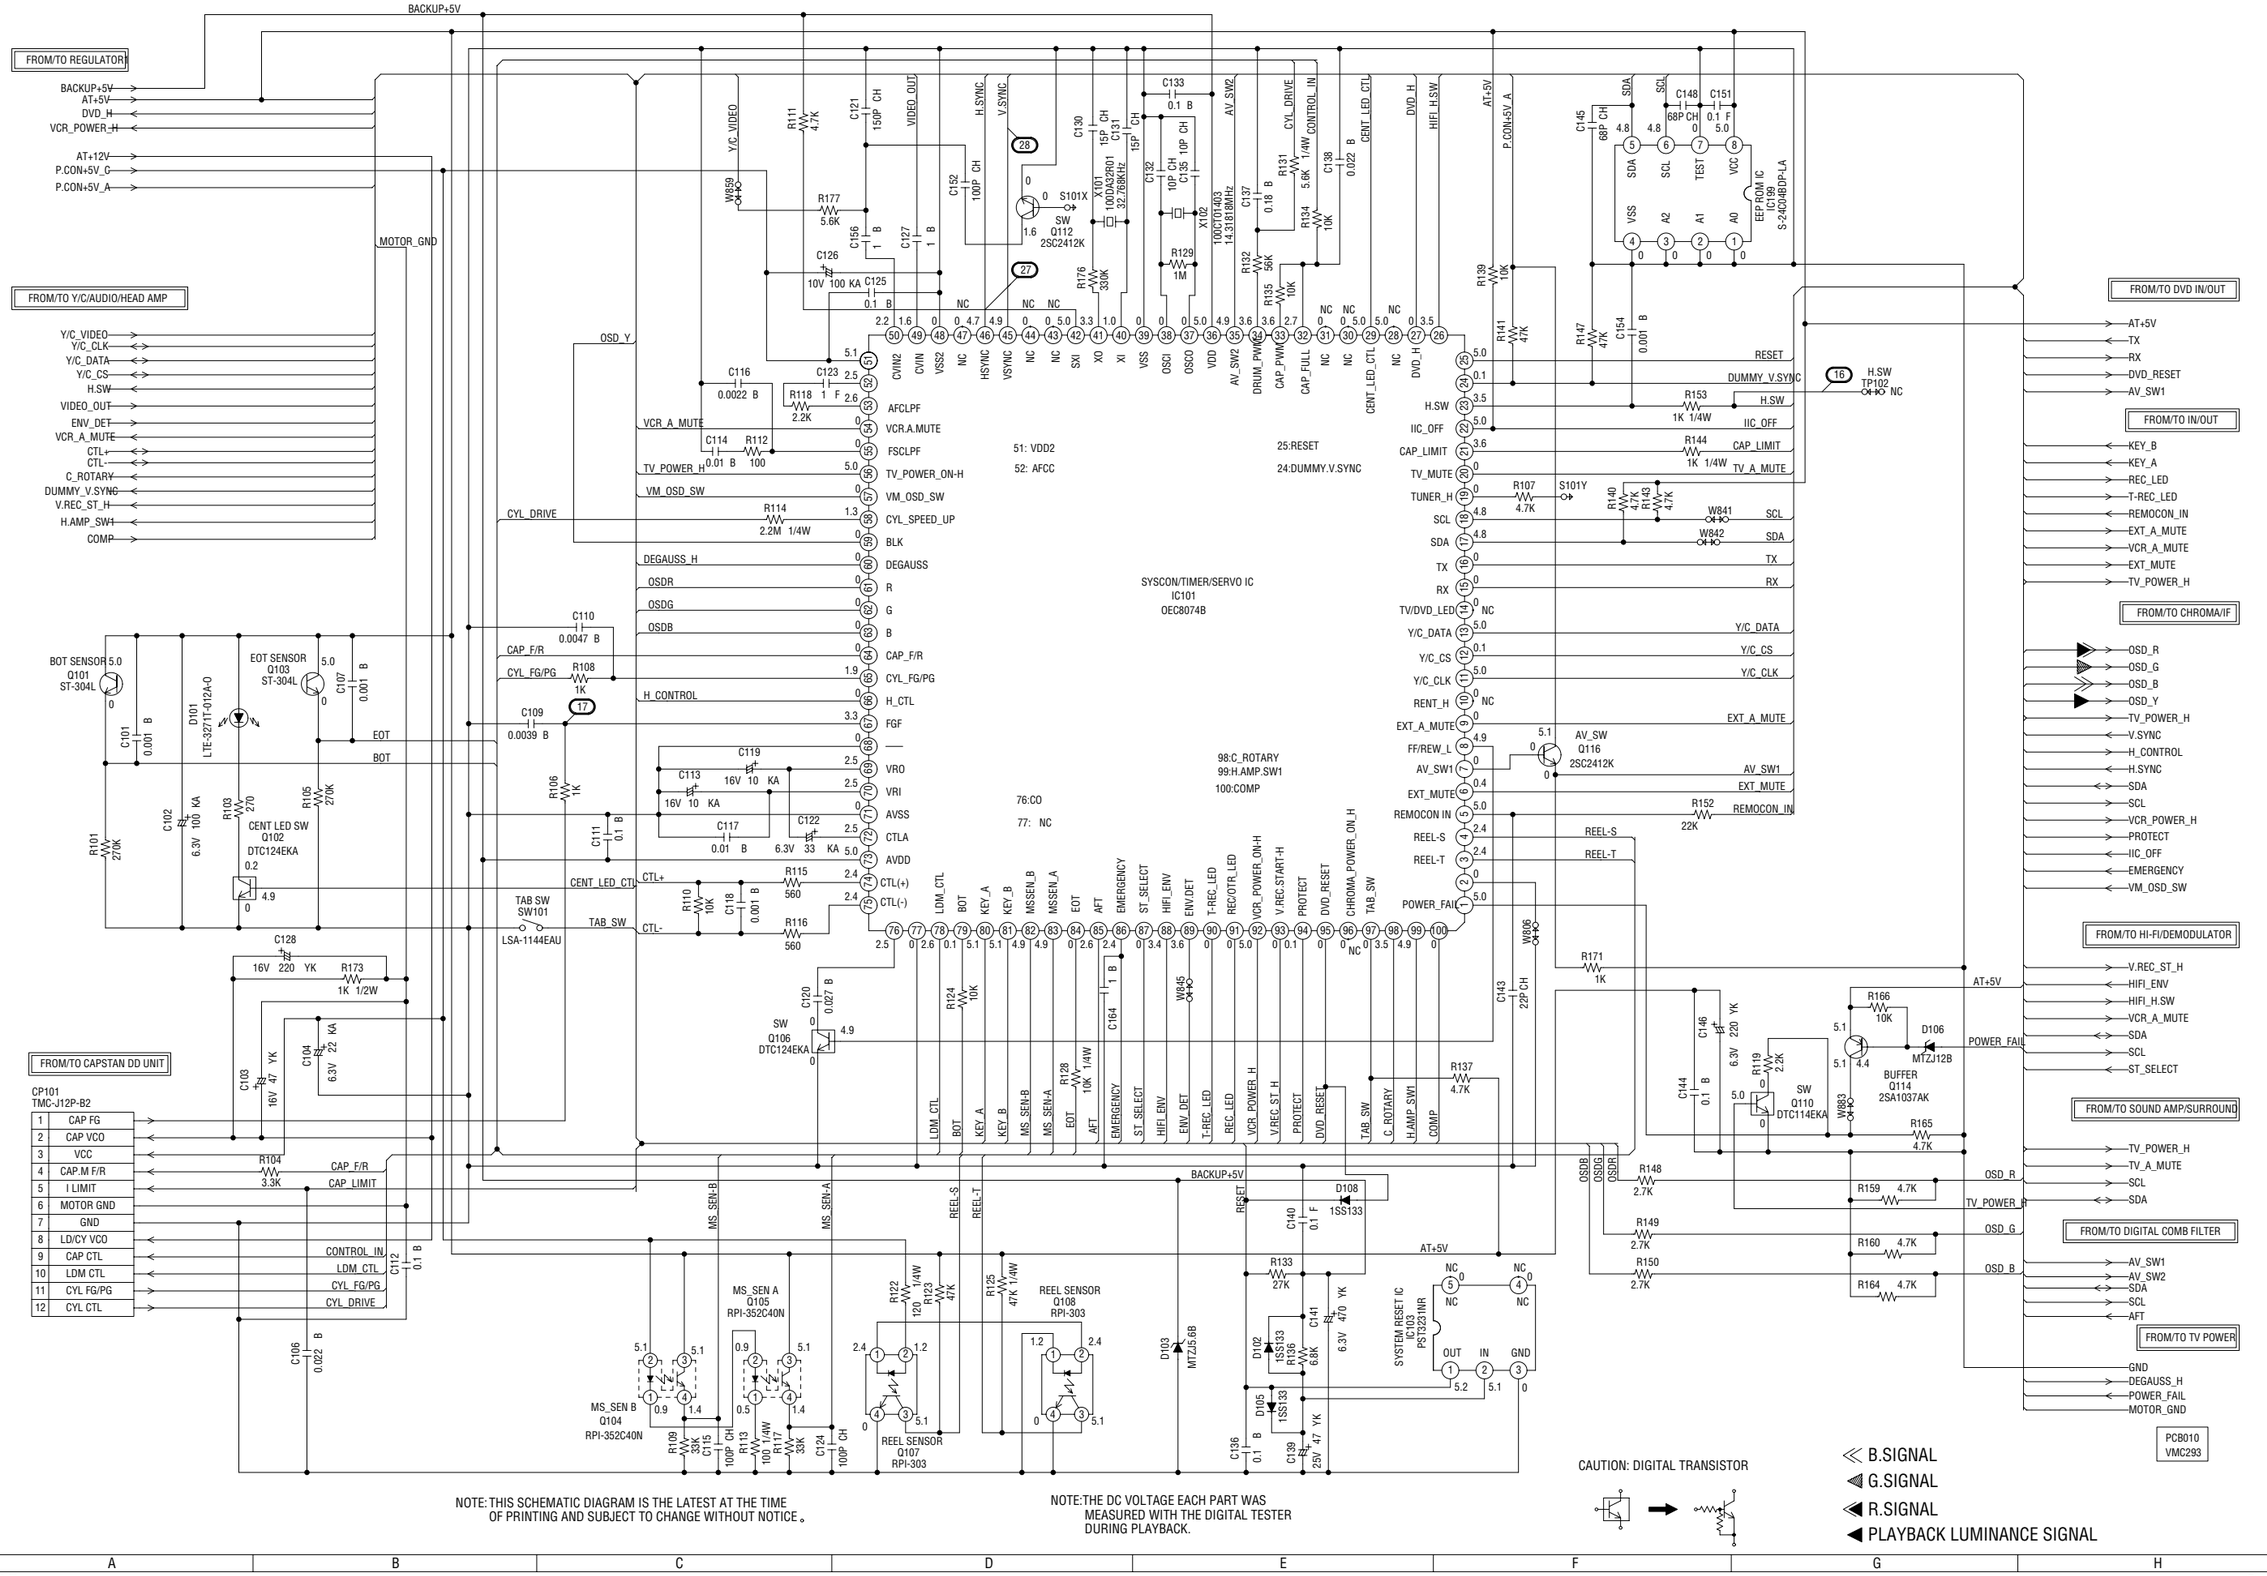

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

IN/OUT SCHEMATIC DIAGRAM

(VCR PCB)

(MW27FN1R)

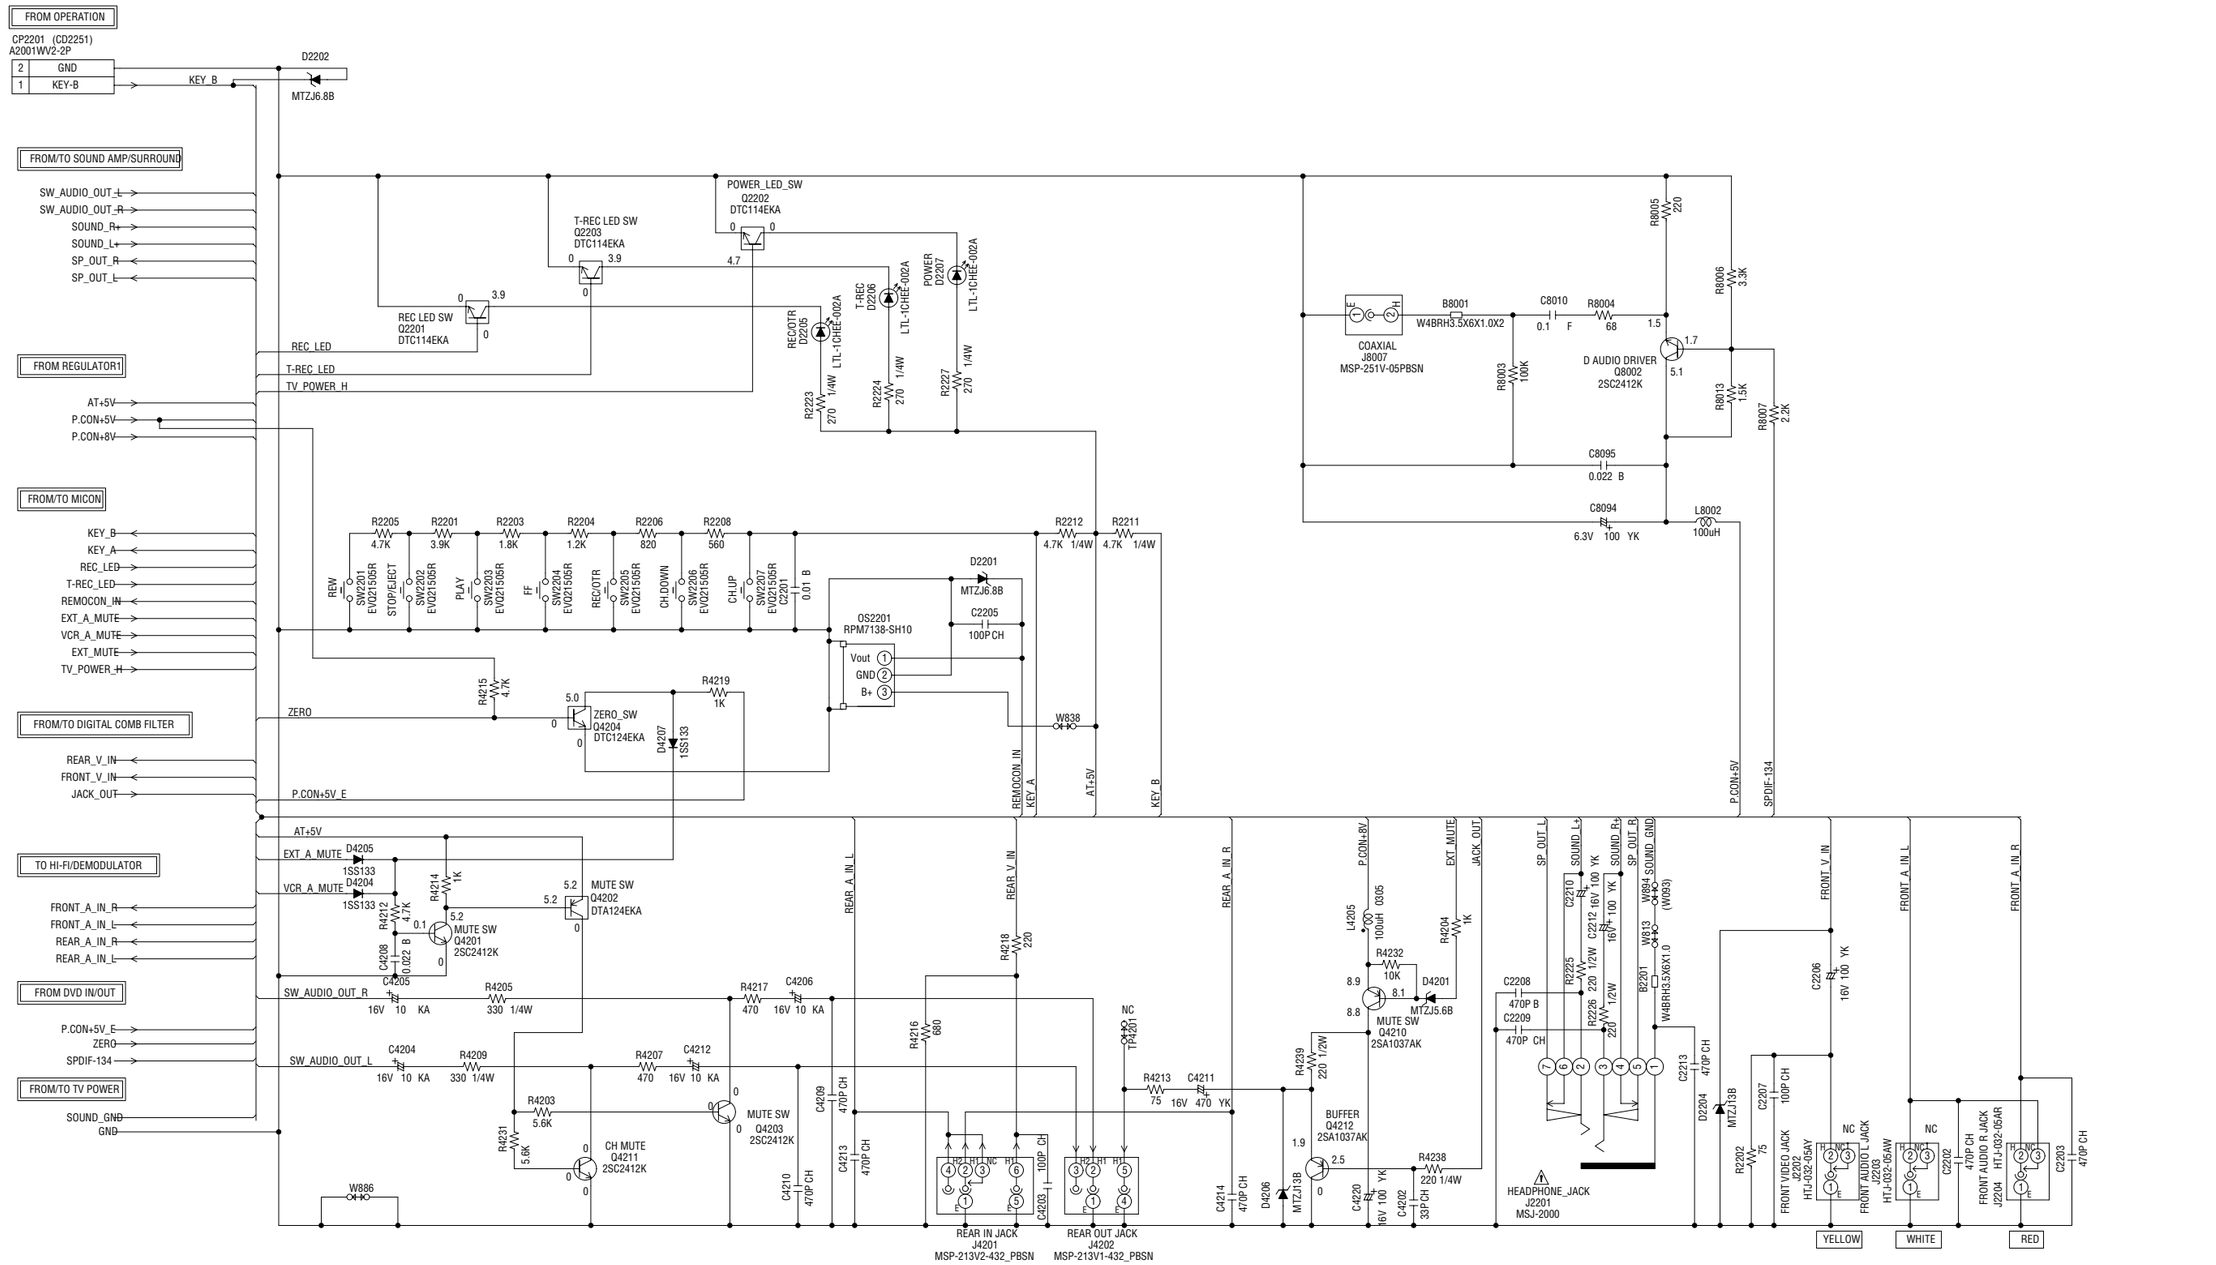

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

IN/OUT SCHEMATIC DIAGRAM

(VCR PCB)

(MW27FN1CR)

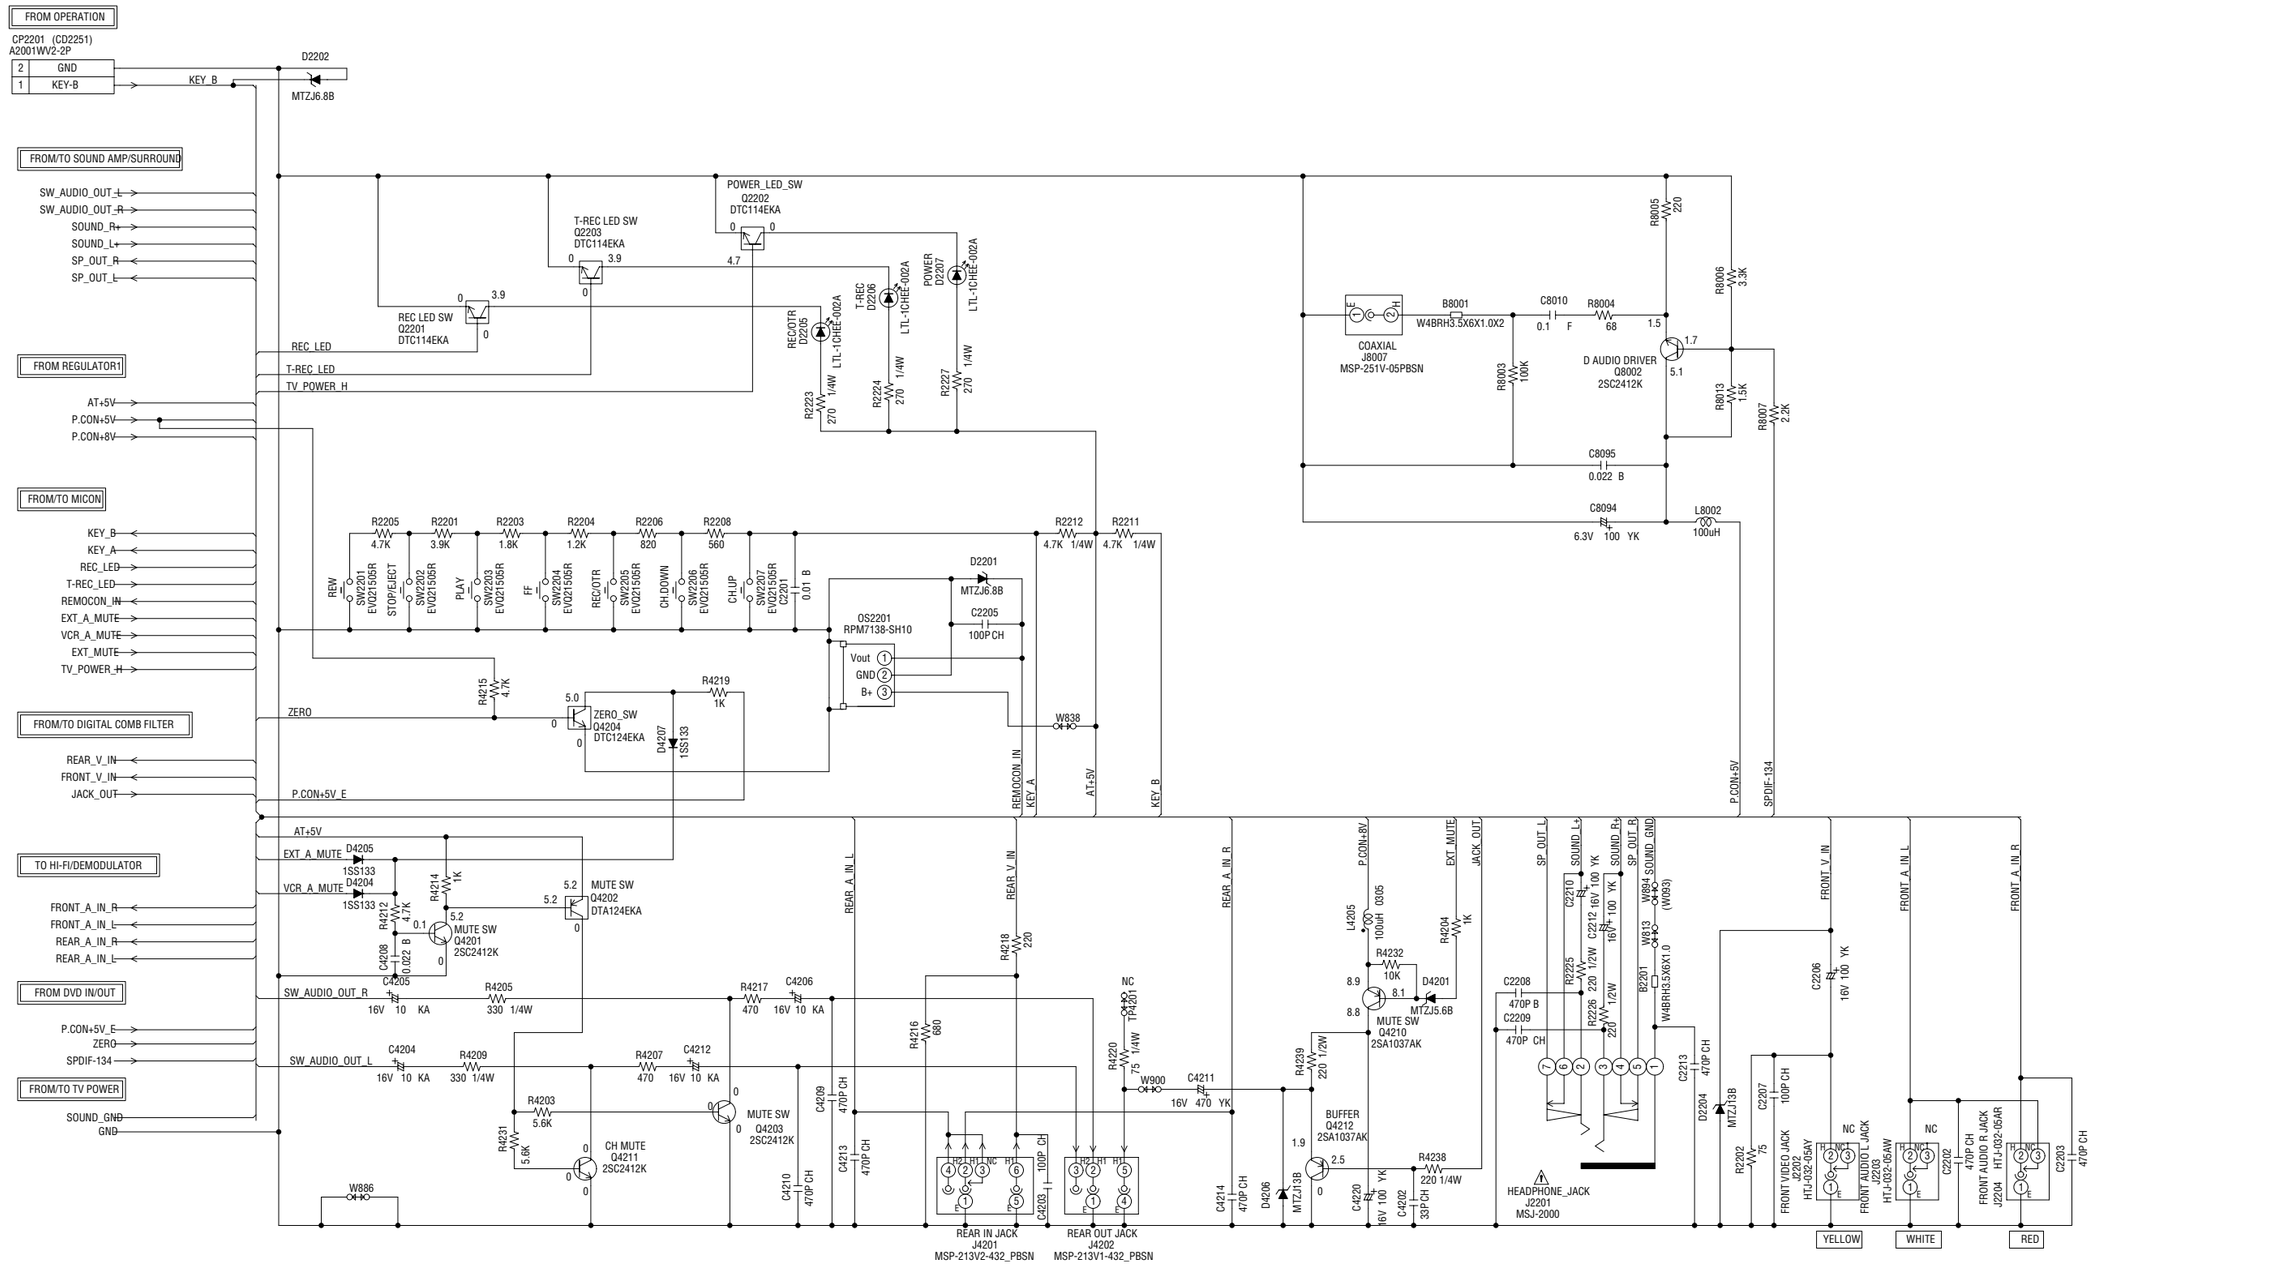

PCB010
VMC293

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR



CHROMA/IF SCHEMATIC DIAGRAM
(VCR PCB)

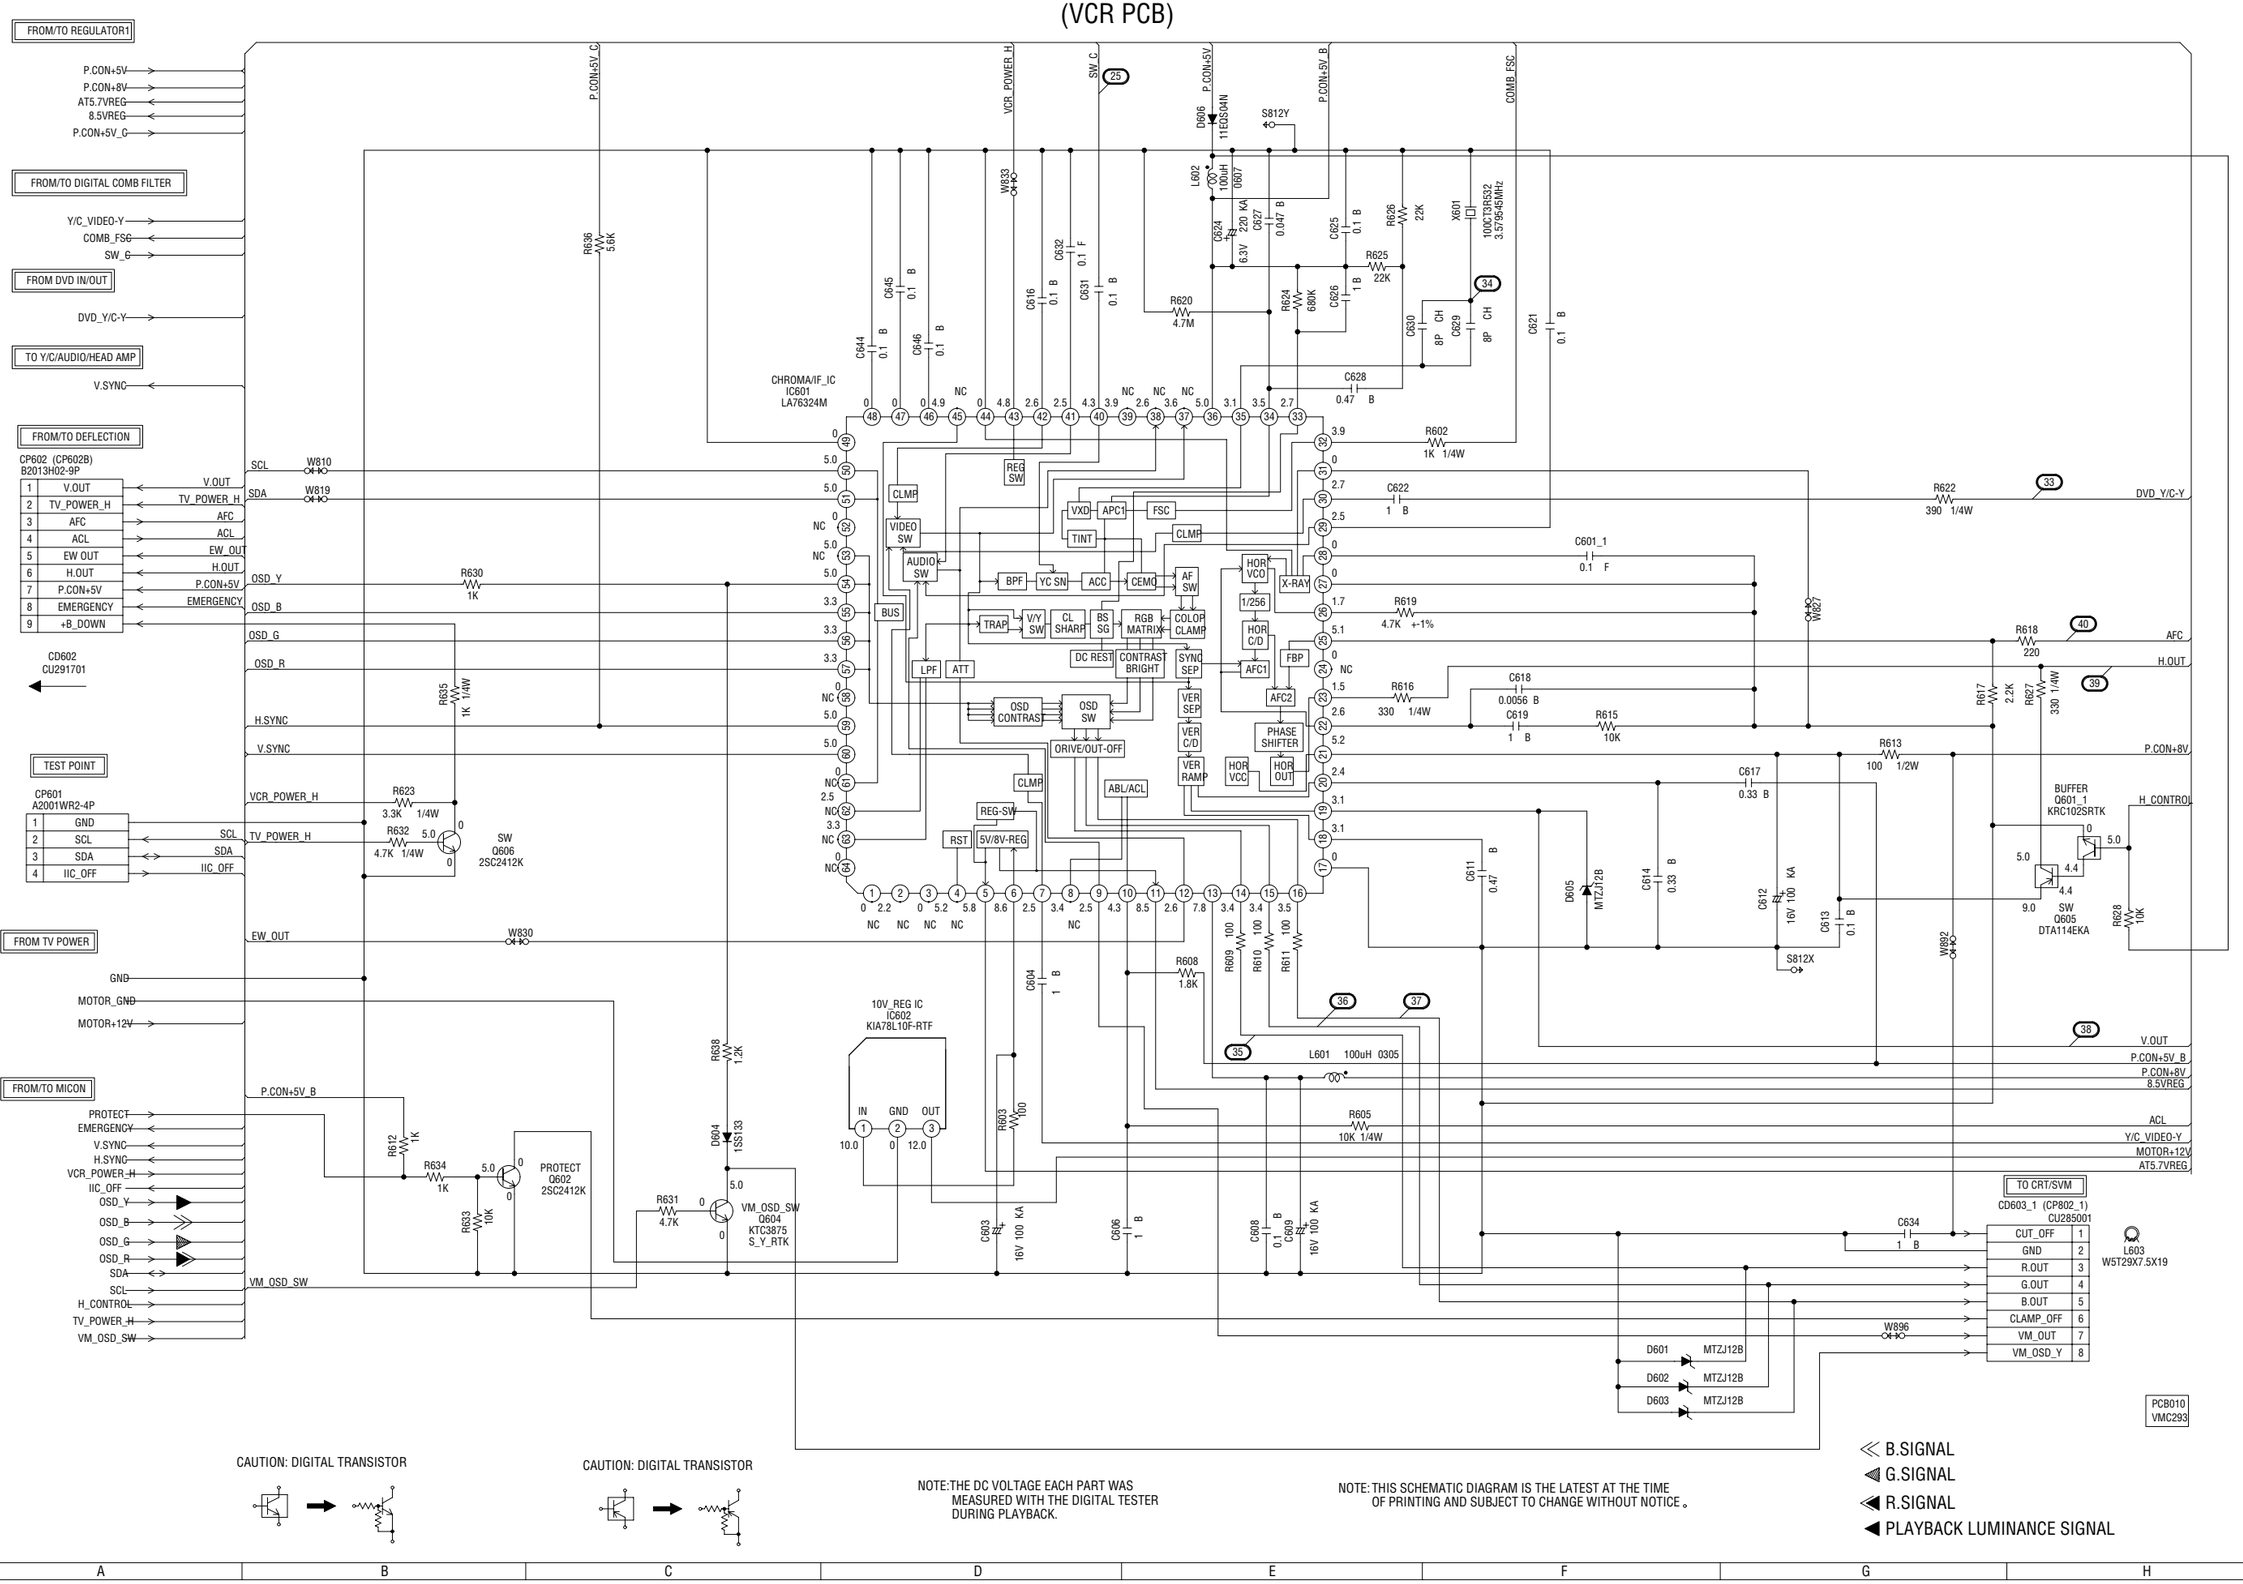

SOUND AMP/SURROUND SCHEMATIC DIAGRAM

(VCR PCB)

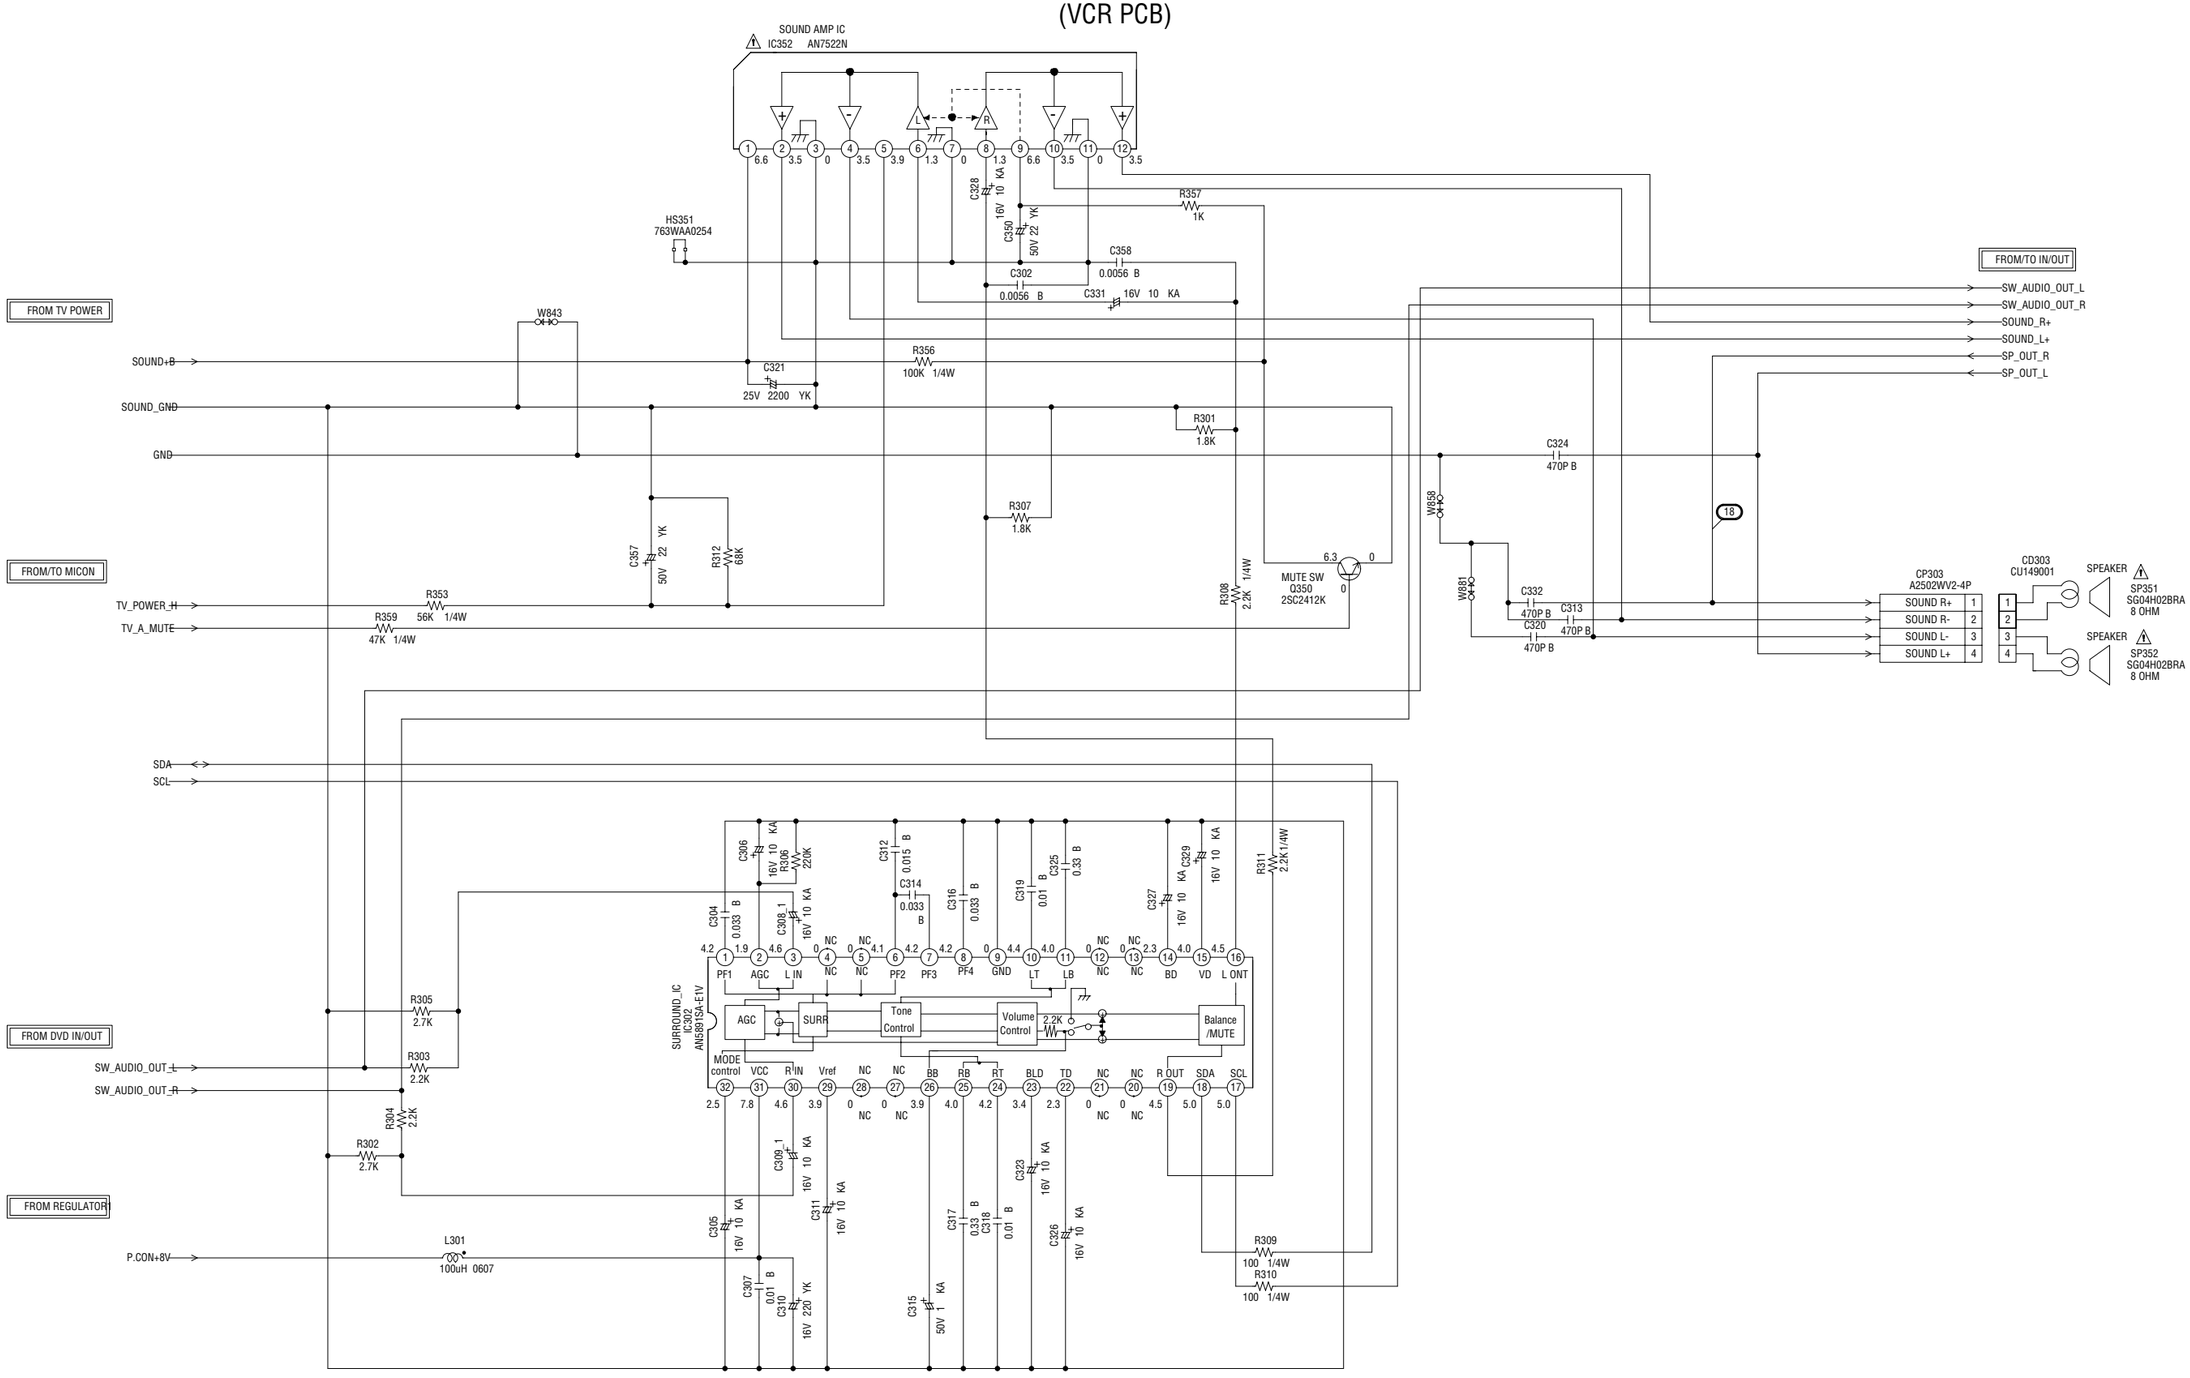

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

Hi-Fi/DEMODULATOR SCHEMATIC DIAGRAM

(VCR PCB)

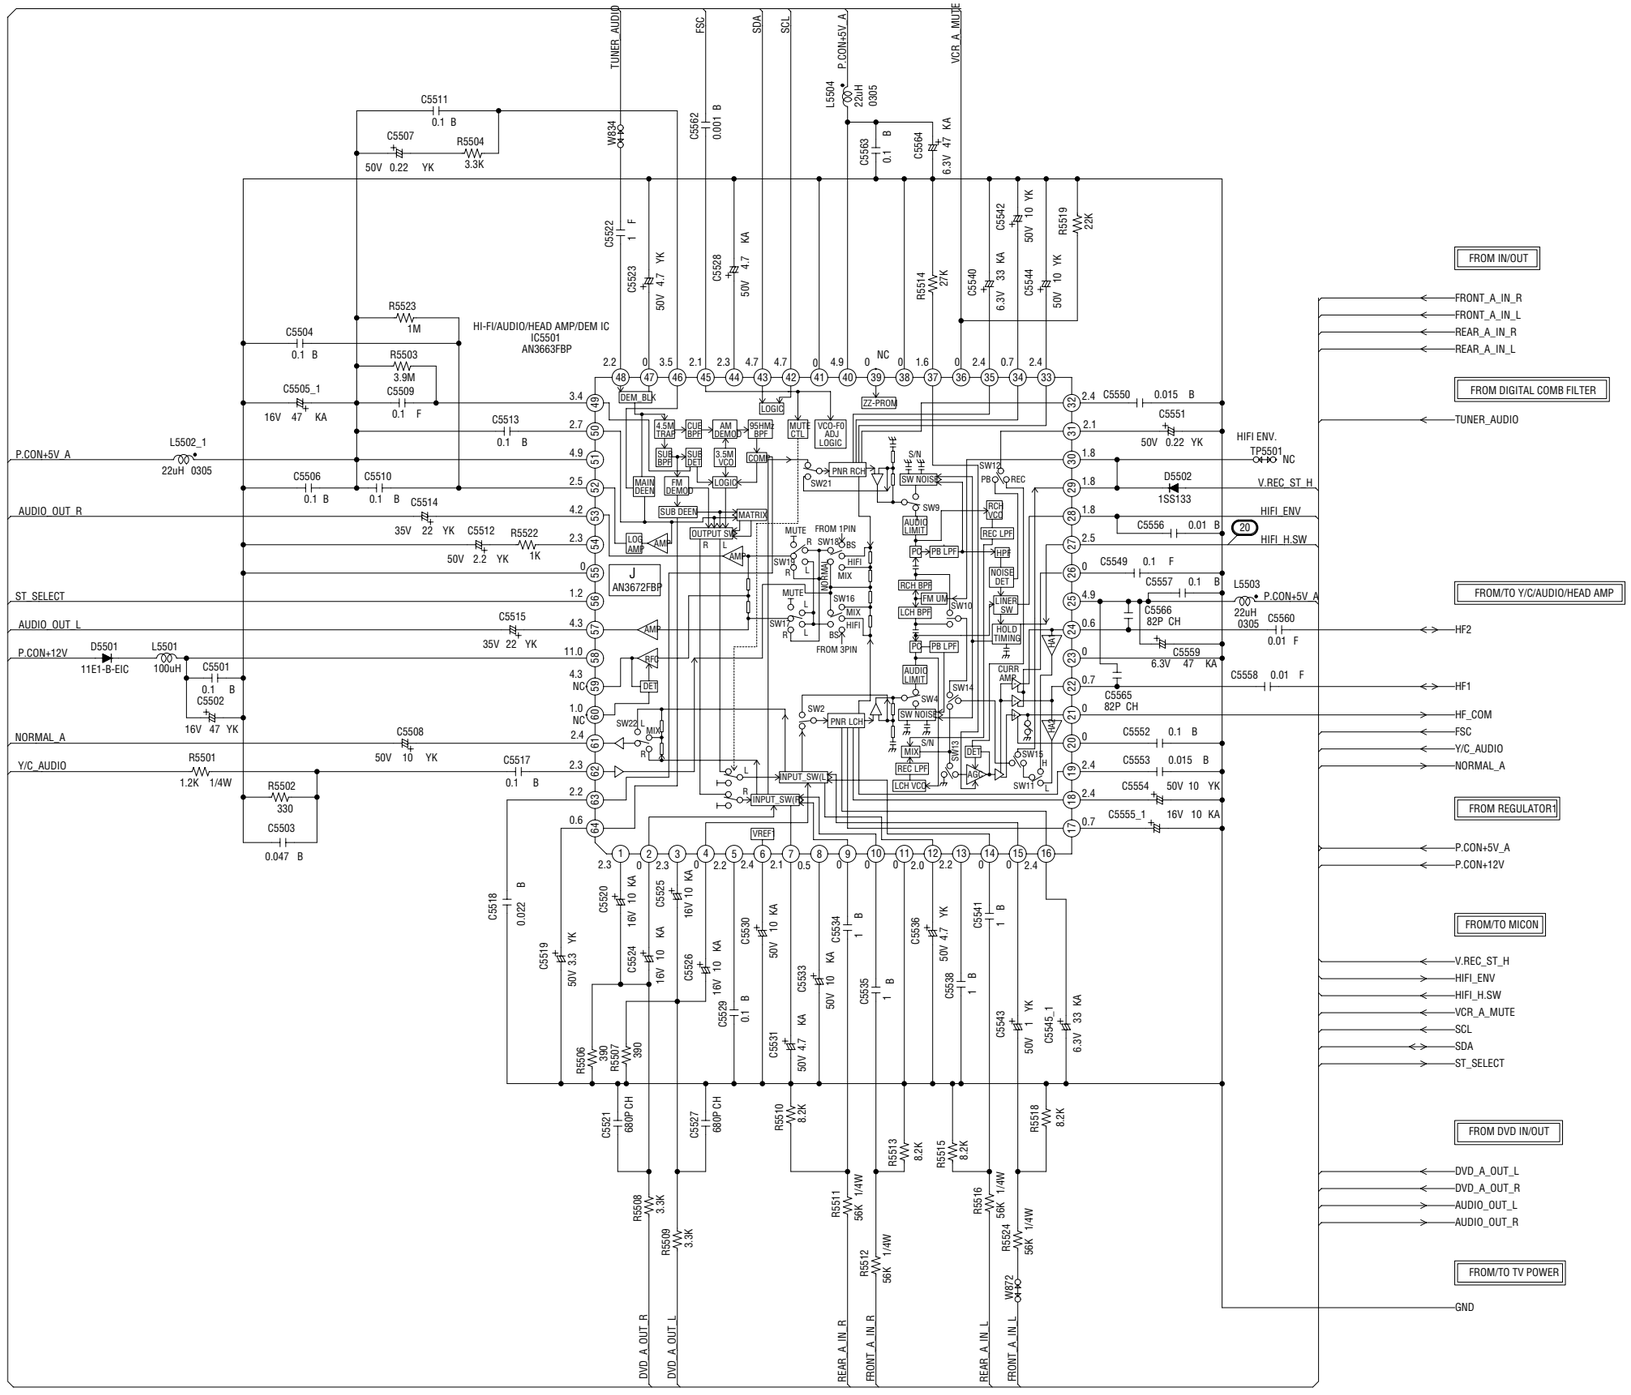

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

DIGITAL COMB FILTER SCHEMATIC DIAGRAM

(VCR PCB)

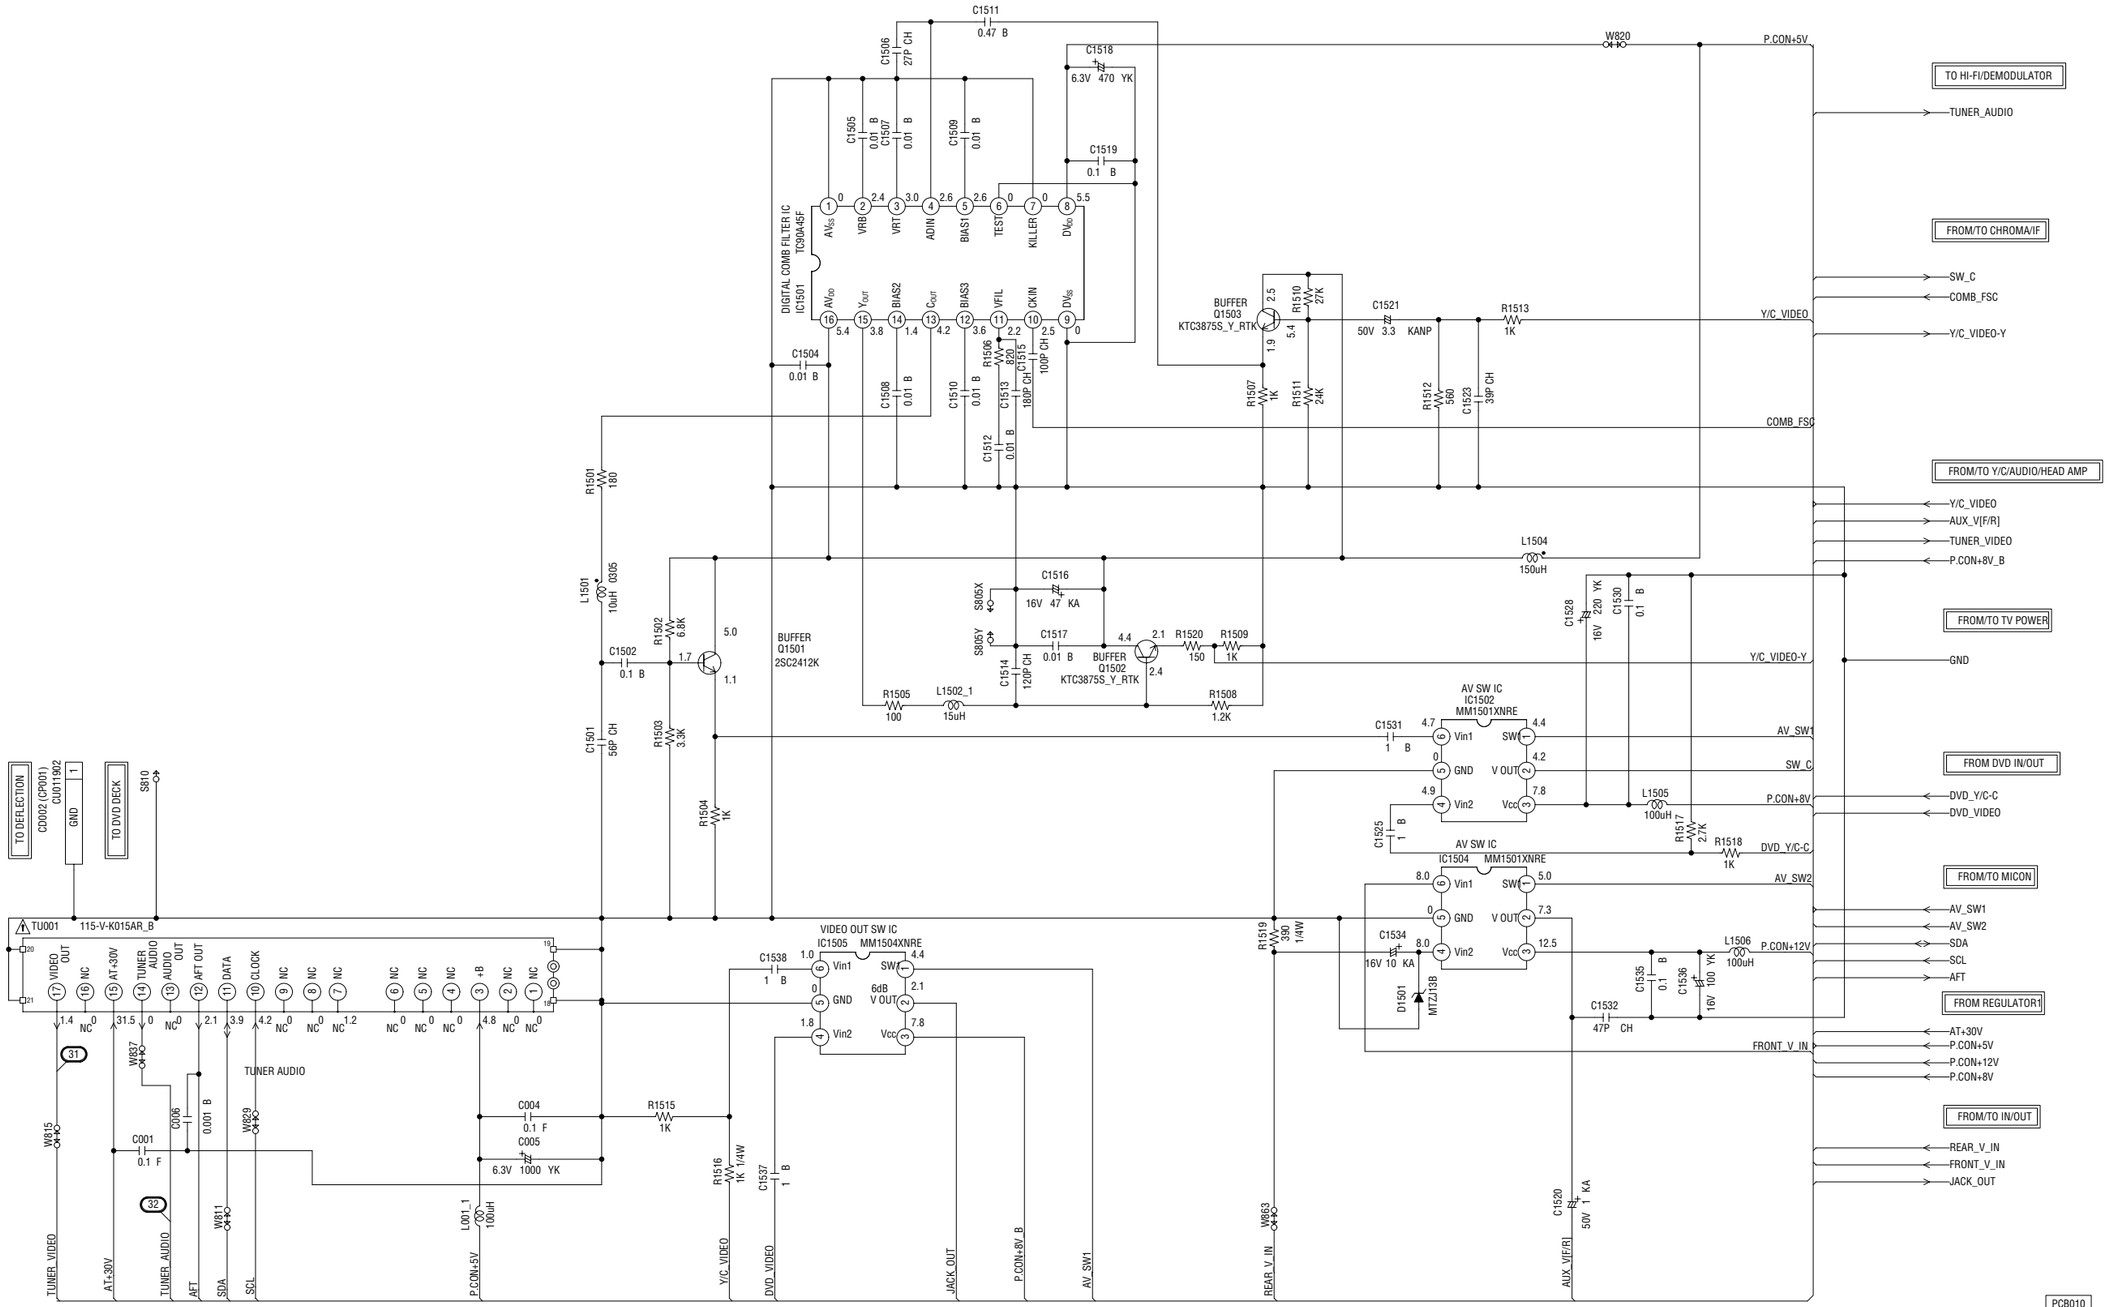

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

DVD IN/OUT SCHEMATIC DIAGRAM

(VCR PCB) (MW27FN1(-R))

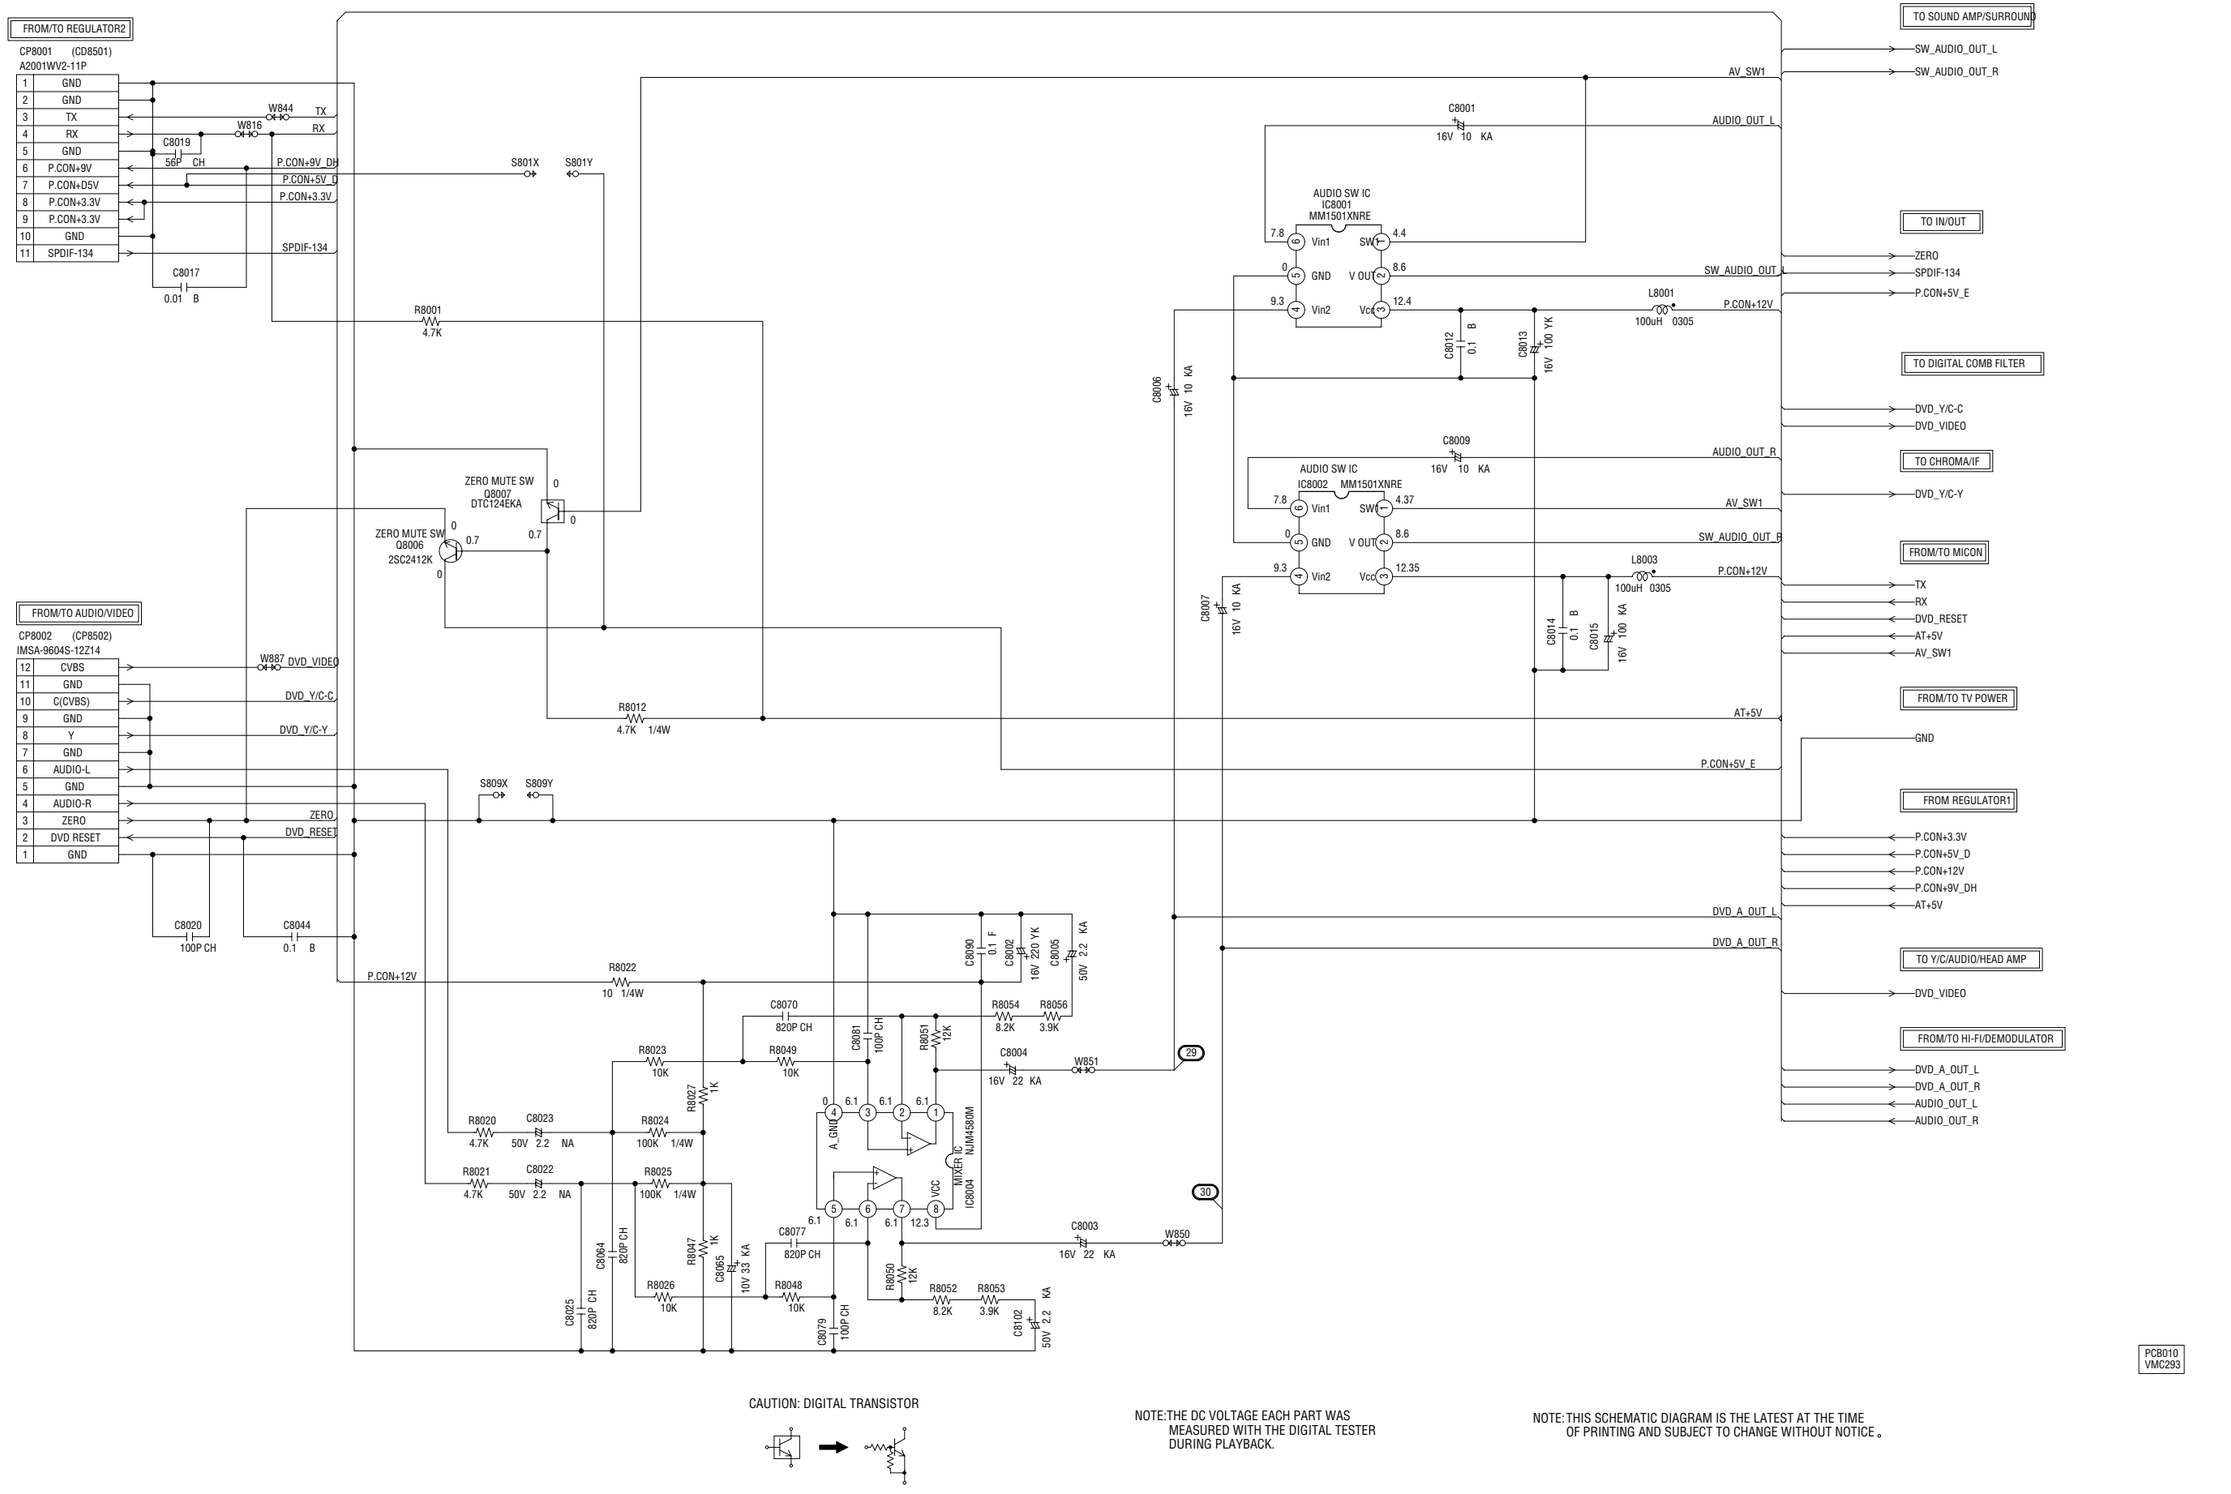

CAUTION: DIGITAL TRANSISTOR

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

DVD IN/OUT SCHEMATIC DIAGRAM

(VCR PCB) (MW27FN1C(-R))

FROM/TO REGULATOR2

CP8001 (CD8501)
A2001WV2-11P

1	GND
2	GND
3	TX
4	RX
5	GND
6	P.CON+9V
7	P.CON+D5V
8	P.CON+3.3V
9	P.CON+3.3V
10	GND
11	SPDIF-134

W844 TX
W816 RX
C8019 56P CH
P.CON+9V_DH
P.CON+5V_D
P.CON+3.3V
SPDIF-134
C8017 0.01 B
S801X S801Y
R8001 4.7K

FROM/TO AUDIO/VIDEO

CP8002 (CP8502)
IMSA-9604S-12Z14

12	CVBS
11	GND
10	C(CVBS)
9	GND
8	Y
7	GND
6	AUDIO-L
5	GND
4	AUDIO-R
3	ZERO
2	DVD RESET
1	GND

W887 DVD_VIDEO
DVD_Y/C-C
DVD_Y/C-Y
ZERO
DVD_RESET
C8020 100P CH
C8044 0.1 B

ZERO MUTE SW Q8007 DTC124EKA
ZERO MUTE SW Q8006 2SC2412K
R8012 4.7K 1/4W
S809X S809Y
P.CON+12V
R8022 10 1/4W

C8001 16V 10 KA
AUDIO SW IC IC8001 MM1501XNRE
AV_SW1
AUDIO_OUT_L
SW_AUDIO_OUT_L
L8001 100uH 0305
P.CON+12V
C8012 0.1 B
C8013 16V 100 YK
C8006 16V 10 KA
C8009 16V 10 KA
AUDIO SW IC IC8002 MM1501XNRE
AUDIO_OUT_R
SW_AUDIO_OUT_R
L8003 100uH 0305
C8007 16V 10 KA
C8014 0.1 B
C8015 16V 100 KA
AT+5V
P.CON+5V_E

C8070 820P CH
C8081 100P CH
R8051 12K
R8054 8.2K
R8056 3.9K
C8090 0.1 F
C8002 16V 220 YK
C8005 50V 2.2 KA
R8023 10K
R8049 10K
C8004 16V 22 KA
W851
29
R8027 1K
R8020 4.7K
C8023 50V 2.2 NA
R8024 100K 1/4W
R8021 4.7K
C8022 50V 2.2 NA
R8025 100K 1/4W
A_GND
MIXER IC NJM4580M(TE1)
IC8004
VCC
30
C8077 820P CH
C8003 16V 22 KA
W850
C8064 820P CH
R8047 1K
C8065 10V 33 KA
R8050 12K
R8026 10K
R8048 10K
R8052 8.2K
R8053 3.9K
C8025 820P CH
C8079 100P CH
C8102 50V 2.2 KA

TO SOUND AMP/SURROUND
SW_AUDIO_OUT_L
SW_AUDIO_OUT_R

TO IN/OUT
ZERO
SPDIF-134
P.CON+5V_E

TO DIGITAL COMB FILTER
DVD_Y/C-C
DVD_VIDEO

TO CHROMA/IF
DVD_Y/C-Y

FROM/TO MICON
TX
RX
DVD_RESET
AT+5V
AV_SW1

FROM/TO TV POWER
GND
P.CON+5V_E

FROM REGULATOR1
P.CON+3.3V
P.CON+5V_D
P.CON+12V
P.CON+9V_DH
AT+5V

TO Y/C/AUDIO/HEAD AMP
DVD_A_OUT_L
DVD_A_OUT_R
DVD_VIDEO

FROM/TO HI-FI/DEMODULATOR
DVD_A_OUT_L
DVD_A_OUT_R
AUDIO_OUT_L
AUDIO_OUT_R

PCB010
VMC293

CAUTION: DIGITAL TRANSISTOR



NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

REGULATOR1 SCHEMATIC DIAGRAM

(VCR PCB)

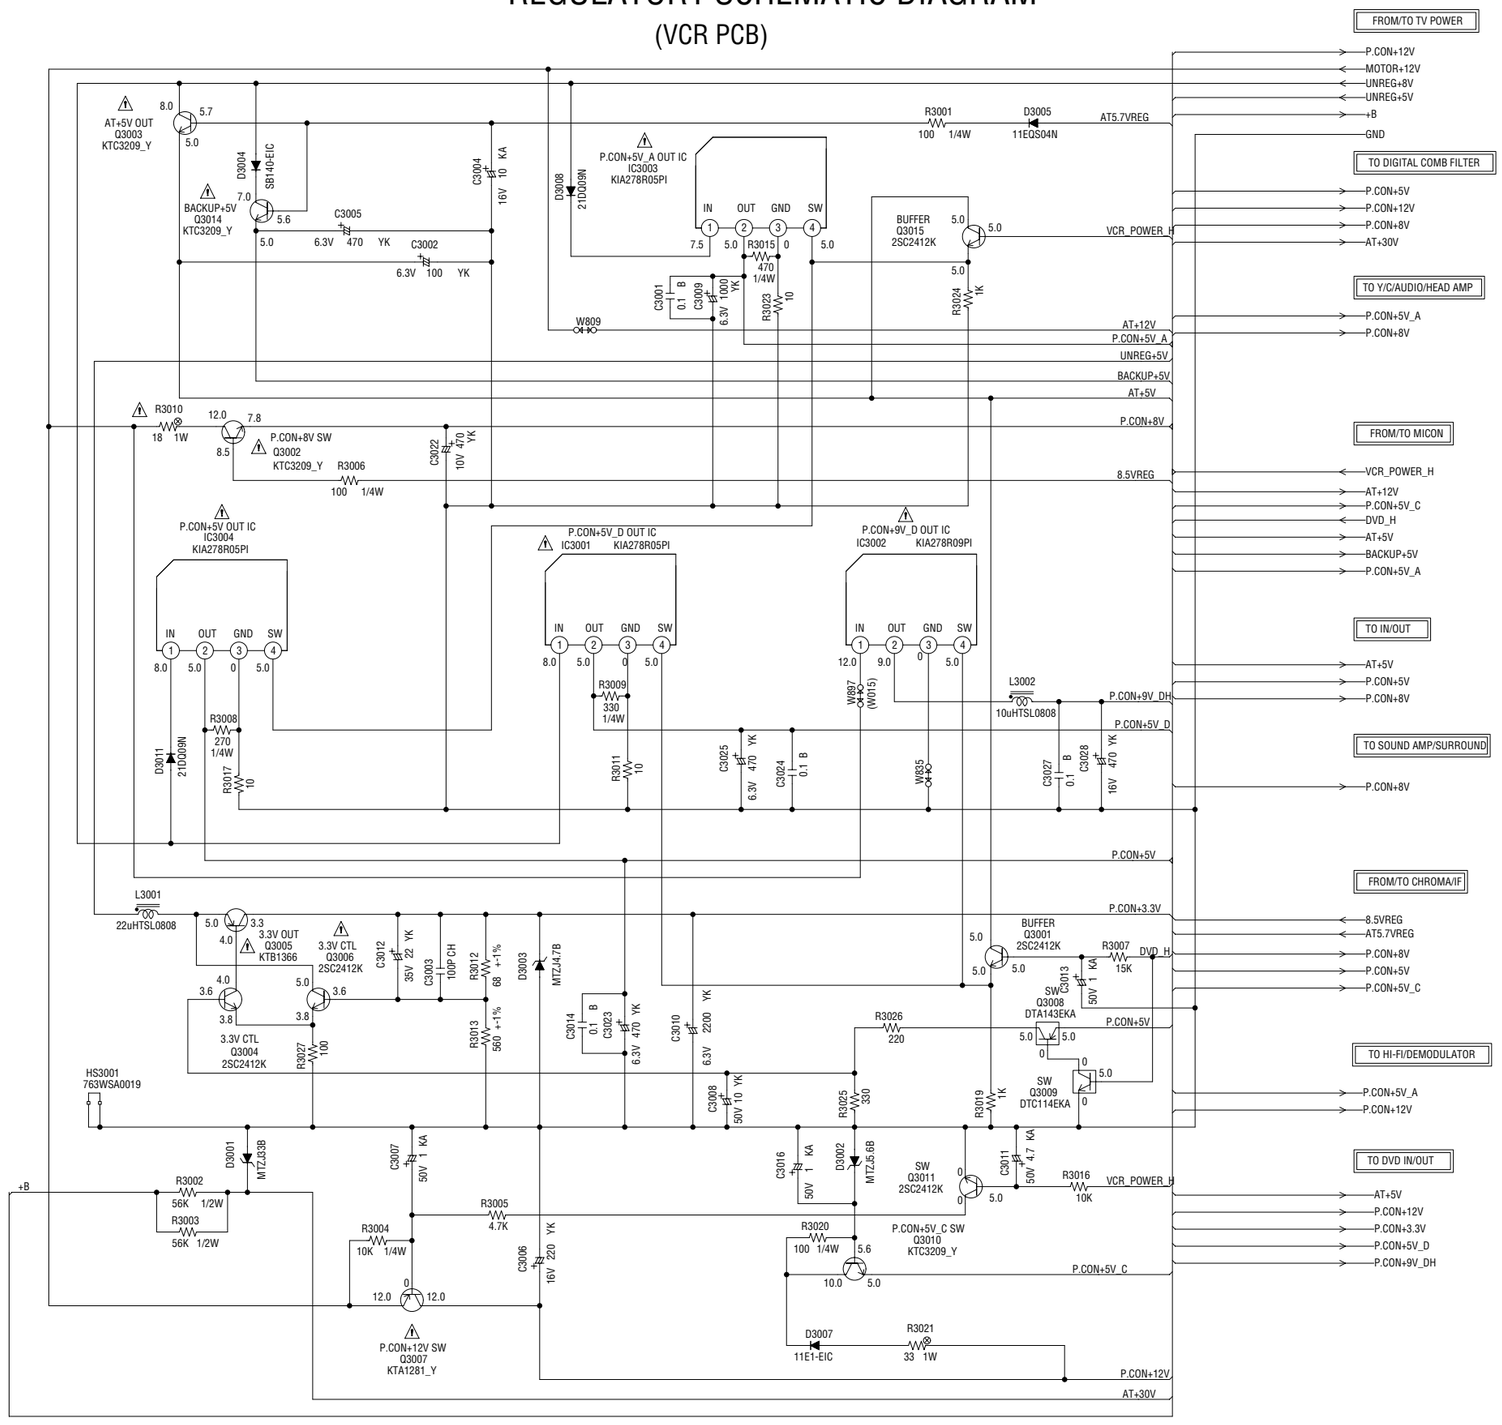

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

CAUTION: DIGITAL TRANSISTOR



CAUTION: DIGITAL TRANSISTOR



TV POWER SCHEMATIC DIAGRAM

(VCR PCB)

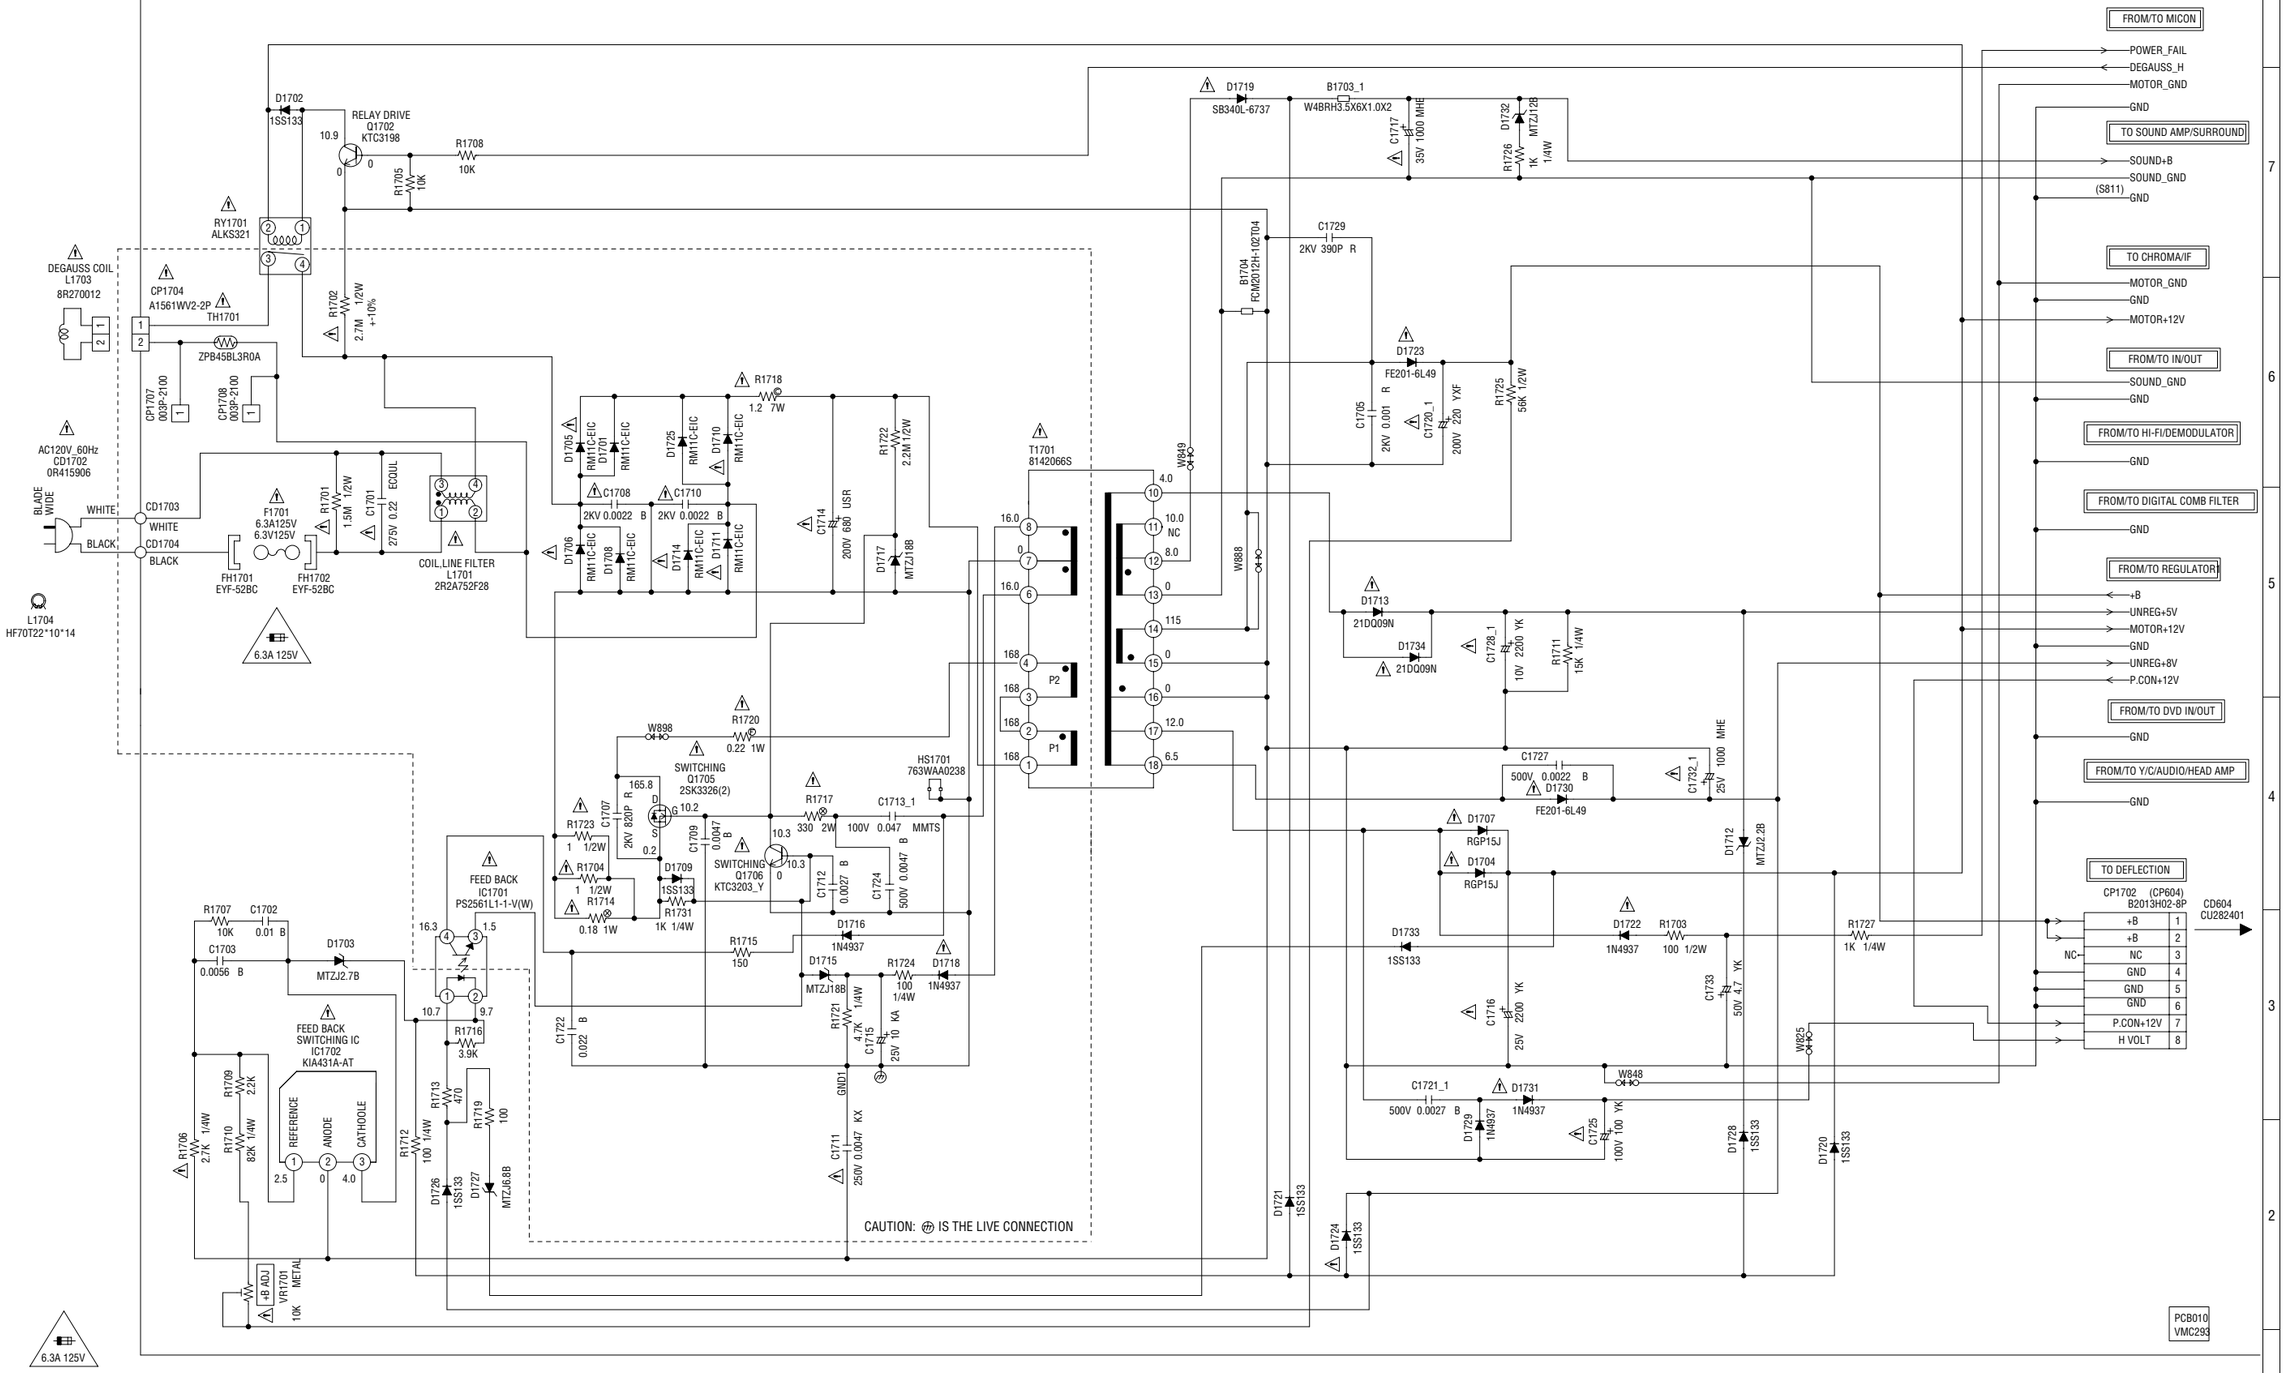

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V (F1701).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTOLISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V (F1701).

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

DEFLECTION SCHEMATIC DIAGRAM
(DEFLECTION PCB)

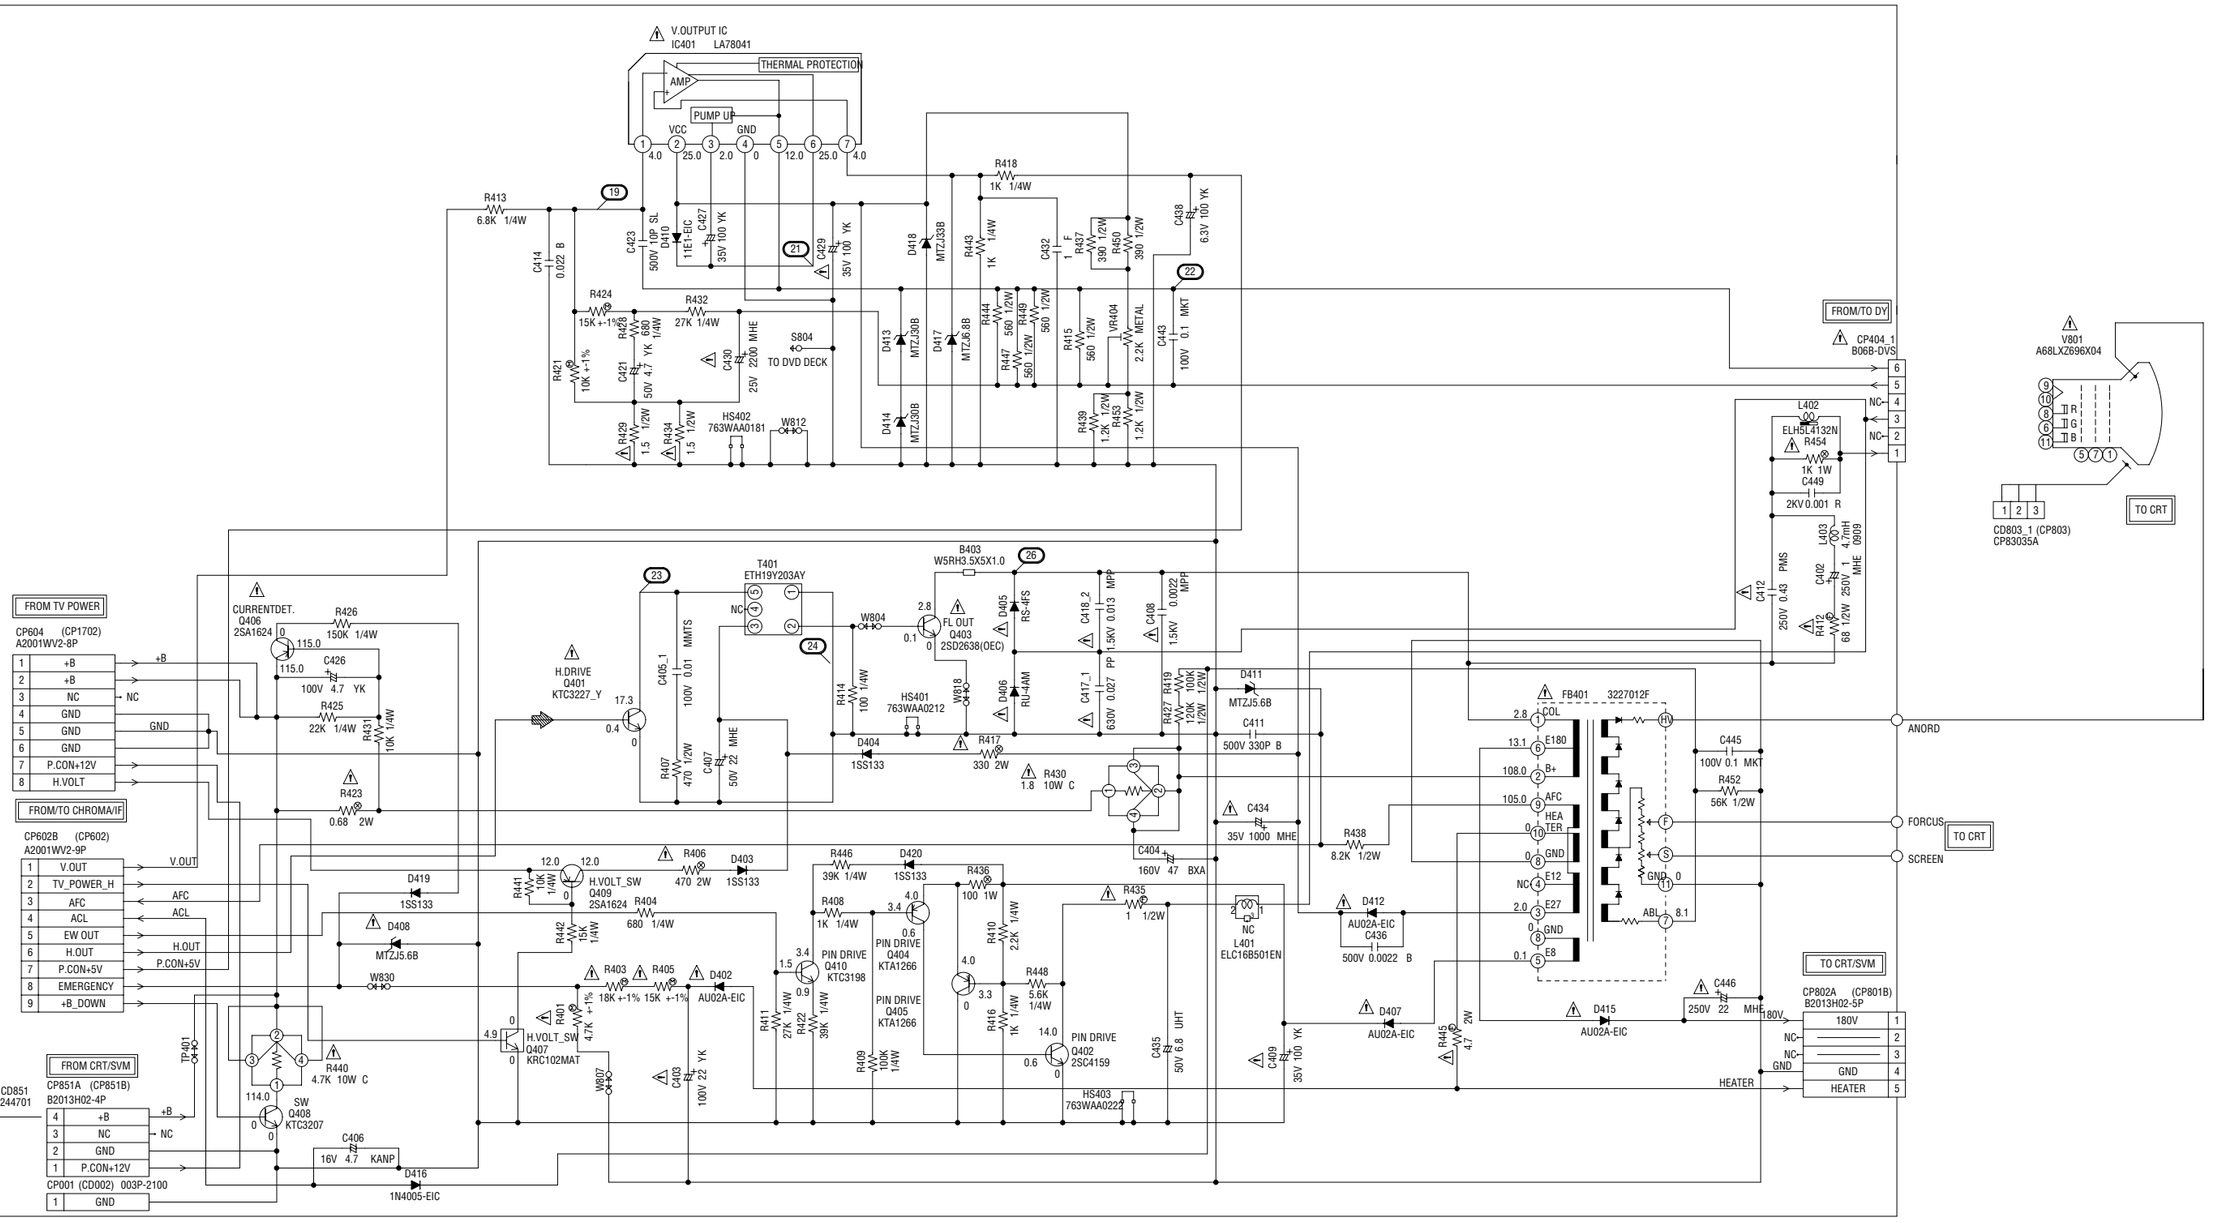

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: DIGITAL TRANSISTOR

OPERATION SCHEMATIC DIAGRAM

(POERATION PCB)

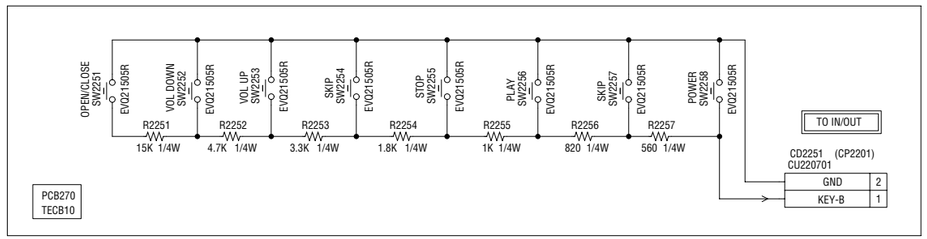

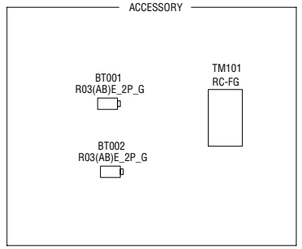

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE:THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

CRT/SVM SCHEMATIC DIAGRAM(CRT PCB)

CRT BLOCK

SVM BLOCK

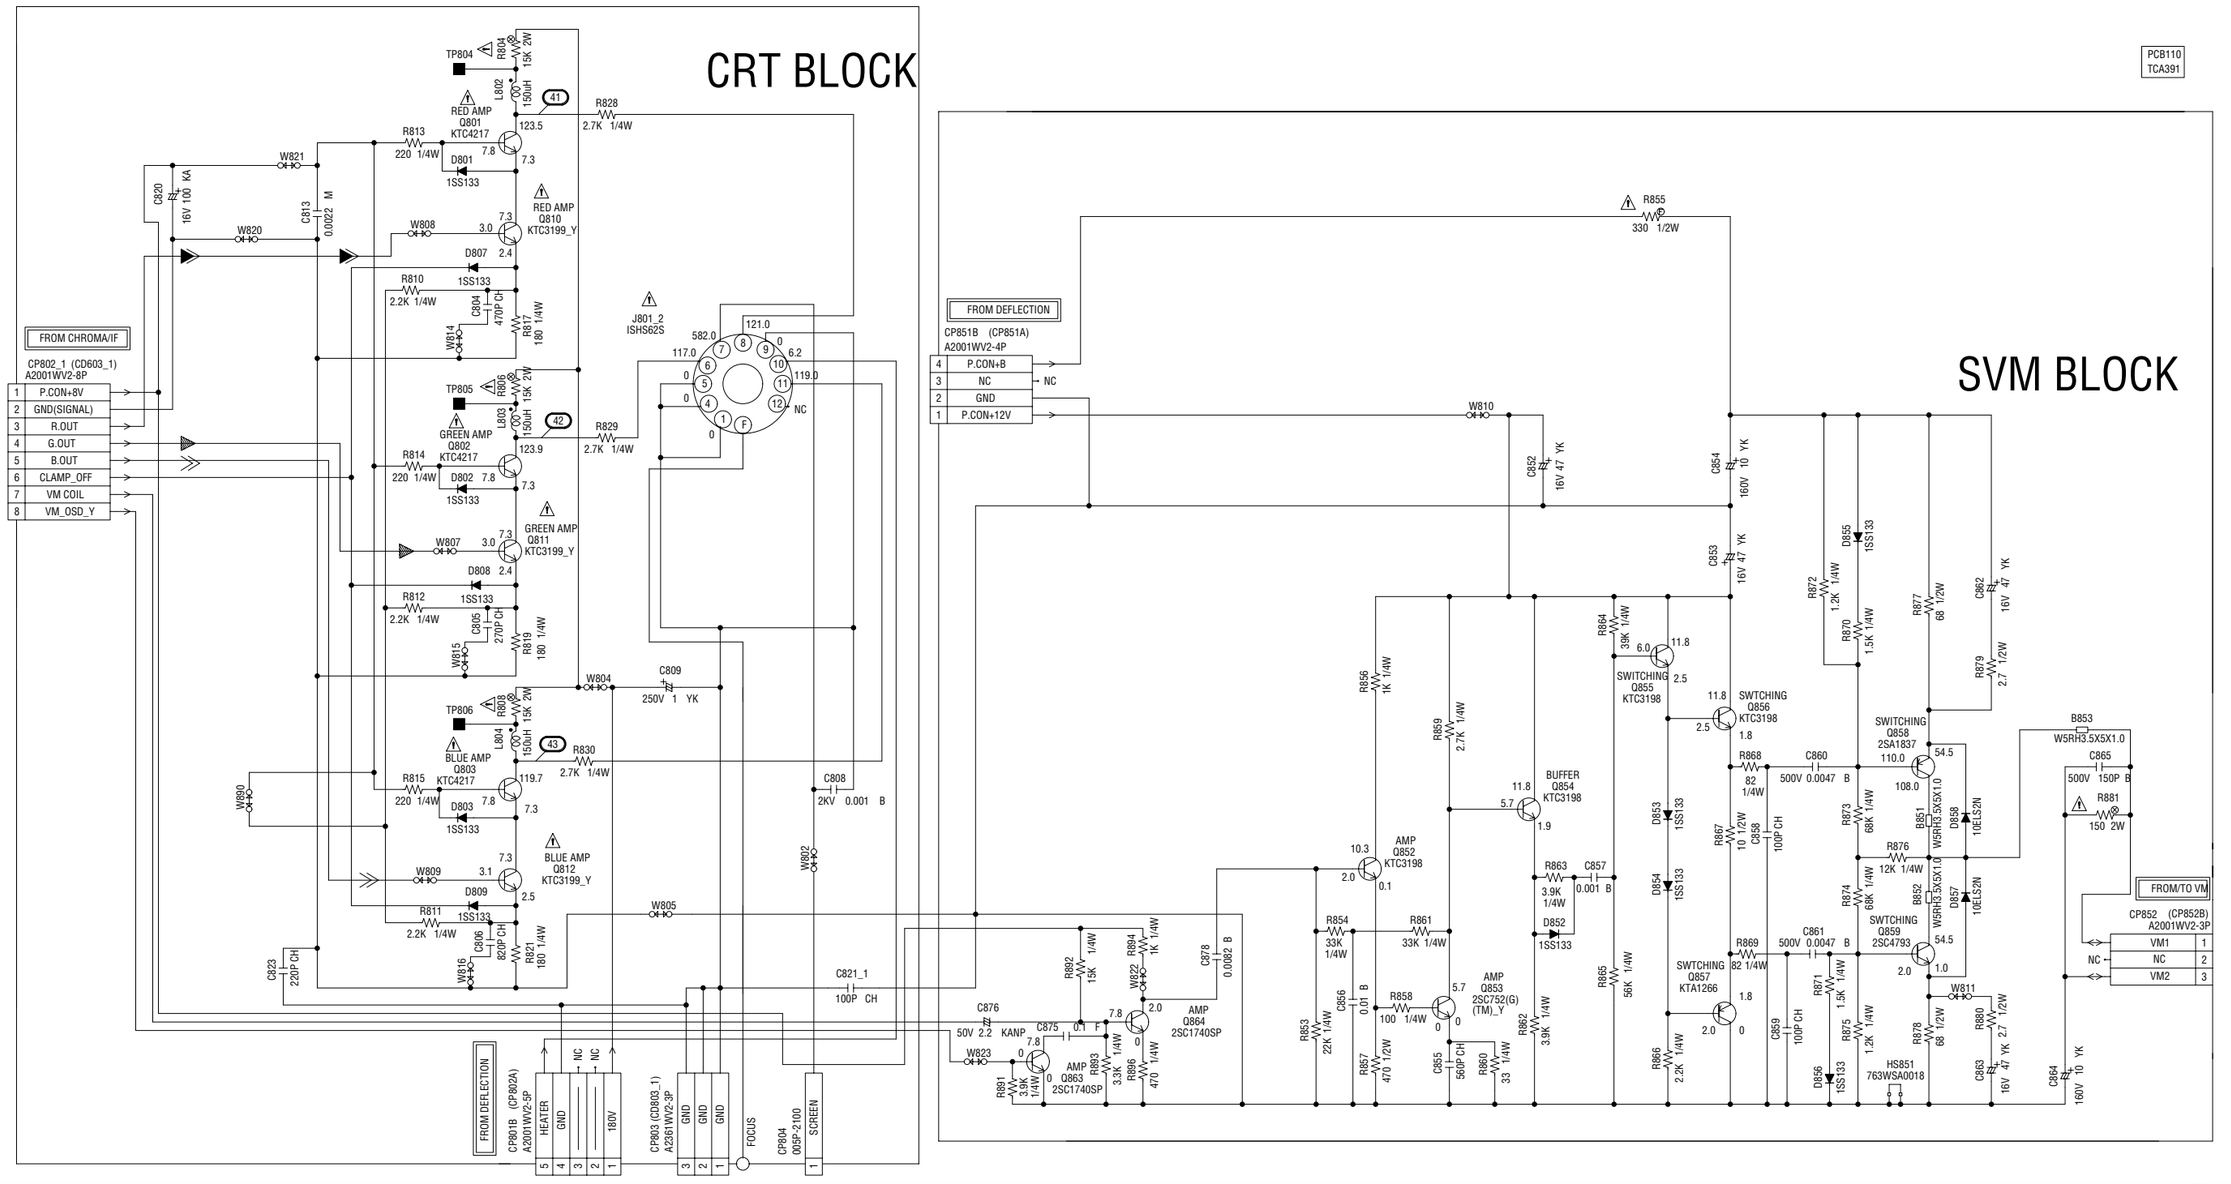

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

◀ R.SIGNAL
◀ G.SIGNAL
≪ B.SIGNAL

SW/RELAY/FG SCHEMATIC DIAGRAM

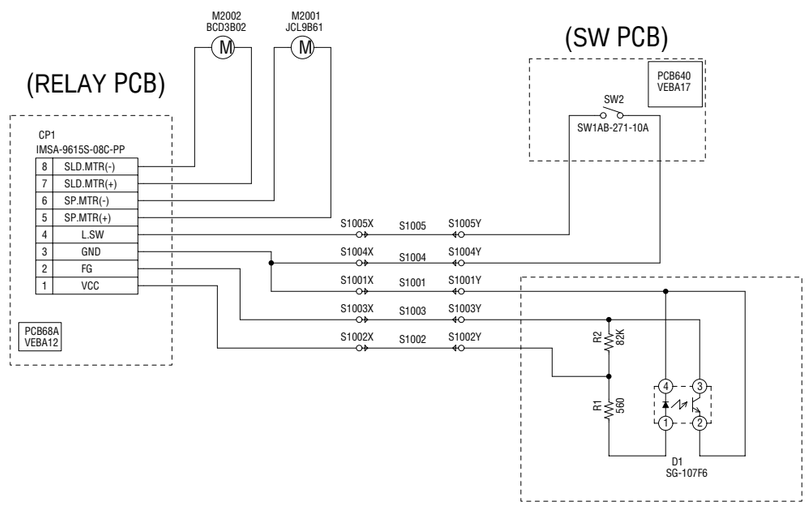

INTERCONNECTION DIAGRAM

DVD DRIVE DM-2

OPTICAL PICK-UP

SPINDLE MOTOR

SLED,LOADING MOTOR

FG SENSER

CD2001		CP2001	
24	24	24	T-
23	23	23	T+
22	22	22	F-
21	21	21	F+
20	20	20	MON(DVD)
19	19	19	NC(SW)
18	18	18	VOL(DVD)
17	17	17	GND(DVD)
16	16	16	LD(DVD)
15	15	15	LD(CD)
14	14	14	VOL(CD)
13	13	13	GND(CD)
12	12	12	MON(COM)
11	11	11	GND(NC)
10	10	10	RF
9	9	9	C
8	8	8	B
7	7	7	A
6	6	6	D
5	5	5	F
4	4	4	E
3	3	3	VCC
2	2	2	VREF
1	1	1	GND(PDIC)

CD2301 FFC		CP2301	
1	1	1	SLD-
2	2	2	SLD+
3	3	3	SP1-
4	4	4	SP1+
5	5	5	LIMIT SW
6	6	6	GND
7	7	7	SP_FG
8	8	8	+5V

CP2302	
1	CLOSE
2	GND(D)
3	OPEN

DVD PCB PCB130 VMC297

CD8505		CP8001
GND	1	1 GND
GND	2	2 GND
TX	3	3 TX
RX	4	4 RX
GND(M)	5	5 GND(M)
P.CON+9V	6	6 P.CON+9V
P.CON+5V	7	7 P.CON+5V
P.CON+3.3V	8	8 P.CON+3.3V
P.CON+3.3V	9	9 P.CON+3.3V
GND	10	10 GND
SPDIF	11	11 SPDIF

L8504

CP8502		CD8501 FFC		CP8002
CVBS	1	1	12	12 CVBS
GND	2	2	11	11 GND
C(CVBS)	3	3	10	10 C(CVBS)
GND	4	4	9	9 GND
Y(G)	5	5	8	8 Y(G)
GND	6	6	7	7 GND
AUDIO-L	7	7	6	6 AUDIO-L
GND	8	8	5	5 GND
AUDIO-R	9	9	4	4 AUDIO-R
ZERO	10	10	3	3 ZERO
DVD RESET	11	11	2	2 DVD RESET
GND	12	12	1	1 GND

CP602	
1	V.OUT
2	TV_POWER_H
3	AFC
4	ACL
5	EW OUT
6	H.OUT
7	P.CON+5V
8	EMERGENCY
9	+B_DOWN

CD602

CP602B		CP001	
9	+B_DOWN	GND	1
8	EMERGENCY		
7	P.CON+5V	CP604	
6	H.OUT	+B	1
5	EW OUT	+B	2
4	ACL	NC	3
3	AFC	GND	4
2	TV_POWER_H	GND	5
1	V.OUT	GND	6
		P.CON+12V	7
		H.VOLT	8

CD604

CD002	
	GND

CP1702	
1	+B
2	+B
3	NC
4	GND
5	GND
6	GND
7	P.CON+12V
8	H.VOLT

CP851A	
4	+B
3	NC
2	GND
1	P.CON+12V

DEFLECTION PCB PCB080 TMC564

CD851

FBT FB401

CP802A				
1	2	3	4	5
180V			GND	HEATER

CP404_1: 6 5 4 3 2 1 (NC, NC)

FOCUS SCREEN

CD603_1	
8	VM_OSD_Y
7	VM_COIL
6	CLAMP_OFF
5	B.OUT
4	G.OUT
3	R.OUT
2	GND
1	CUT_OFF

CP804		CP801B				
SCREEN	FOCUS	1	2	3	4	5
		HEATER		GND		180V

CRT SOCKET J801_2

V801 H.V ANODE CRT

DEGAUSS COIL L1703

L603

CP1704	
1	DEGAUSS COIL
2	DEGAUSS COIL

CRT PCB PCB110 TCA391

CP802_1	
VM_OSD_Y	8
VM_COIL	7
CLAMP_OFF	6
B.OUT	5
G.OUT	4
R.OUT	3
GND	2
CUT_OFF	1

BLADE WIDE

WHITE CD1703

BLACK CD1704

AC120V_60Hz CD1702

L1704

VM COIL PCB PCBD80 TEAA93

CP852B	
VM1	1
NC	2
VM2	3

CP851B	
4	+B
3	NC
2	GND
1	P.CON+12V

CP852: VM1 NC VM2 (1 2 3)

CP803: GND GND GND (3 2 1)

CD801

VCR PCB PCB010 VMC293

RELAY PCB PCB68A VEBA12

VCC	1
FG	2
GND	3
L.SW	4
SP.MTR(+)	5
SP.MTR(-)	6
SLD.MTR(+)	7
SLD.MTR(-)	8

OPERATION PCB PCB270 TECB10

CD2251 GND KEY-B (2 1)

CP2201 GND KEY-B (2 1)

SPEAKER SP351 8 OHM

SPEAKER SP352 8 OHM

CD303 (1 2 3 4)

CP303 SOUND R+ SOUND R- SOUND L- SOUND L+ (1 2 3 4)

COMMAND TRANSMITTER TM101

TO OS2201

REMOCON SENSOR OS2201 GND B+ Vout

FROM TM101

FULL ERASE HEAD ASS'Y H5002

CP4503 FE HEAD(HOT) FE HEAD(GND) (1 2)

HALL SENSOR, MAIN COIL, ROTOR MAGNET, MR FG SENSOR (VCC O G)

HALL VCC, HALL IN, OUT SWITCH LOGIC

CP101		
1	CAP FG	1
2	CAP VCO	2
3	VCC	3
4	CAP.M/F/R	4
5	I LIMIT	5
6	MOTOR GND	6
7	GND	7
8	LD/CY VCO	8
9	CAP CTL	9
10	LDM CTL	10
11	CYL FG/PG	11
12	CYL CTL	12

CAPSTAN DD UNIT ASS'Y M2001

FFC (1 2 3 4 5 6 7)

RED LM WHITE

LOADING MOTOR M101

D-PG GND, D-PG OUT, M-GND, D-COM, D-W OUT, D-V OUT, D-U OUT

CYLINDER UNIT ASS'Y UN4001

TU001

	21	20
17		VIDEO OUT
NC	16	NC
15		AT+30V
14		TUNER AUDIO
NC	13	AUDIO OUT
12		AFT OUT
11		DATA
10		CLOCK
NC	9	NC
NC	8	NC
NC	7	NC
NC	6	NC
NC	5	NC
NC	4	NC
3		+B
NC	2	NC
NC	1	NC
	H8	H9

CP4501			FPC
HF1 (R)	9	9	HI-FI HEAD
HF COM	8	8	
HF2 (L)	7	7	
SP-CH1 (R)	6	6	SP HEAD
SP COM	5	5	
SP-CH2 (L)	4	4	
EP/LP-CH1 (R)	3	3	EP/LP HEAD
EP/LP COM	2	2	
EP/LP-CH2 (L)	1	1	

CP4502			FFC	HEAD AUDIO CONTROL ASS'Y H5001	
AUDIO_REC	6	6	6	6 AUDIO PB	AUDIO
AUDIO_PB	5	5	5	5 AUDIO REC	
CTL+	4	4	4	4 CTL+	CONTROL
CTL-	3	3	3	3 CTL-	
AE HEAD(+)	2	2	2	2 AE HEAD(-)	AE
AE HEAD(-)	1	1	1	1 AE HEAD(+)	

HEADPHONE_JACK J2201

REAR OUT JACK J4202 (E 1 E 5 2 3 TH1 H1 NC1)

REAR IN JACK J4201 (E 5 1 E 6 3 2 4 TH1 NC1 H1 NC1)

COAXIAL J8007 (1 E 2 H)

FRONT AUDIO R JACK J2204 (E 1 3 2 TH1 NC1 H1) RED

FRONT AUDIO L JACK J2203 (E 1 3 2 TH1 NC1 H1) WHITE

FRONT VIDEO JACK J2202 (E 1 3 2 TH1 NC1 H1) YELLOW

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

WAVEFORMS

RF_AMP/DSP

100ns
100mV

①

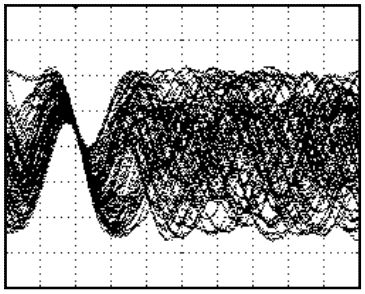

10µs
100mV

⑥

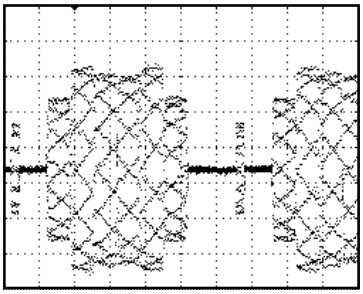

20ns
200mV

②

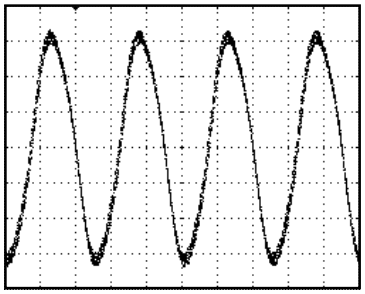

10µs
200mV

⑦

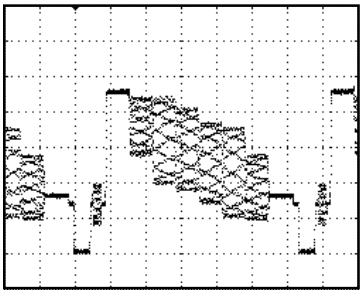

MOTOR DRIVE

2ms
1.0V

③

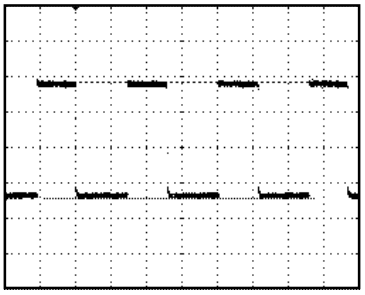

500µs
500mV

⑧

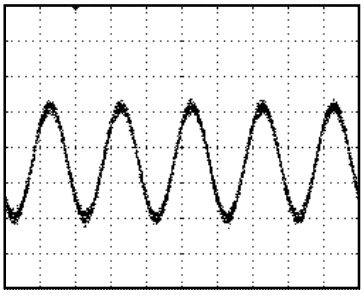

MPEG

20ns
500mV

④

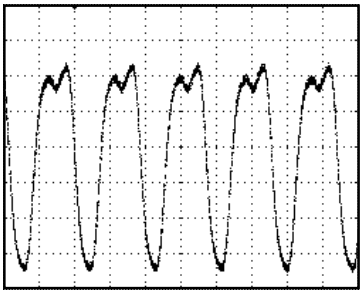

500µs
500mV

⑨

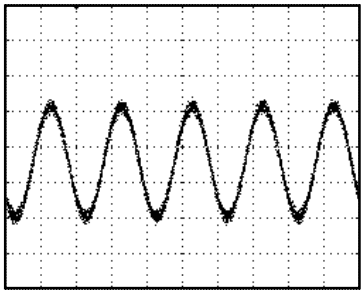

AUDIO/VIDEO

10µs
200mV

⑤

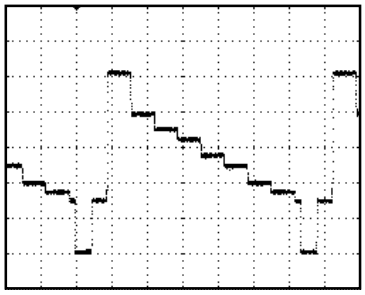

REGULATOR 2

100ns
500mV

⑩

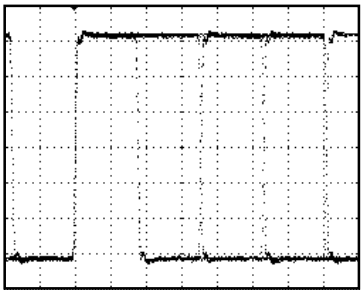

Y/C/AUDIO/HEAD AMP

20µs
1.0V

⑪

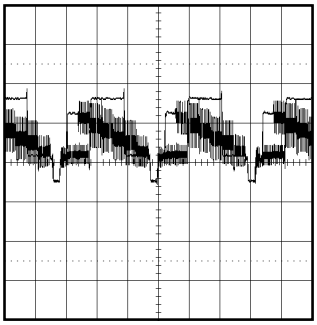

2µs
1.0V

⑫

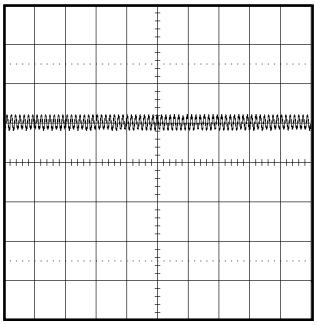

1ms
1.0V

⑬

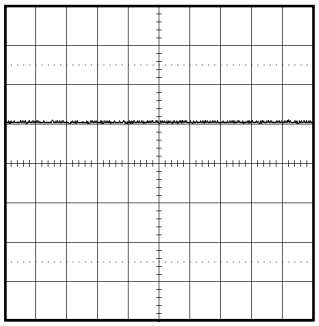

5ms
2.0V

⑭

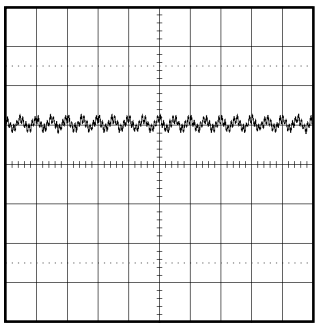

20µs
20V

⑮

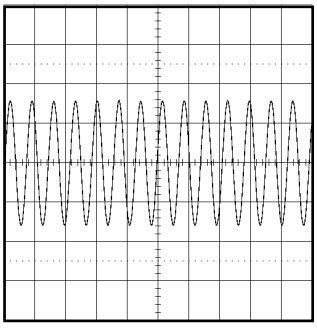

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

MICON

20ms
2.0V

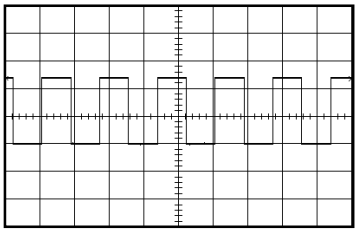

⑯

1ms
2.0V

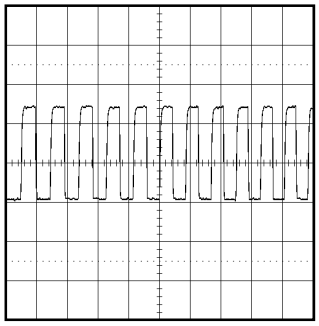

⑰

SOUND AMP/SURROUND

1ms
200mV

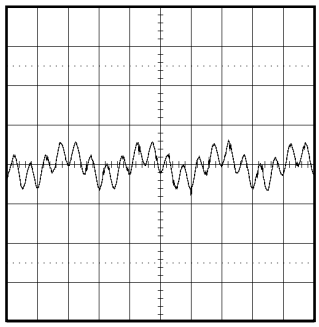

⑱

DEFLECTION

10ms
0.5V

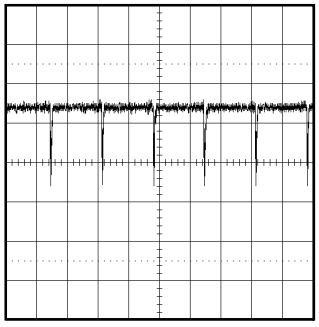

⑲

Hi-Fi/DEMODULATOR

1ms
1.0V

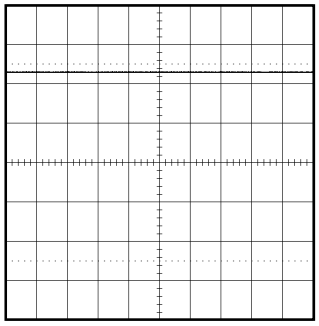

⑳

DEFLECTION

10ms
10V

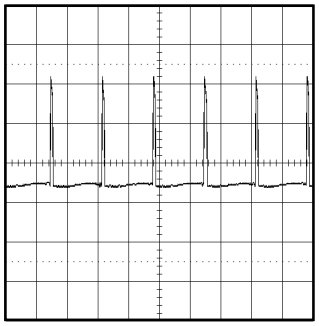

㉑

10ms
10V

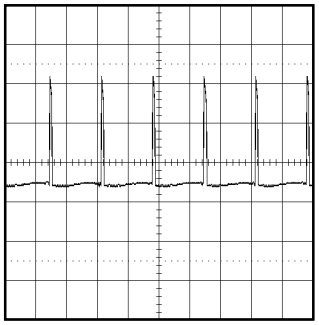

㉒

50µs
10V

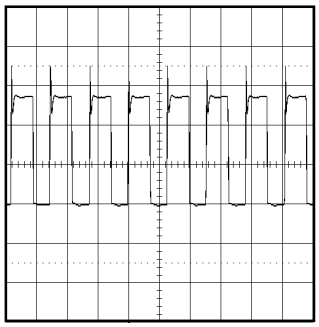

㉓

50µs
5.0V

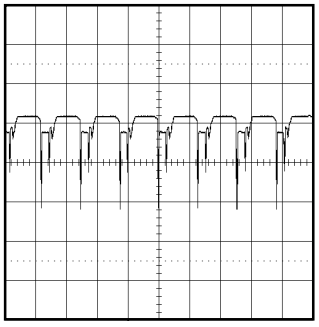

㉔

CHROMA/IF

20µs
0.5V

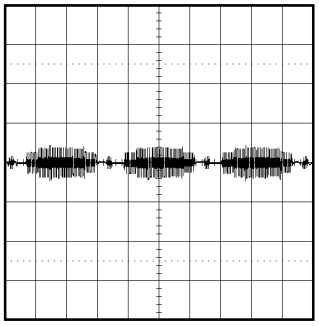

㉕

DEFLECTION

20µs
200V

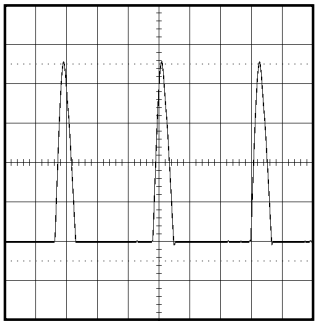

㉖

MICON

50µs
2.0V

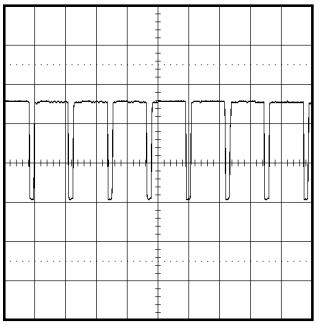

㉗

10ms
2.0V

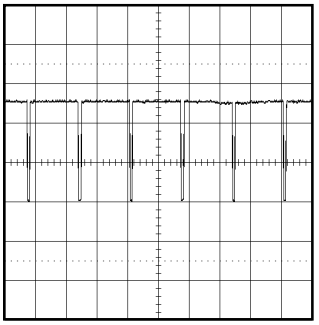

㉘

DVD IN/OUT

1ms
2.0V

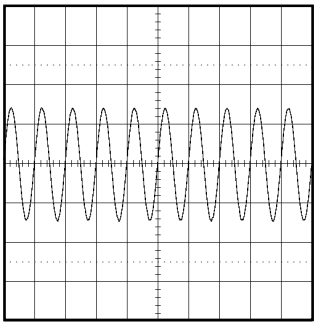

㉙

1ms
2.0V

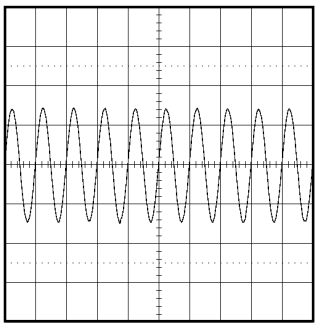

㉚

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

DIGITAL COMB FILTER

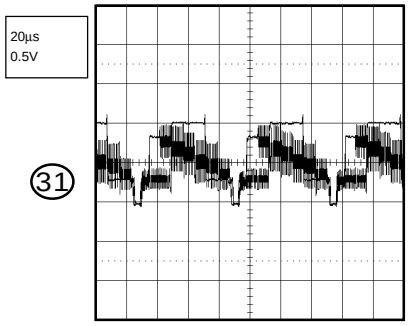

31

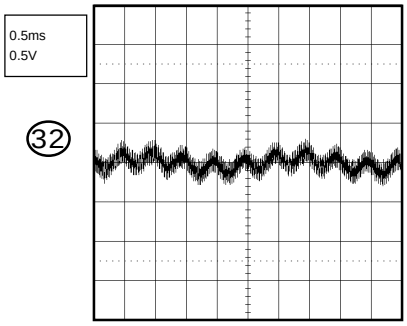

32

CHROMA/IF

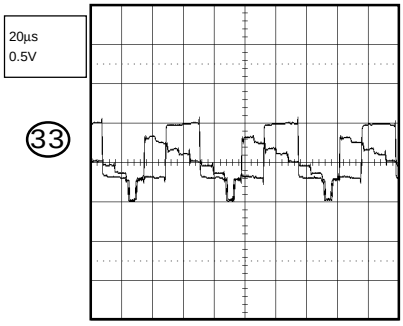

33

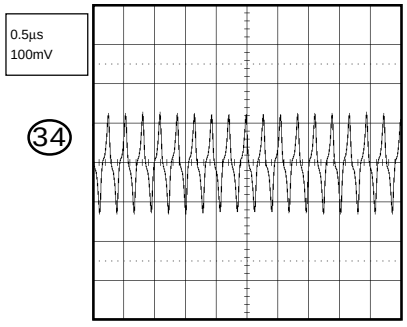

34

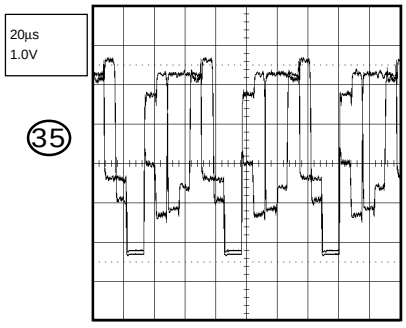

35

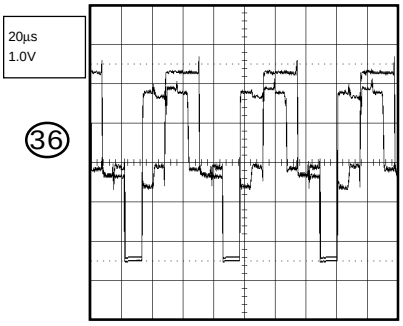

36

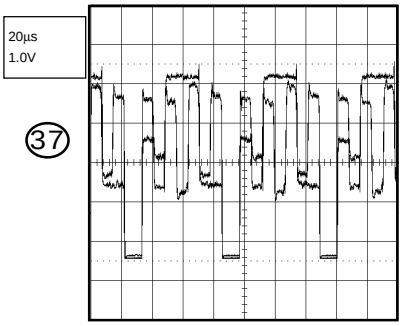

37

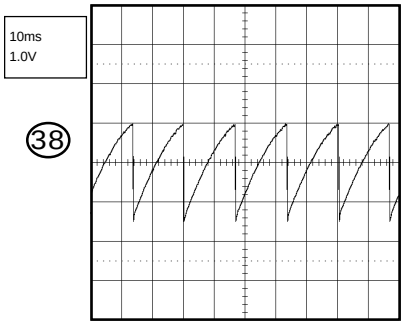

38

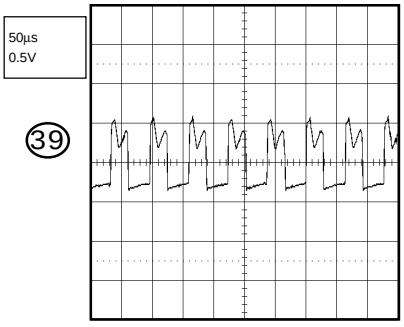

39

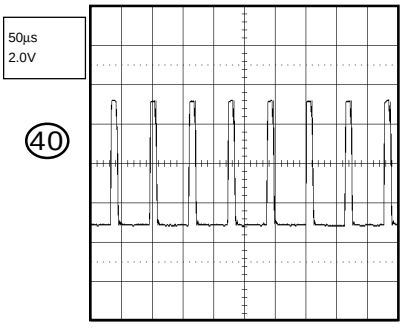

40

CRT/SVM

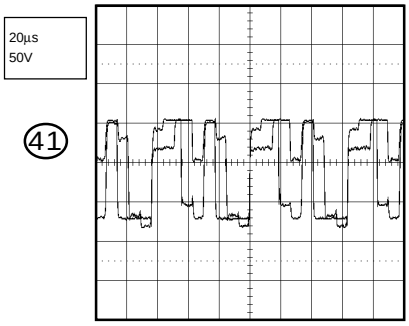

41

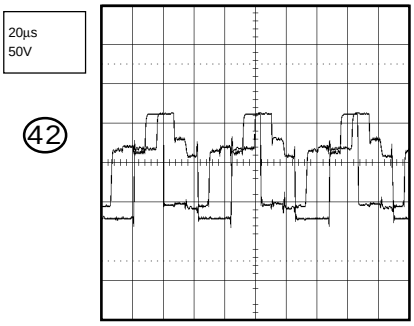

42

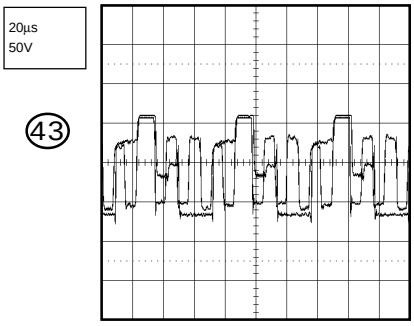

43

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

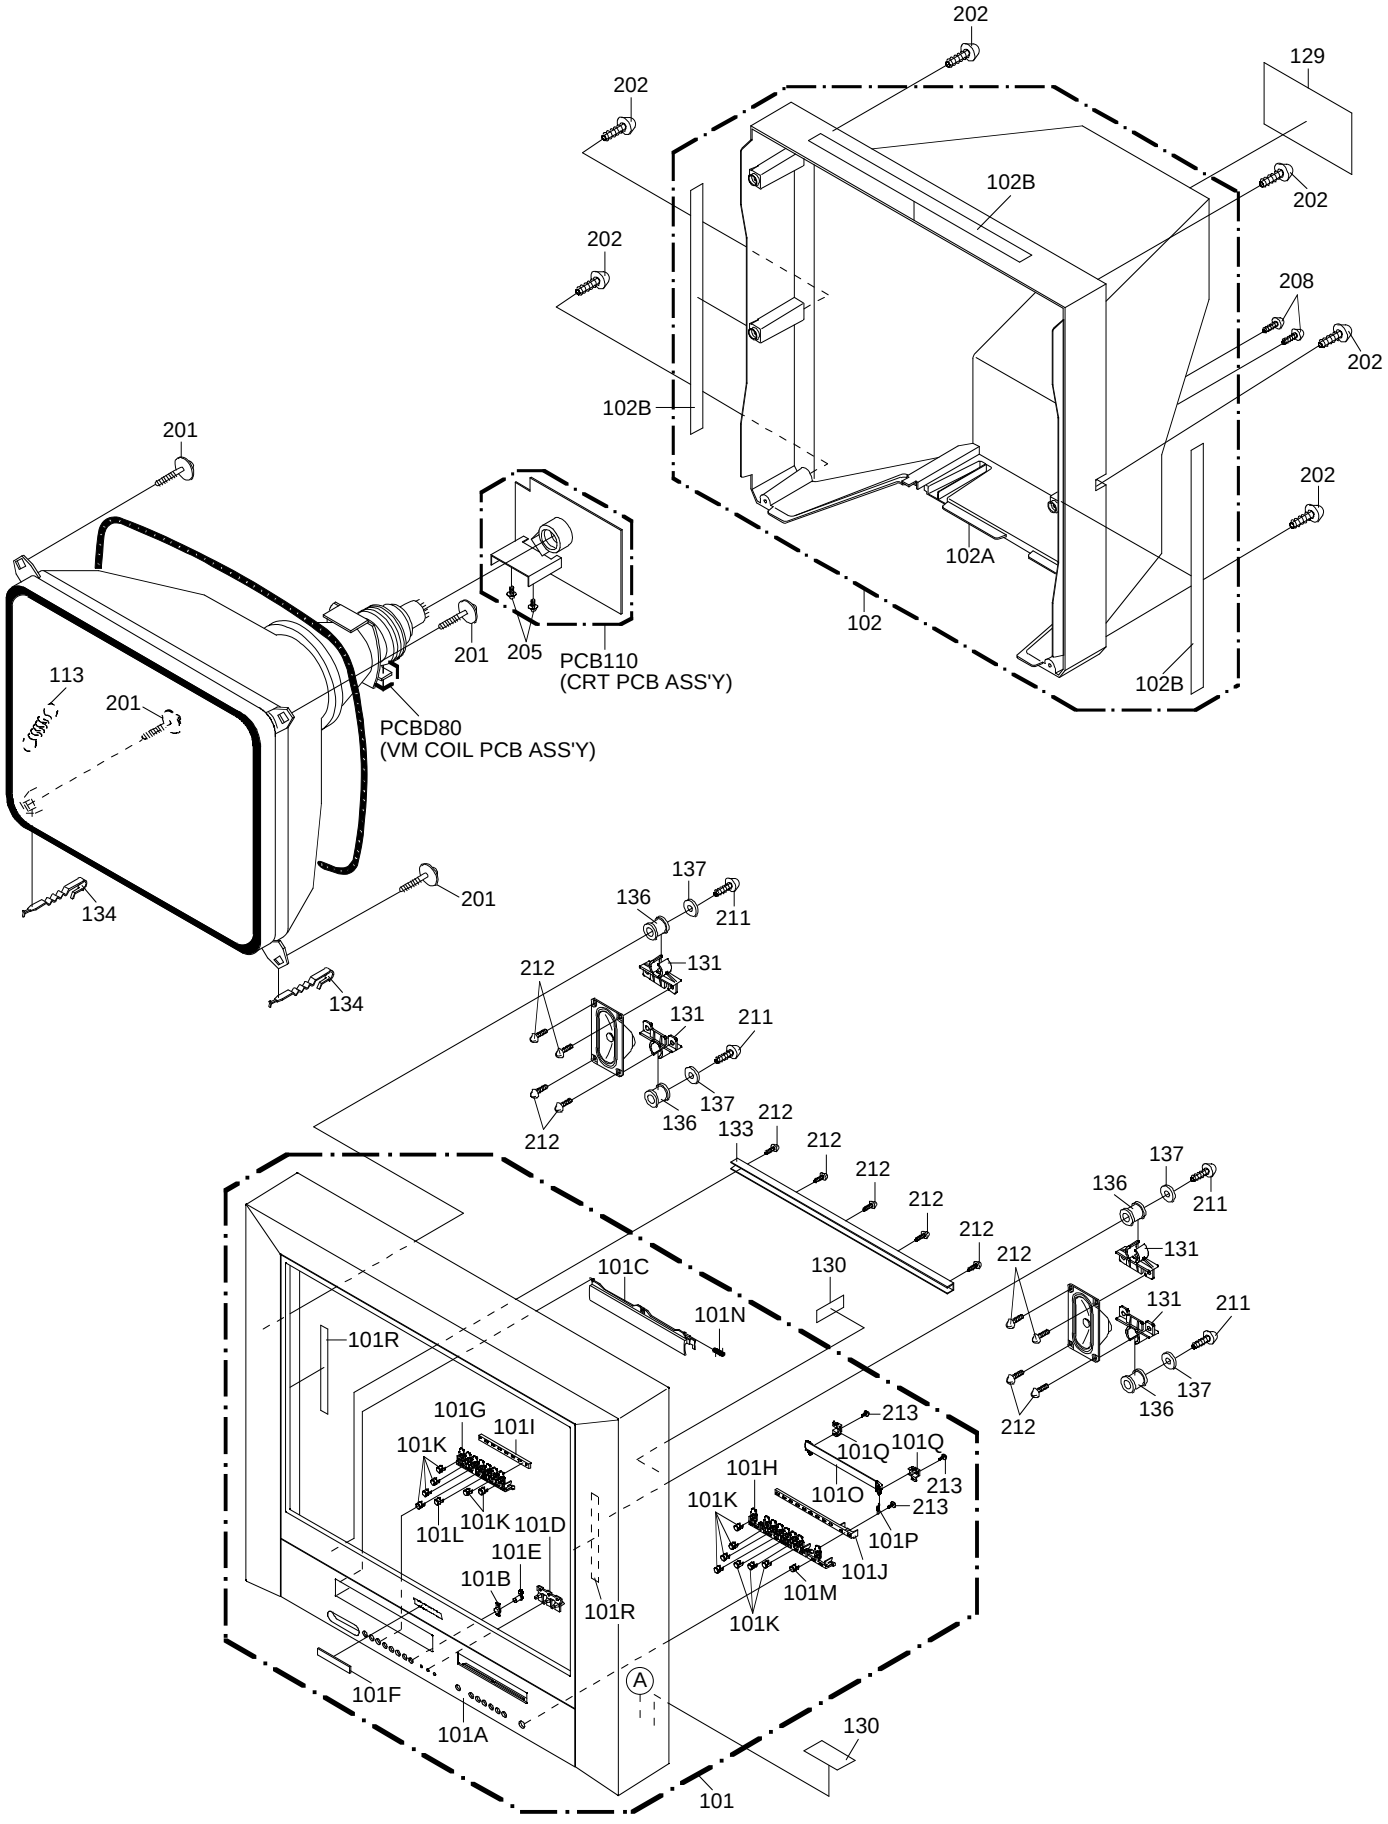

MECHANICAL EXPLODED VIEW

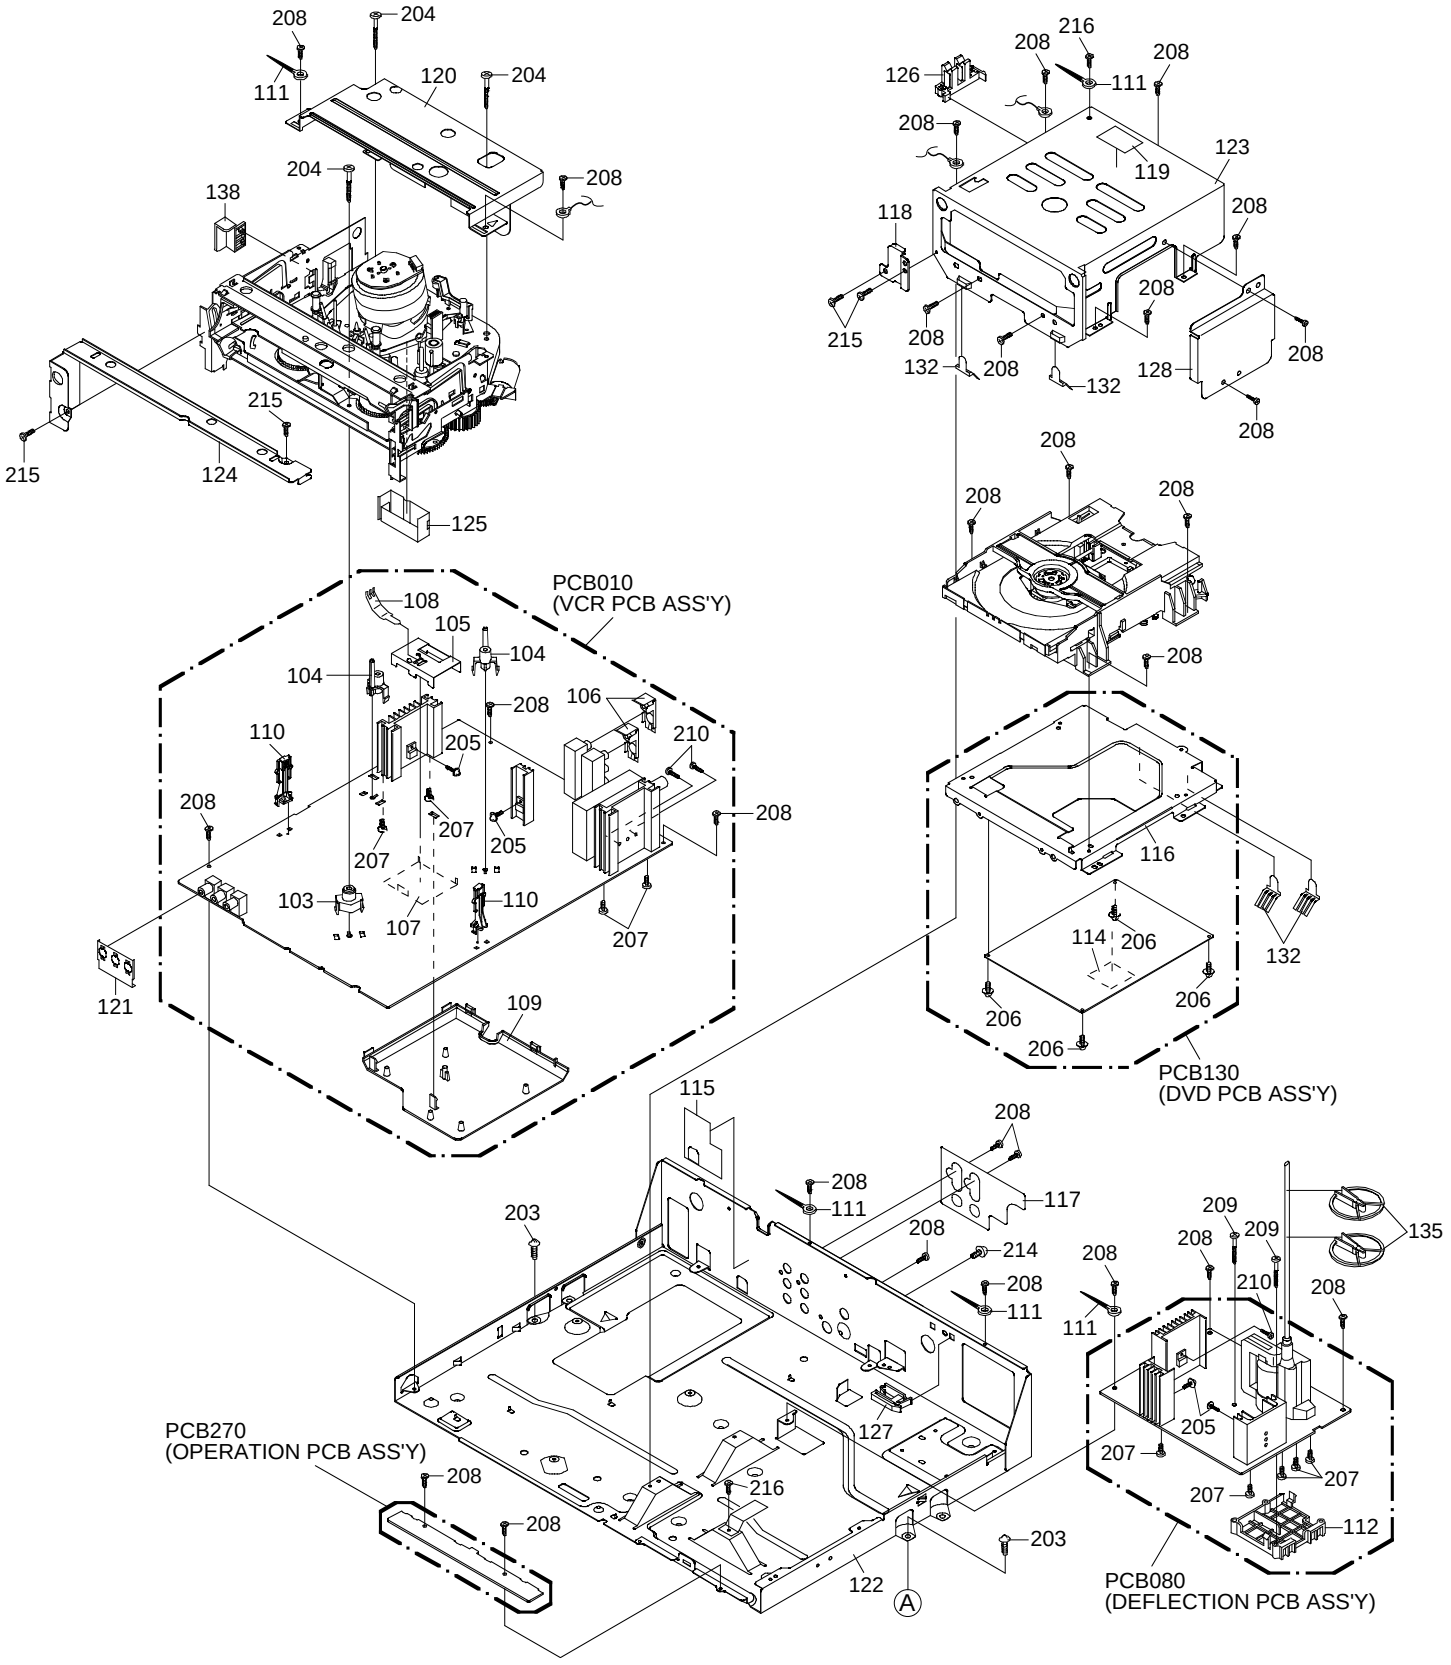

CHASSIS EXPLODED VIEW (TOP VIEW)

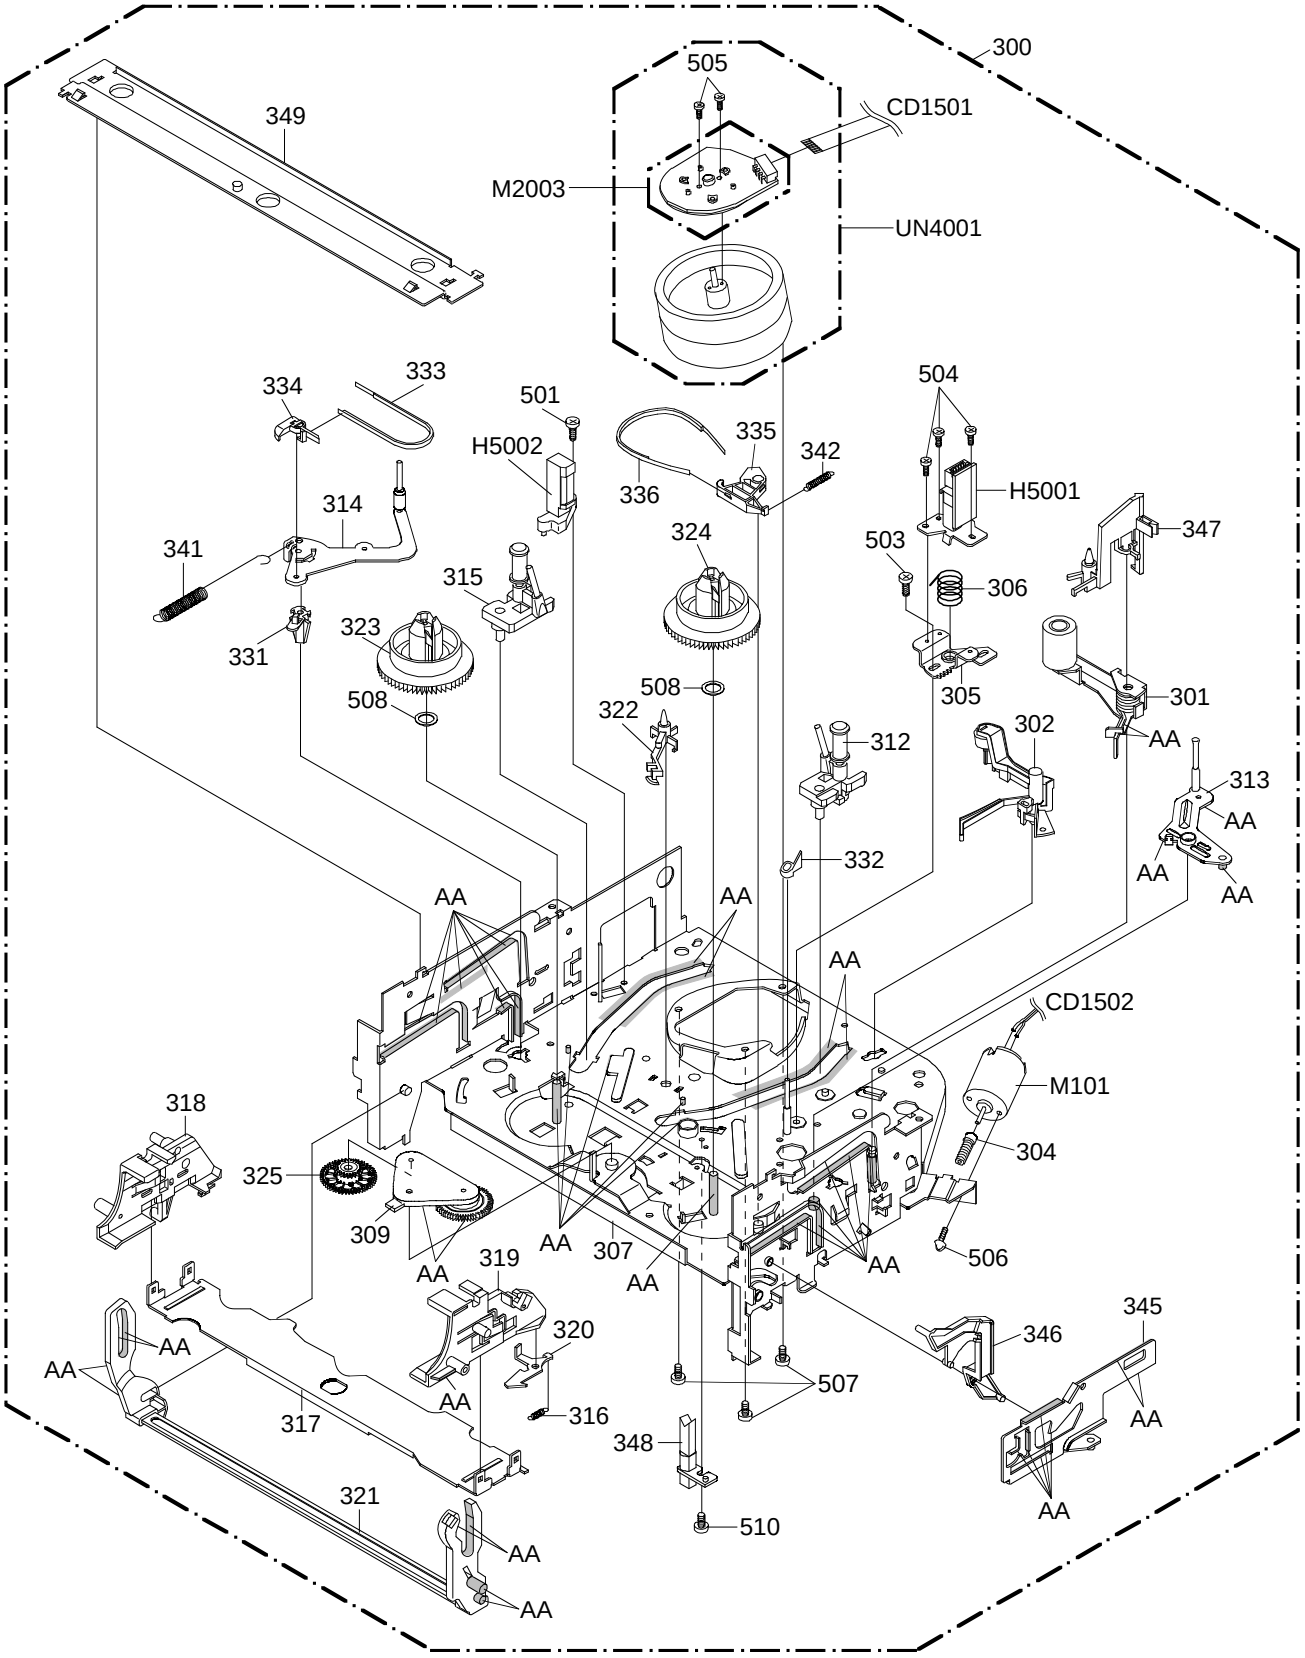

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

CHASSIS EXPLODED VIEW (BOTTOM VIEW)

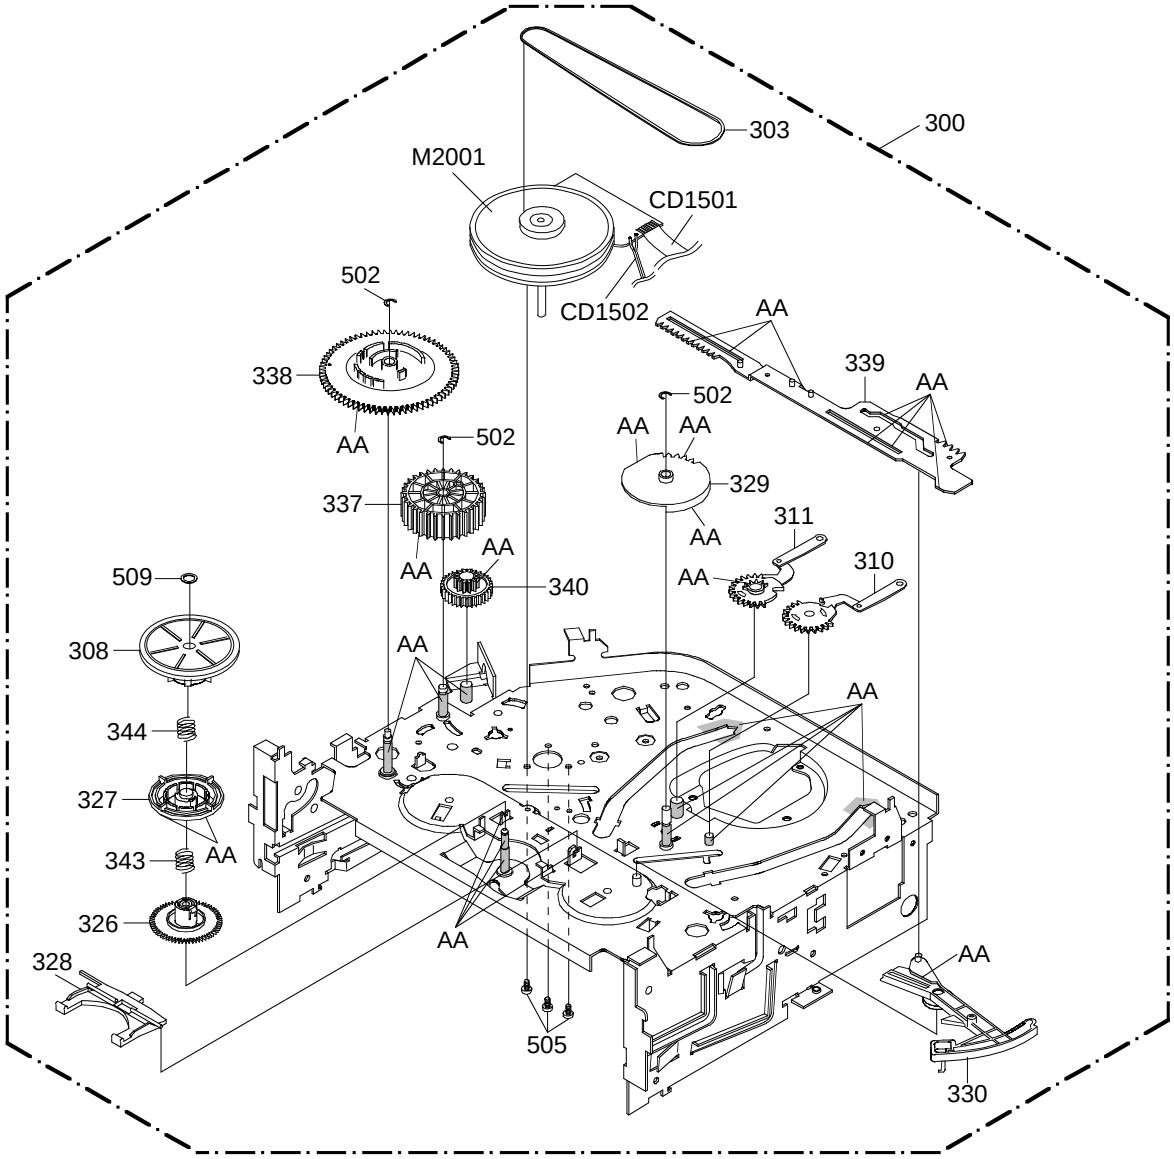

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

DVD DECK EXPLODED VIEW

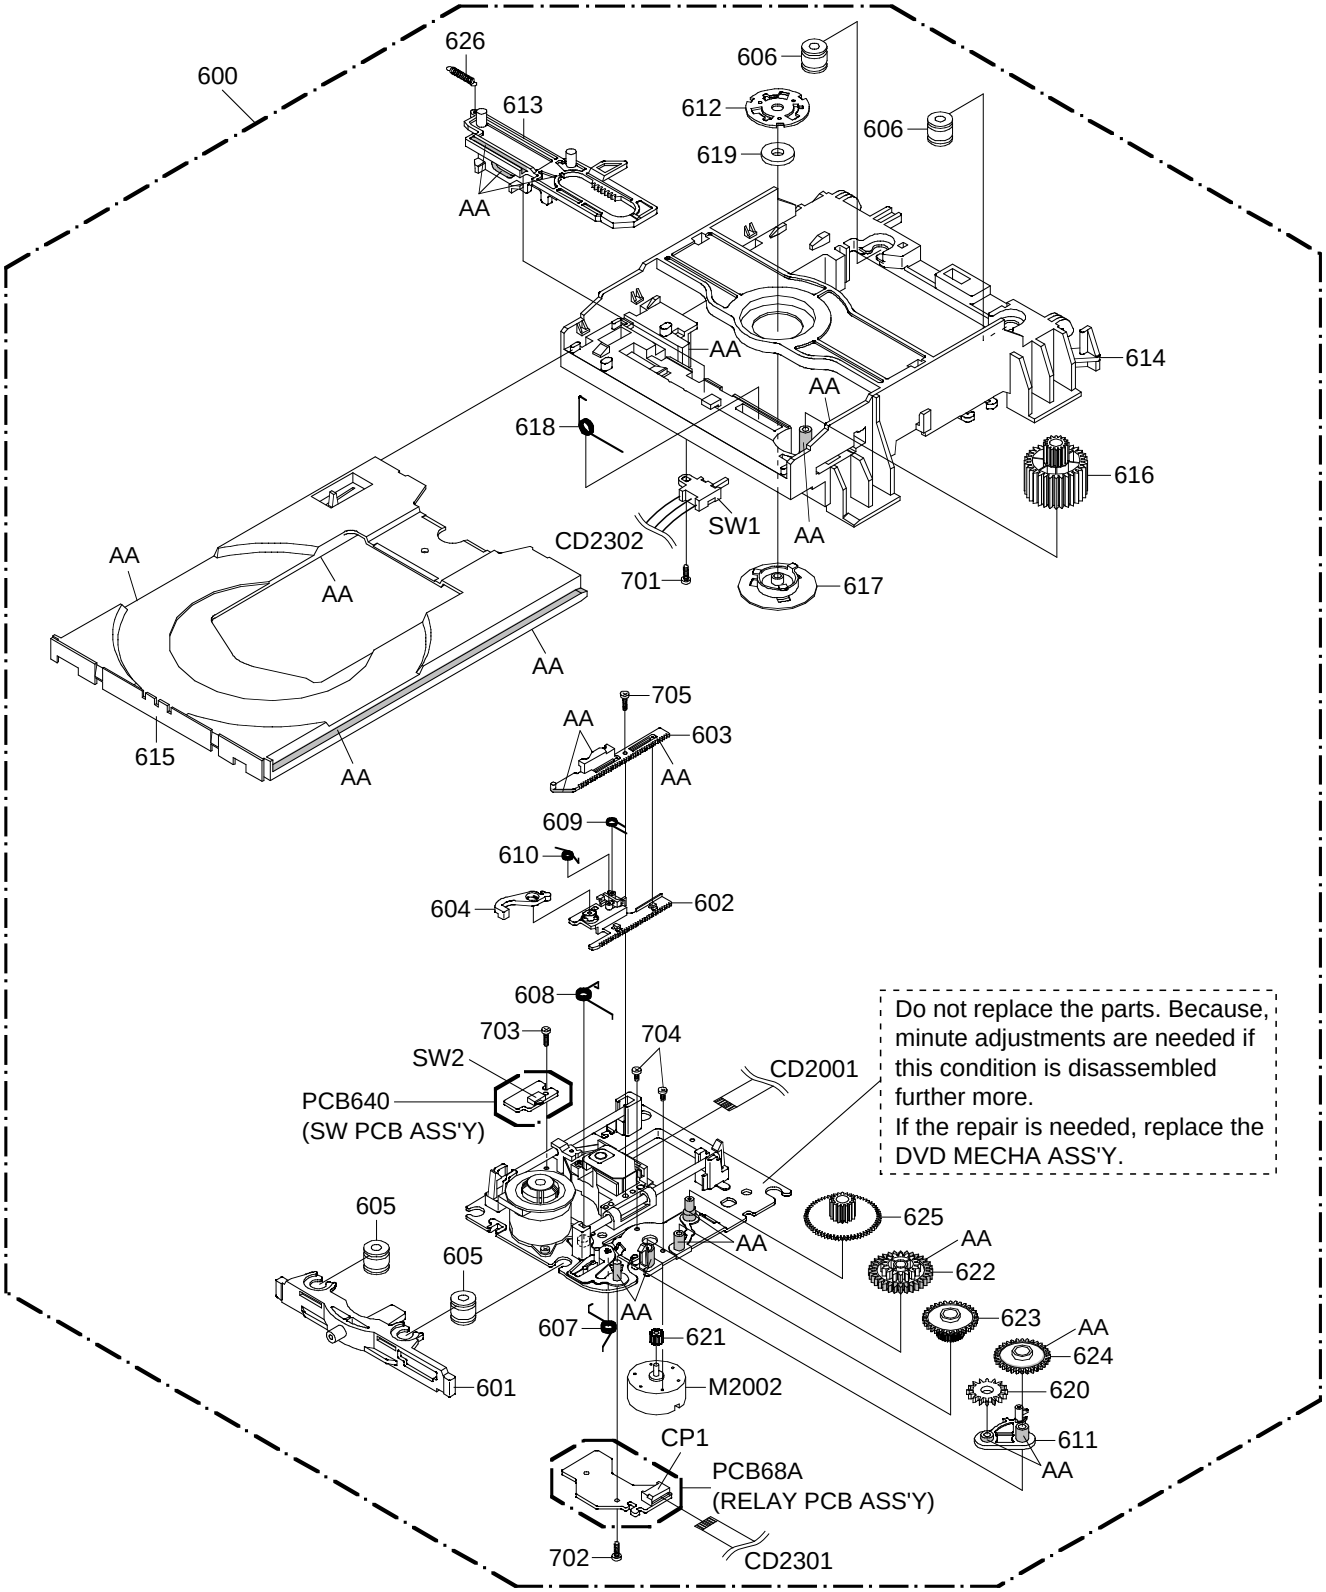

CLASS	MARK
GREASE	AA

NOTE: Applying positions AA for the grease are displayed for this section.
Check if the correct grease is applied for each position.

MECHANICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description
101	AE001476	A5I702A720	CABINET,FRONT ASSY
101A	AD302243	701WPJ1207	CABINET,FRONT
101B	AD302244	711WPA0186	PLATE,FRONT
101C	AD302245	712WPJ0821	FLAP
101D	AD302246	713WPA0270	GLASS,LED
101E	AD302247	713WPA0271	GUIDE,REMOCON
101F	AD302321	7235490037	BADGE,BRAND
101G	AD302249	735WPA0738	BUTTON,FRAME1
101H	AD302250	735WPA0739	BUTTON,FRAME2
101I	AD302251	735WPA0740	STOPPER,BUTTON1
101J	AD302252	735WPA0741	STOPPER,BUTTON2
101K	AD302253	735WPE0035	BUTTON,CAP
101L	AD302254	735WPE0036	BUTTON,REC
101M	AD302255	735WPE0037	BUTTON,POWER
101N	AD301686	743WKA0037	SPRING,FLAP
101O	AE001323	712WPJ0830	FLAP,DVD
101P	AE001324	742WKA0001	SPRING,DVD-FLAP
101Q	AE001325	761WPA0283	HOLDER,FLAP
101R	AE000003	800WQ00045	FELT SHEET
102	AE001477	A5I702A740	CABINET,BACK ASSY
102A	AD302257	702WPA0982	CABINET,BACK
102B	AD301895	800WQ00055	FELT SHEET
103	BZ710577	701WPA0686	HOLDER,DECK
104	BZ710658	701WPA0751	HOLDER,DECK
105	BZ710466	752WSA0230	SHIELD,CASE HEAD AMP
106	BZ710659	752WSA0290	SHIELD,COMPO
107	AD301956	752WSA0308	SHIELD,COVER HEAD AMP
108	BZ710331	753WUAA006	SPRING,EARTH HEAD AMP
109	AD301957	755WPA0035	COVER,PCB
110	BZ710498	85OP700038	HOLDER,END SENSOR
111	AD300758	899EFBA001	WIRING CLIP
112	BZ710459	761WPA0223	HOLDER,FBT
113	AD300759	741WUA0021	SPRING,EARTH
114	AD302398	7232020746	SHEET,IC
115	AE000157	724WNA0009	SHEET,PVC
116	AD301958	761WSA0099	ANGLE,DECK
117	AE000733	7230007691	SHEET,JACK
118	AE000162	752WSA0343	HOLDER,VCR
119	AD301688	7260000341	SHEET,CAUTION
120	AE000160	752WSA0331	SHIELD,COVER DECK
121	BZ710671	752WSA0292	SHIELD,AV JACK
122	AE001233	752WSA0360	PLATE,BOTTOM
123	AD301962	752WSA0323	DVD,TOP
124	AD301964	752WSA0324	VCR,TOP
125	AD301966	752WSA0327	SHIELD,COVER FPC
126	BZ710694	774WPA0002	HOLDER,WIRE
127	AE000164	774WPA0005	HOLDER,WIRE-2
128	AE000161	752WSA0337	SHIELD,DVD
129	AE001478	722549A227	SHEET,RATING
130	AD300007	7230006755	SHEET,CAUTION
131	AD302310	761WPA0279	HOLDER,SPEAKER
132	AD301574	744WUA0013	SPRING,EARTH
133	BZ710686	752WSA0288	ANGLE,FRONT
134	BZ710259	762WPA0011	HOLDER,CRT WIRE
135	BZ710260	899HV3T000	HOLDER,ANODE WIRE
136	AD300518	801WR00001	DAMPER,SPEAKER
137	AD300519	82A40B0104	FLAT WASHER
138	BZ710618	755WPAA012	PLATE,COVER LIGHT (L)

MECHANICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
201	AD302384	8141H60D54	SCREW,TAP TITE(P) GW22	6x45
202	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
203	BZ710320	8117540804	SCREW,TAPPING(B0) TRUSS	4x8
204	BZ710582	8109130B94	SCREW,TAP TITE(B) R PAN	3x29
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710562	8109I30804	SCREW,TAP TITE(B) WH7	3x8
207	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
208	BZ710678	8109230804	SCREW,TAP TITE(B) BIND	3x8
209	BZ710409	8107630B04	SCREW,TAP TITE(S) BRAZIER	3x20
210	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
211	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
212	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
213	AD301667	8110E30804	SCREW,TAP TITE(P) WH10	3x8
214	AD301968	8107230404	SCREW,TAP TITE(S) BIND	3x4
215	BZ710240	8107230804	SCREW,TAP TITE(S) BIND	3x8
216	BZ710337	8107930604	SCREW,CUP(S)	3x6
---	AE001479	723000C297	SHEET,BAR CODE	
---	AE000636	791WHA0102	LAMIFILM,BAG	
---	AD302265	792WHA0440	PACKAGE,TOP	
---	AD302266	792WHA0441	PACKAGE,BOTTOM	
---	AD302267	793WCD1478	GIFT BOX	
---	AE001329	795WCA0670	PAD	474x1200
---	AD301971	A5F101H975	INSTRUCTION BOOK KIT	
---	AD302404	J5500817	REGISTRATION CARD	
---	AE001480	J5F10101D	INSTRUCTION BOOK	
---	AE001184	J5F10129A	INFORMATION SHEET	
---	AE000060	JB5UD300	POLYBAG,INSTRUCTION(RED CAUTION)	

MECHANICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description
101	AE001476	A5I702A720	CABINET,FRONT ASSY
101A	AD302243	701WPJ1207	CABINET,FRONT
101B	AD302244	711WPA0186	PLATE,FRONT
101C	AD302245	712WPJ0821	FLAP
101D	AD302246	713WPA0270	GLASS,LED
101E	AD302247	713WPA0271	GUIDE,REMOCON
101F	AD302321	7235490037	BADGE,BRAND
101G	AD302249	735WPA0738	BUTTON,FRAME1
101H	AD302250	735WPA0739	BUTTON,FRAME2
101I	AD302251	735WPA0740	STOPPER,BUTTON1
101J	AD302252	735WPA0741	STOPPER,BUTTON2
101K	AD302253	735WPE0035	BUTTON,CAP
101L	AD302254	735WPE0036	BUTTON,REC
101M	AD302255	735WPE0037	BUTTON,POWER
101N	AD301686	743WKA0037	SPRING,FLAP
101O	AE001323	712WPJ0830	FLAP,DVD
101P	AE001324	742WKA0001	SPRING,DVD-FLAP
101Q	AE001325	761WPA0283	HOLDER,FLAP
101R	AE000003	800WQ00045	FELT SHEET
102	AE001477	A5I702A740	CABINET,BACK ASSY
102A	AD302257	702WPA0982	CABINET,BACK
102B	AD301895	800WQ00055	FELT SHEET
103	BZ710577	701WPA0686	HOLDER,DECK
104	BZ710658	701WPA0751	HOLDER,DECK
105	BZ710466	752WSA0230	SHIELD,CASE HEAD AMP
106	BZ710659	752WSA0290	SHIELD,COMPO
107	AD301956	752WSA0308	SHIELD,COVER HEAD AMP
108	BZ710331	753WUAA006	SPRING,EARTH HEAD AMP
109	AD301957	755WPA0035	COVER,PCB
110	BZ710498	85OP700038	HOLDER,END SENSOR
111	AD300758	899EFBA001	WIRING CLIP
112	BZ710459	761WPA0223	HOLDER,FBT
113	AD300759	741WUA0021	SPRING,EARTH
114	AD302398	7232020746	SHEET,IC
115	AE000157	724WNA0009	SHEET,PVC
116	AD301958	761WSA0099	ANGLE,DECK
117	AE000733	7230007691	SHEET,JACK
118	AE000162	752WSA0343	HOLDER,VCR
119	AD301688	7260000341	SHEET,CAUTION
120	AE000160	752WSA0331	SHIELD,COVER DECK
121	BZ710671	752WSA0292	SHIELD,AV JACK
122	AE001233	752WSA0360	PLATE,BOTTOM
123	AD301962	752WSA0323	DVD,TOP
124	AD301964	752WSA0324	VCR,TOP
125	AD301966	752WSA0327	SHIELD,COVER FPC
126	BZ710694	774WPA0002	HOLDER,WIRE
127	AE000164	774WPA0005	HOLDER,WIRE-2
128	AE000161	752WSA0337	SHIELD,DVD
129	AE002060	722549A238	SHEET,RATING
130	AD301624	724000A002	SHEET,CSA
131	AD302310	761WPA0279	HOLDER,SPEAKER
132	AD301574	744WUA0013	SPRING,EARTH
133	BZ710686	752WSA0288	ANGLE,FRONT
134	BZ710259	762WPA0011	HOLDER,CRT WIRE
135	BZ710260	899HV3T000	HOLDER,ANODE WIRE
136	AD300518	801WR00001	DAMPER,SPEAKER
137	AD300519	82A40B0104	FLAT WASHER
138	BZ710618	755WPAA012	PLATE,COVER LIGHT (L)

MECHANICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
201	AD302384	8141H60D54	SCREW,TAP TITE(P) GW22	6x45
202	BZ710036	8117540B04	SCREW,TAPPING(B0) TRUSS	4x20
203	BZ710320	8117540804	SCREW,TAPPING(B0) TRUSS	4x8
204	BZ710582	8109130B94	SCREW,TAP TITE(B) R PAN	3x29
205	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
206	BZ710562	8109I30804	SCREW,TAP TITE(B) WH7	3x8
207	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
208	BZ710678	8109230804	SCREW,TAP TITE(B) BIND	3x8
209	BZ710409	8107630B04	SCREW,TAP TITE(S) BRAZIER	3x20
210	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
211	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
212	BZ710030	8110630804	SCREW,TAP TITE(P) BRAZIER	3x8
213	AD301667	8110E30804	SCREW,TAP TITE(P) WH10	3x8
214	AD301968	8107230404	SCREW,TAP TITE(S) BIND	3x4
215	BZ710240	8107230804	SCREW,TAP TITE(S) BIND	3x8
216	BZ710337	8107930604	SCREW,CUP(S)	3x6
---	AE002061	723000C337	SHEET,BAR CODE	
---	AE000636	791WHA0102	LAMIFILM,BAG	
---	AD302265	792WHA0440	PACKAGE,TOP	
---	AD302266	792WHA0441	PACKAGE,BOTTOM	
---	AE001328	793WCDB729	GIFT BOX	
---	AE001329	795WCA0670	PAD	474x1200
---	AE001330	A5F302A975	INSTRUCTION BOOK KIT	
---	AE000120	J5455117	REGISTRATION CARD	
---	AE002062	J5F30201B	INSTRUCTION BOOK(E)	
---	AE002063	J5F30210B	INSTRUCTION BOOK(F)	
---	AE000119	J5455115	SERVICE STATION LIST	
---	AE000060	JB5UD300	POLYBAG,INSTRUCTION(RED CAUTION)	

CHASSIS REPLACEMENT PARTS LIST
(MW27FN1(-R))

	Location No.	TSB P/N	Reference No.	Description	
	300	AE000689	A5I501A420A	DECK ASS'Y	A5I501A420A
	301	BZ710564	85OA400234	PINCH ROLLER BLOCK	
	302	BZ710682	85OA500026	AHC ASS'Y	
	303	BZ710193	85OP200290	BELT,CAPSTAN (S)	
	304	BZ710515	85OP600581	WORM	
	305	BZ710094	85OP500083	BASE,AC HEAD	
	306	BZ710112	85OP800324	SPRING,AC HEAD	
	307	BZ710516	85OA000459	MAIN CHASSIS ASS'Y	
	308	BZ710517	85OA200089	CLUTCH ASS'Y	
	309	BZ710518	85OA200090	ARM IDLER ASS'Y	
	310	BZ710519	85OA300065	LOADING ARM S UNIT	
	311	BZ710520	85OA300066	LOADING ARM T UNIT	
	312	BZ710521	85OA400223	INCLINED BASE T UINT 3S	
	313	BZ710522	85OA400232	P5 ARM ASS'Y 2	
	314	BZ710650	85OA400235	TENSION ARM ASS'Y 2	
	315	BZ710524	85OA400231	INCLINED BASE S UNIT	
	316	AE000442	85OP800367	SPRING,LOCKER	
	317	BZ710526	85OP900736	CASS,HOLDER	
	318	BZ710527	85OP900748	CASS,SIDE L	
	319	BZ710528	85OP900749	CASS,SIDE R	
	320	BZ710529	85OP900739	LOCKER,R	
	321	BZ710530	85OA900228	LINK UNIT	
	322	BZ710531	85OP000496	POST,CASS GUIDE	
	323	BZ710532	85OP200316	REEL,S (S)	
	324	BZ710533	85OP200317	REEL,T (S)	
	325	BZ710534	85OP200308	GEAR,IDLER	
	326	BZ710535	85OP200311	GEAR,CLUTCH	
	327	BZ710536	85OP200312	GEAR,COUPLING	
	328	BZ710537	85OP200313	LEVER,CLUTCH	
	329	BZ710538	85OP300194	GEAR,MAIN LOADING	
	330	BZ710092	85OP400490	LEVER,TENSION	
	331	BZ710093	85OP400492	HOLDER,TENSION	
	332	BZ710366	85OP400520	CAP.P4	
	333	BZ710762	85OP400542	BAND,TENSION	
	334	BZ710540	85OP400533	CONNECT,TENSION	
	335	BZ710541	85OP600573	ARM,BRAKE T	
	336	BZ710763	85OP600584	BAND,BRAKE T	
	337	BZ710543	85OP600577	CAM,PINCH ROLLER	
	338	BZ710544	85OP600578	CAM,MAIN	
	339	BZ710545	85OP600579	ROD,MAIN	
	340	BZ710546	85OP600582	GEAR,JOINT	
	341	BZ710110	85OP800322	SPRING,TENSION	
	342	BZ710547	85OP800360	SPRING,BRAKE T	
	343	BZ710548	85OP800355	SPRING,COUPLING	
	344	BZ710549	85OP800356	SPRING,RING	
	345	BZ710565	85OP900750	LEVER,LINK 2	
	346	BZ710551	85OP900744	LEVER,FLAP	
	347	BZ710552	85OP900745	CASS,OPENER	
	348	BZ710106	85OP700035	REFLECTOR,LED	
	349	BZ710514	85OP900746	BRACKET,TOP 3V	
	501	BZ710049	8107226804	SCREW,TAP TITE(S) BIND	2.6x8
	502	BZ710058	83ETW30000	E-RING	3.0
	503	BZ710371	8107226404	SCREW,TAP TITE(S) BIND	2.6x4
	504	BZ710046	8102120604	SCREW,PAN	M2x6
	505	BZ710050	8109126604	SCREW,TAP TITE(B) PAN	2.6x6
	506	BZ710553	810A130404	SCREW/WASHER(A)	M3x4
	507	BZ710219	810A126504	SCREW/WASHER(A)	M2.6x5
	508	BZ710056	82Q264713N	POLYSLIDER WASHER	2.6x4.7xT0.13
	509	BZ710054	82P184505N	POLYSLIDER WASHER(CUT)	1.8x4.5xT0.5
	510	BZ710017	8107226604	SCREW,TAP TITE(S) BIND	2.6x6
	CD1501	BZ614292	122H071704	CORD JUMPER	2H071704
	CD1502	AD301953	122Y021002	CORD JUMPER	2Y021002
	H5001	AD301675	1523Q91003	HEAD (AUDIO CONTROL)	VTR-1X2RPE22-756
	H5002	AD301676	1543Q02014	HEAD (FULL ERASE)	VTR-1X2ERS11-154
⚠	M101	BZ710566	1596P98001	MOTOR (LOADING)	MXN13FB12K3
⚠	M2001	AD301677	1510S98038	CAPSTAN DD UNIT	F2QVB33
	M2003	BZ710657	1589S11017	MICRO MOTOR	I2OAL05
⚠	UN4001	AE000690	A5I501G500	CYLINDER UNIT ASS'Y	A5I501G500

CHASSIS REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
300	AE000689	A5I501A420A	DECK ASS'Y	A5I501A420A
301	BZ710564	85OA400234	PINCH ROLLER BLOCK	
302	BZ710682	85OA500026	AHC ASS'Y	
303	BZ710193	85OP200290	BELT,CAPSTAN (S)	
304	BZ710515	85OP600581	WORM	
305	BZ710094	85OP500083	BASE,AC HEAD	
306	BZ710112	85OP800324	SPRING,AC HEAD	
307	BZ710516	85OA000459	MAIN CHASSIS ASS'Y	
308	BZ710517	85OA200089	CLUTCH ASS'Y	
309	BZ710518	85OA200090	ARM IDLER ASS'Y	
310	BZ710519	85OA300065	LOADING ARM S UNIT	
311	BZ710520	85OA300066	LOADING ARM T UNIT	
312	BZ710521	85OA400223	INCLINED BASE T UINT 3S	
313	BZ710522	85OA400232	P5 ARM ASS'Y 2	
314	BZ710650	85OA400235	TENSION ARM ASS'Y 2	
315	BZ710524	85OA400231	INCLINED BASE S UNIT	
316	AE000442	85OP800367	SPRING,LOCKER	
317	BZ710526	85OP900736	CASS,HOLDER	
318	BZ710527	85OP900748	CASS,SIDE L	
319	BZ710528	85OP900749	CASS,SIDE R	
320	BZ710529	85OP900739	LOCKER,R	
321	BZ710530	85OA900228	LINK UNIT	
322	BZ710531	85OP000496	POST,CASS GUIDE	
323	BZ710532	85OP200316	REEL,S (S)	
324	BZ710533	85OP200317	REEL,T (S)	
325	BZ710534	85OP200308	GEAR,IDLER	
326	BZ710535	85OP200311	GEAR,CLUTCH	
327	BZ710536	85OP200312	GEAR,COUPLING	
328	BZ710537	85OP200313	LEVER,CLUTCH	
329	BZ710538	85OP300194	GEAR,MAIN LOADING	
330	BZ710092	85OP400490	LEVER,TENSION	
331	BZ710093	85OP400492	HOLDER,TENSION	
332	BZ710366	85OP400520	CAP.P4	
333	BZ710762	85OP400542	BAND,TENSION	
334	BZ710540	85OP400533	CONNECT,TENSION	
335	BZ710541	85OP600573	ARM,BRAKE T	
336	BZ710763	85OP600584	BAND,BRAKE T	
337	BZ710543	85OP600577	CAM,PINCH ROLLER	
338	BZ710544	85OP600578	CAM,MAIN	
339	BZ710545	85OP600579	ROD,MAIN	
340	BZ710546	85OP600582	GEAR,JOINT	
341	BZ710110	85OP800322	SPRING,TENSION	
342	BZ710547	85OP800360	SPRING,BRAKE T	
343	BZ710548	85OP800355	SPRING,COUPLING	
344	BZ710549	85OP800356	SPRING,RING	
345	BZ710565	85OP900750	LEVER,LINK 2	
346	BZ710551	85OP900744	LEVER,FLAP	
347	BZ710552	85OP900745	CASS,OPENER	
348	BZ710106	85OP700035	REFLECTOR,LED	
349	BZ710514	85OP900746	BRACKET,TOP 3V	
501	BZ710049	8107226804	SCREW,TAP TITE(S) BIND	2.6x8
502	BZ710058	83ETW30000	E-RING	3.0
503	BZ710371	8107226404	SCREW,TAP TITE(S) BIND	2.6x4
504	BZ710046	8102120604	SCREW,PAN	M2x6
505	BZ710050	8109126604	SCREW,TAP TITE(B) PAN	2.6x6
506	BZ710553	810A130404	SCREW/WASHER(A)	M3x4
507	BZ710219	810A126504	SCREW/WASHER(A)	M2.6x5
508	BZ710056	82Q264713N	POLYSLIDER WASHER	2.6x4.7xT0.13
509	BZ710054	82P184505N	POLYSLIDER WASHER(CUT)	1.8x4.5xT0.5
510	BZ710017	8107226604	SCREW,TAP TITE(S) BIND	2.6x6
CD1501	BZ614292	122H071704	CORD JUMPER	2H071704
CD1502	AD301953	122Y021002	CORD JUMPER	2Y021002
H5001	AD301675	1523Q91003	HEAD (AUDIO CONTROL)	VTR-1X2RPE22-756
H5002	AD301676	1543Q02014	HEAD (FULL ERASE)	VTR-1X2ERS11-154
⚠ M101	BZ710566	1596P98001	MOTOR (LOADING)	MXN13FB12K3
⚠ M2001	AD301677	1510S98038	CAPSTAN DD UNIT	F2QVB33
M2003	BZ710657	1589S11017	MICRO MOTOR	I2OAL05
⚠ UN4001	AE000690	A5I501G500	CYLINDER UNIT ASS'Y	A5I501G500

DVD DECK REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.		Description
600	AE001335	A5F302A650	DVD MECHA ASS'Y	A5F302A650
601	AD301822	92P100022A	TRAVERSE HOLDER	
602	AD301823	92P100032A	RACK,FEED 1	
603	AD301824	92P100033A	RACK,FEED 2	
604	AD301825	92P100035A	LEVER,RACK FEED	
605	AD301826	92P200006A	INSULATOR(F)	
606	AD301827	92P200007A	INSULATOR(R)	
607	AD301850	92P300008A	SPRING,CHASSIS	
608	AD301849	92P300005A	SPRING,ARM IDLER	
609	AD301830	92P300006A	SPRING,RACK FEED 2	
610	AD301831	92P300007A	SPRING,RACK FEED 1	
611	AD301848	92P100031A	ARM,IDLER	
612	AD301833	92P000001A	CLAMPER PLATE	
613	AD301834	92P100019A	RACK,LOADING	
614	AD301835	92P100020A	MAIN FRAME M	
615	AE001336	92P100039A	TRAY	
616	AD301837	92P100023A	GEAR,MAIN	
617	AD301838	92P100024A	CLAMPER	
618	AD301839	92P300002A	SPRING,RACK LOADING	
619	AD301840	92P400002A	MAGNET,CLAMPER	
620	AD301847	92P100030A	GEAR,IDLER	
621	AD301842	92P100025A	GEAR,MOTOR	
622	AD301843	92P100026A	GEAR,MIDDLE 1	
623	AD301844	92P100027A	GEAR,MIDDLE 2	
624	AD301845	92P100028A	GEAR,MIDDLE 3	
625	AD301846	92P100029A	GEAR,FEED	
626	AE001179	92P300009A	SPRING,RACK L	
701	BZ710187	8110226804	SCREW,TAP TITE(P) BIND	2.6x8
702	AD301851	8110120604	SCREW,TAP TITE(P) PAN	2x6
703	AD301852	8107220504	SCREW,TAP TITE(S) BIND	2x5
704	AD301853	8140117254	SCREW,PAN	M1.7x2.5 P3
705	AD301913	8110220804	SCREW,TAP TITE(P) BIND	2x8
CD2001	AD301855	122H0O1901	CORD JUMPER	2H0O1901
CD2301	AD301856	122H080701	CORD JUMPER	2H080701
CD2302	AE000148	06CH232101	CORD CONNECTOR	CH232101
CP1	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
⚠ M2002	AD301861	1515S98001	FEED MOTOR	BCD3B81
PCB640	AD301862	A5E601V640	PCB ASS'Y	VEBA17A
PCB68A	AD301863	A5E601V680	PCB ASS'Y	VEBA12A
SW1	AD301866	0515S32001	SWITCH	SSS-23-6
SW2	AE001158	0500101036	PUSH SWITCH	ESE22MH22

DVD DECK REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.		Description
600	AE001335	A5F302A650	DVD MECHA ASS'Y	A5F302A650
601	AD301822	92P100022A	TRAVERSE HOLDER	
602	AD301823	92P100032A	RACK,FEED 1	
603	AD301824	92P100033A	RACK,FEED 2	
604	AD301825	92P100035A	LEVER,RACK FEED	
605	AD301826	92P200006A	INSULATOR(F)	
606	AD301827	92P200007A	INSULATOR(R)	
607	AD301850	92P300008A	SPRING,CHASSIS	
608	AD301849	92P300005A	SPRING,ARM IDLER	
609	AD301830	92P300006A	SPRING,RACK FEED 2	
610	AD301831	92P300007A	SPRING,RACK FEED 1	
611	AD301848	92P100031A	ARM,IDLER	
612	AD301833	92P000001A	CLAMPER PLATE	
613	AD301834	92P100019A	RACK,LOADING	
614	AD301835	92P100020A	MAIN FRAME M	
615	AE001336	92P100039A	TRAY	
616	AD301837	92P100023A	GEAR,MAIN	
617	AD301838	92P100024A	CLAMPER	
618	AD301839	92P300002A	SPRING,RACK LOADING	
619	AD301840	92P400002A	MAGNET,CLAMPER	
620	AD301847	92P100030A	GEAR,IDLER	
621	AD301842	92P100025A	GEAR,MOTOR	
622	AD301843	92P100026A	GEAR,MIDDLE 1	
623	AD301844	92P100027A	GEAR,MIDDLE 2	
624	AD301845	92P100028A	GEAR,MIDDLE 3	
625	AD301846	92P100029A	GEAR,FEED	
626	AE001179	92P300009A	SPRING,RACK L	
701	BZ710187	8110226804	SCREW,TAP TITE(P) BIND	2.6x8
702	AD301851	8110120604	SCREW,TAP TITE(P) PAN	2x6
703	AD301852	8107220504	SCREW,TAP TITE(S) BIND	2x5
704	AD301853	8140117254	SCREW,PAN	M1.7x2.5 P3
705	AD301913	8110220804	SCREW,TAP TITE(P) BIND	2x8
CD2001	AD301855	122H0O1901	CORD JUMPER	2H0O1901
CD2301	AD301856	122H080701	CORD JUMPER	2H080701
CD2302	AE000148	06CH232101	CORD CONNECTOR	CH232101
CP1	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
⚠ M2002	AD301861	1515S98001	FEED MOTOR	BCD3B81
PCB640	AD301862	A5E601V640	PCB ASS'Y	VEBA17A
PCB68A	AD301863	A5E601V680	PCB ASS'Y	VEBA12A
SW1	AD301866	0515S32001	SWITCH	SSS-23-6
SW2	AE001158	0500101036	PUSH SWITCH	ESE22MH22

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description		
		RESISTORS			
⚠R401	AD301014	R4X5T6472F	R,METAL	4.7K OHM 1/6W	
⚠R403	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W	
⚠R405	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W	
⚠R406	AE001016	R3X28A471J	R,METAL OXIDE	470 OHM 2W	
⚠R412	BZ210021	R65582680J	R,FUSE	68 OHM 1/2W	
⚠R417	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W	
⚠R423	BZ210149	R3X18AR68J	R,METAL OXIDE	0.68 OHM 2W	
⚠R429	BZ210130	R002T21R5J	RC	1.5 OHM 1/2W	
⚠R430	AD302205	R5X34F1R8J	R,CEMENT	0 1.8 OHM 10W	
⚠R434	BZ210130	R002T21R5J	RC	1.5 OHM 1/2W	
R435	AD301595	R65582010J	R,FUSE	1 OHM 1/2W	
R436	BZ210277	R3X181101J	R,METAL OXIDE	100 OHM 1W	
⚠R440	AE001017	R5X34F472J	R,CEMENT	0 4.7K OHM 10W	
⚠R445	BZ210079	R6558A4R7J	R,FUSE	4.7 OHM 2W	
R449	AE000145	R002T2561J	RC	560 OHM 1/2W	
⚠R454	AE000676	R3K181102J	R,METAL	1K OHM 1W	
⚠R804	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R806	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R808	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W	
⚠R855	AD301019	R65582331J	R,FUSE	330 OHM 1/2W	
⚠R881	AD301344	R3X18A151J	R,METAL OXIDE	150 OHM 2W	
⚠R1701	BZ210206	R002T2155J	RC	1.5M OHM 1/2W	
⚠R1702	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W	
⚠R1714	BZ210243	R3X181R18J	R,METAL OXIDE	0.18 OHM 1W	
⚠R1717	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W	
⚠R1718	BZ210250	R5Y2CE1R2J	R,CEMENT	1.2 OHM 7W	
⚠R1720	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W	
R3010	AD302206	R3X181180J	R,METAL OXIDE	18 OHM 1W	
R3021	BZ210134	R3X181330J	R,METAL OXIDE	33 OHM 1W	
		CAPACITORS			
C321	BZ210176	E02LF3222M	CE	2200 UF 25V	
C357	BZ110240	E02L05220M	CE	22 UF 50V	
⚠C403	BZ110195	E02LU8220M	CE	22 UF 100V	
C404	BZ110023	E62DFB470M	CE	47 UF 160V	
⚠C408	AE000911	P4N8FK222H	CMPP	0.0022UF 1.5KV	
⚠C409	AD301434	E02LU4101M	CE	100 UF 35V	
C411	AE001467	C0J0B05L2K	CC	330 PF 500V B	or
	AE001018	C0JTB05L2K	CC	330 PF 500V B	
C412	AE001019	P4J7F3434J	CMPP	0.43 UF 250V PMS	
⚠C417	AD301123	P3N1F5273J	CPP	0.027 UF 630V	
⚠C418	BZ110211	P4N8FK133H	CMPP	0.013 UF 1.5KV	
⚠C429	AD301434	E02LU4101M	CE	100 UF 35V	
⚠C430	BZ110101	E5EZF3222M	CE	2200 UF 25V	
⚠C434	BZ110055	E5EZF4102M	CE	1000 UF 35V	
C435	BZ110057	E53FF56R8K	CE	6.8 UF 50V NP	
⚠C446	AD300061	E5EZFD220M	CE	22 UF 250V	
C449	BZ110202	C0PLRR713K	CC	0.001 UF 2KV RR	
C808	AD300078	C0JBB0713K	CC	0.001 UF 2KV B	
⚠C1701	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL	
C1705	BZ110182	C03L0R713K	CC	0.001 UF 2KV R	
C1707	BZ110203	C0PLRR7W2K	CC	820 PF 2KV R	
⚠C1708	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B	
⚠C1710	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B	
⚠C1711	AD301391	CD39E0MQ3M	CC	0.0047UF 250V	
⚠C1714	AE000700	E52DHC681M	CE	680 UF 200V	
C1716	BZ110010	E02L03222M	CE	2200 UF 25V	
⚠C1717	BZ110055	E5EZF4102M	CE	1000 UF 35V	
⚠C1720	BZ110130	E62NFC221M	CE	220 UF 200V	
⚠C1725	AE000074	E02L08101M	CE	100 UF 100V	
⚠C1728	AD300785	E02LT1222M	CE	2200 UF 10V	
C1729	AE000743	C03L0R7N2K	CC	390 PF 2KV R	
C1732	BZ110032	E5EZF3102M	CE	1000 UF 25V	
⚠C1733	AE000467	E02LU54R7M	CE	4.7 UF 50V	
C3009	BZ110154	E02L00102M	CE	1000 UF 6.3V	
C3010	AE000744	E02L00222M	CE	2200 UF 6.3V	
		DIODES			
D101	AD301638	0010E00330	INFRARED LED	LTE-3271T-012A-O	
D102	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D103	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77	
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
D106	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77	

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
		DIODES		
D108	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D402	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D403	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D404	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D405	AD300074	D2BFRS4FS0	DIODE,SILICON	RS-4FS
⚠D406	AD300073	D2BFRU4AM0	DIODE,SILICON	RU-4AM
D407	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
⚠D408	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D410	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D411	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
⚠D412	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D413	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D414	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
⚠D415	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D416	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D417	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D418	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D419	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D420	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D601	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D602	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D603	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D604	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D605	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D606	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D852	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D853	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D854	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D855	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D856	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D857	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
D858	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
D1501	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D1701	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1702	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1703	AE000141	D97U02R71B	DIODE,ZENER	MTZJ2.7B T-77
⚠D1704	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
⚠D1705	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1706	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1707	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
D1708	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1709	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D1710	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1711	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1712	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77
D1713	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
⚠D1714	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1715	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D1716	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1717	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
⚠D1718	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1719	BZ410115	D2LKB340L0	DIODE,SCHOTTKY	SB340L-6737
D1720	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1721	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1722	AD300731	D2WXN49370	DIODE,SILICON	1N4937
⚠D1723	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D1724	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D1725	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1726	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1727	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D1728	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1729	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1730	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
⚠D1731	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1732	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
		DIODES		
D1733	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1734	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D2001	BZ410120	DDARDS1210	DIODE,SILICON	KDS121RTK
D2002	BZ410121	DDARDS1200	DIODE,SILICON	KDS120RTK
D2201	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D2202	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D2204	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D2205	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2206	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2207	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D3001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D3002	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D3003	BZ410090	D97U04R71B	DIODE,ZENER	MTZJ4.7B T-77
D3004	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D3005	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2
D3007	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D3008	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D3011	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D4201	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D4204	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D4205	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D4206	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D4207	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D5501	BZ410123	D2W0011E10	DIODE,SILICON	11E1-B-EIC
D5502	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D8501	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8502	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8503	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8504	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8505	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8506	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8510	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
		ICS		
IC101	AE001468	I51F58074B	IC	OEC8074B
IC103	AD301641	I9UF032310	IC	PST3231NR
IC199	AE001469	A5I701A015	IC	S-24C04BDP-LA
IC302	AD301983	I01FF58910	IC	AN5891SA-E1V
IC352	AD302184	I0FSP7522N	IC	AN7522N
⚠IC401	AD300414	I03TD80410	IC	LA78041
IC601	AD302210	I03FC63240	IC	LA76324M
IC602	AE000143	I1KF98L100	IC	KIA78L10F-RTF
IC1501	AD300609	I05FE90A45	IC	TC90A45F
IC1502	AD301988	I0UF015010	IC	MM1501XNRE
IC1504	AD301988	I0UF015010	IC	MM1501XNRE
IC1505	AD301927	I0UF015040	IC	MM1504XNRE
⚠IC1701	AD301771	000220001W	PHOTO COUPLER	PS2561L1-1-V(W)
⚠IC1702	AD302211	I1KJ9A431A	IC	KIA431A-AT
IC2001	AD302391	I5PKL63160	IC	STM6316ATXXZ
IC2301	BZ611126	I03F065600	IC	LA6560
IC2303	AD301770	I07E00358F	IC	BA10358F-E2
IC2304	AD301770	I07E00358F	IC	BA10358F-E2
⚠IC3001	AD301931	I1KA78R050	IC	KIA278R05PI
IC3002	AD301929	I1KA78R090	IC	KIA278R09PI
IC3003	AD301931	I1KA78R050	IC	KIA278R05PI
IC3004	AD301931	I1KA78R050	IC	KIA278R05PI
IC4002	AD302392	I5PK055890	IC	STM5589AVA
IC4003	AD301774	I5CF0CU040	IC	SN74AHCU04PWR
IC4007	AE000526	IF8J064007	IC	IS42S16400-7T
IC4012	AE000527	I5PJ060ET9	IC	M29W160ET90N6
IC4501	BZ611095	I03F3205M0	IC	LA71205M-MPB
IC5501	BZ611114	I01F63FBP0	IC	AN3663FBP
IC8001	AD301988	I0UF015010	IC	MM1501XNRE
IC8002	AD301988	I0UF015010	IC	MM1501XNRE
IC8004	BZ611074	I0QF045800	IC	NJM4580M
IC8501	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP
IC8502	AD301777	I17F0742K0	IC	PCM1742KE/2K
IC8504	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP
		TRANSISTORS		
Q101	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L
Q102	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q103	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description		
		TRANSISTORS			
Q104	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q105	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q106	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146	
Q107	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q108	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q110	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q112	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q114	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q116	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q350	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q401	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT	
Q402	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)	
⚠Q403	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638(OEC)	
Q404	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q405	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q406	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	
Q407	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT	
Q408	AD300674	TCAT032070	TRANSISTOR,SILICON	KTC3207-AT	
Q409	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	
Q410	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q601	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK	
Q602	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q604	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q605	BZ510025	TPYJB05001	COMPOUND TRANSISTOR	DTA114EKAT146	
Q606	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
⚠Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
⚠Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON	2SC752(G)(TM)_Y	
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON	2SA1837	
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON	2SC4793	
Q863	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP TP	
Q864	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP TP	
Q1501	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q1502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q1702	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
⚠Q1705	BZ510098	T220033260	FET	2SK3326(2)	
⚠Q1706	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT	
Q2001	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146	
Q2002	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q2003	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2004	BZ510113	T27T030180	FET	2SK3018	
Q2005	BZ510113	T27T030180	FET	2SK3018	
Q2006	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146	
Q2007	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2008	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2201	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2202	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2203	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2302	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK	
Q2303	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q2304	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	or
	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK	
Q2305	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK	
Q3001	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q3002	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT	
Q3003	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT	
Q3004	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q3005	AD301934	TBA0013660	TRANSISTOR,SILICON	KTB1366(O,Y)	
Q3006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q3007	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y	

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
		TRANSISTORS		
Q3008	BZ510081	TPYJA05001	COMPOUND TRANSISTOR	DTA143EKAT146
Q3009	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146
Q3010	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3011	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q3014	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3015	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4001	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4002	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4003	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q4201	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4202	BZ510026	TPYJC05001	COMPOUND TRANSISTOR	DTA124EKAT146
Q4203	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4204	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q4210	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4211	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4212	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4501	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4503	BZ510026	TPYJC05001	COMPOUND TRANSISTOR	DTA124EKAT146
Q4504	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q4505	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q4506	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4507	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4509	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4511	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q8002	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8007	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q8501	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8502	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8503	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
		COILS &TRANSFORMERS		
L001	BZ310002	021673101K	COIL	100 UH
L301	BZ310005	02167D101K	COIL	100 UH
L401	AD300117	02D1000001	COIL	ELC16B501EN
L402	AD300400	022100034A	COIL,LINEARITY	ELH5L4132N
L403	BZ310004	021679472K	COIL	4.7 MH
L601	BZ310041	02167F101J	COIL	100 UH
L602	BZ310005	02167D101K	COIL	100 UH
L603	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH
L804	AD300123	021673151K	COIL	150 UH
L1501	AD300612	02167F100J	COIL	10 UH
L1502	BZ310043	021LA6150K	COIL	15 UH
L1504	AD300123	021673151K	COIL	150 UH
L1505	BZ310201	0216A6101K	COIL	100 UH
L1506	BZ310201	0216A6101K	COIL	100 UH
⚠L1701	BZ310180	029T000105	COIL,LINE FILTER	2R2A752F28
⚠L1703	AD302360	028R270012	COIL,DEGAUSS	8R270012
⚠L1704	BZ310181	02A6B2E0A1	CORE,FERRITE	HF70T22*10*14
L2001	AE000529	0216S4100J	COIL	10 UH
L2002	AE000529	0216S4100J	COIL	10 UH
L2004	AE000095	02167F2R7J	COIL	2.7 UH
L3001	BZ310150	02167E220K	COIL	22 UH
L3002	AD301785	02167E100K	COIL	10 UH
L4001	BZ310039	02167F220J	COIL	22 UH
L4002	BZ310039	02167F220J	COIL	22 UH
L4003	BZ310039	02167F220J	COIL	22 UH
L4004	BZ310039	02167F220J	COIL	22 UH
L4205	BZ310041	02167F101J	COIL	100 UH
L4501	BZ310005	02167D101K	COIL	100 UH
L4502	BZ310114	031626009R	COIL,BIAS OSC	1626009
L4504	BZ310041	02167F101J	COIL	100 UH
L4505	BZ310040	02167F470J	COIL	47 UH
L4506	BZ310040	02167F470J	COIL	47 UH
L4509	BZ310005	02167D101K	COIL	100 UH
L5501	BZ310201	0216A6101K	COIL	100 UH
L5502	BZ310039	02167F220J	COIL	22 UH
L5503	BZ310039	02167F220J	COIL	22 UH

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
		COILS &TRANSFORMERS		
L5504	BZ310039	02167F220J	COIL	22 UH
L8001	BZ310041	02167F101J	COIL	100 UH
L8002	BZ310201	0216A6101K	COIL	100 UH
L8003	BZ310041	02167F101J	COIL	100 UH
L8501	BZ310191	02167F2R2J	COIL	2.2 UH
L8502	BZ310191	02167F2R2J	COIL	2.2 UH
L8503	BZ310191	02167F2R2J	COIL	2.2 UH
L8504	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L8507	BZ310191	02167F2R2J	COIL	2.2 UH
L8509	BZ310191	02167F2R2J	COIL	2.2 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
⚠T1701	AE001021	048142066S	TRANSFORMER,SWITCHING	8142066S
		JACKS		
⚠J801	AD301936	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
⚠J2201	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
J2202	BZ614146	060G421016	RCA JACK	HTJ-032-05AY
J2203	BZ614147	060G421017	RCA JACK	HTJ-032-05AW
J2204	BZ614280	060G421020	RCA JACK	HTJ-032-05AR
J4201	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J4202	BZ614399	060J411018	RCA JACK	MSP-213V1-432 PBSN
J8007	BZ614400	060J401082	RCA JACK	MSP-251V-05PBSN
		SWITCHES		
SW101	BZ612016	0508S11001	SWITCH (LEAF)	LSA-1144EAU
SW2201	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2202	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2203	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2204	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2205	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2206	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2207	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2251	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2252	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2253	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2254	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2255	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2256	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2257	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2258	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
		VARIABLE RESISTORS		
VR404	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR1701	AD301937	V1K6314BTE	VOLUME,SEMI FIXED	NVG6TLTAB103
		P.C.BOARD ASSEMBLIES		
PCB010	AE001470	A5I702A010	PCB ASS'Y	VMC293B
PCB080	AE001471	A5I701A080	PCB ASS'Y	TMC564B
PCB110	AE001472	A5I701A110	PCB ASS'Y	TCA391C
PCB130	AE001473	A5I701A130	PCB ASS'Y	VMC297A
PCB270	AE001474	A5I701A270	PCB ASS'Y	TECB10B
PCBD80	AE001475	A5I701AD80	PCB ASS'Y	TEAA93C
		MISCELLANEOUS		
B403	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B1703	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B1704	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2001	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2003	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2005	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2201	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B2301	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8001	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B8501	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8502	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8503	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8505	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
BL001	BZ310014	023C00022A	COIL,BALUN	HPN-01
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

Location No.	TSB P/N	Reference No.	Description	
		MISCELLANEOUS		
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
CD002	BZ614411	06CU011902	CORD,CONNECTOR	CU011902
CD303	BZ614424	06CU149001	CORD,CONNECTOR	CU149001
CD602	AD302218	06CU291701	CORD,CONNECTOR	CU291701
CD603	AE001028	06CU285001	CORD,CONNECTOR	CU285001
CD604	AE000132	06CU282401	CORD,CONNECTOR	CU282401
CD802	AD301042	06CU253401	CORD,CONNECTOR	CU253401
CD803	AD300094	06CP83035A	CORD,CONNECTOR	CP83035A
CD851	AD302371	06CU244701	CORD,CONNECTOR	CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR	CU232001
CP001	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP101	BZ614289	06972C0010	CONNECTOR PCB SIDE	TMC-J12P-B2
CP303	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
⚠CP404	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS
CP601	AD301943	069S240639	CONNECTOR PCB SIDE	A2001WR2-4P
CP602	BZ614462	067U009039	WIRE HOLDER	B2013H02-9P
CP604	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
⚠CD1702	BZ614407	120R415906	CORD,AC BUSH	0R415906
CD2251	BZ614408	06CU220701	CORD,CONNECTOR	CU220701
CD4501	BZ614373	122F061502	CORD,JUMPER	2F061502
CD8501	AE000134	122H0C2204	CORD,JUMPER	2H0C2204
CD8505	AD301946	06CU2B3301	CORD,CONNECTOR	CU2B3301
CP1702	AD301944	067U008029	WIRE HOLDER	B2013H02-8P
⚠CP1704	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP1707	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP1708	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP2001	AD302396	069JYOT099	CONNECTOR PCB SIDE	IMSA-9631S-24Y901
CP2201	BZ614416	069S220629	CONNECTOR PCB SIDE	A2001WV2-2P
CP2301	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
CP2302	AD301795	069S230639	CONNECTOR PCB SIDE	A2001WR2-3P
CP4501	BZ614011	0697290620	CONNECTOR PCB SIDE	TOC-C09X-A1
CP4502	BZ614050	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
CP4503	AD301649	067U002019	WIRE HOLDER	B2013H02-2P
CP602B	BZ614458	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P
CP8001	BZ614214	069S2B0629	CONNECTOR PCB SIDE	A2001WV2-11P
CP8002	AD301797	069J7C0029	CONNECTOR PCB SIDE	IMSA-9604S-12Z14
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P
CP802A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP802B	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP8502	AD301798	069J7C0019	CONNECTOR PCB SIDE	IMSA-9604S-12Z13
CP851A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P
CUS011	BZ710148	800WFAA007	CUSHION B	
CUS013	BZ710149	800WFAA008	CUSHION C	
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
EL003	BZ614044	124120301A	EYE LET	XRY20X30BD
EL004	BZ614043	124116281A	EYE LET	XRY16X28BD
⚠F1701	AD301046	081PC6R305	FUSE	51MS063L
⚠FB401	AD302315	043227012F	TRANSFORMER,FLYBACK	3227012F
FH1701	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH1702	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS2201	AD301949	0773071003	REMOTE RECEIVER	RPM7138-SH10
⚠RY1701	AD300114	0560V20115	RELAY	ALKS321
⚠SP351	BZ614381	070C546004	SPEAKER	SG04H02BRA
⚠SP352	BZ614381	070C546004	SPEAKER	SG04H02BRA
TM101	AD301950	076D0FG020	TRANSMITTER	ORV201N36010
⚠TU001	AE000273	0163300005	RF UNIT	115-V-K015AR_B
⚠TH1701	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
⚠V801	AD302375	0985270901	CRT W/DY	A68LXZ696X04
X101	BZ613006	100DA32R01	CRYSTAL	DT-26
X102	BZ613033	100CT01403	CRYSTAL	HC-49/U-S
X601	AD301951	100CT3R532	CRYSTAL	HC-49/U-S
X2001	AD301802	100BT02003	CRYSTAL	HC-49U/S
X4001	AD301803	100BT02701	CRYSTAL	HC-49U/S
X4501	BZ613017	100CT3R502	CRYSTAL	HC-49/U

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1(-R))

RESISTOR

RC.....	CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
		RESISTORS		
⚠R401	AD301014	R4X5T6472F	R,METAL	4.7K OHM 1/6W
⚠R403	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W
⚠R405	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W
⚠R406	AE001016	R3X28A471J	R,METAL OXIDE	470 OHM 2W
⚠R412	BZ210021	R65582680J	R,FUSE	68 OHM 1/2W
⚠R417	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W
⚠R423	BZ210149	R3X18AR68J	R,METAL OXIDE	0.68 OHM 2W
⚠R429	BZ210130	R002T21R5J	RC	1.5 OHM 1/2W
⚠R430	AD302205	R5X34F1R8J	R,CEMENT	0 1.8 OHM 10W
⚠R434	BZ210130	R002T21R5J	RC	1.5 OHM 1/2W
R435	AD301595	R65582010J	R,FUSE	1 OHM 1/2W
R436	BZ210277	R3X181101J	R,METAL OXIDE	100 OHM 1W
⚠R440	AE001017	R5X34F472J	R,CEMENT	0 4.7K OHM 10W
⚠R445	BZ210079	R6558A4R7J	R,FUSE	4.7 OHM 2W
R449	AE000145	R002T2561J	RC	560 OHM 1/2W
⚠R454	AE000676	R3K181102J	R,METAL	1K OHM 1W
⚠R804	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
⚠R806	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
⚠R808	BZ210026	R3X18A153J	R,METAL OXIDE	15K OHM 2W
⚠R855	AD301019	R65582331J	R,FUSE	330 OHM 1/2W
⚠R881	AD301344	R3X18A151J	R,METAL OXIDE	150 OHM 2W
⚠R1701	BZ210206	R002T2155J	RC	1.5M OHM 1/2W
⚠R1702	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
⚠R1714	BZ210243	R3X181R18J	R,METAL OXIDE	0.18 OHM 1W
⚠R1717	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W
⚠R1718	BZ210250	R5Y2CE1R2J	R,CEMENT	1.2 OHM 7W
⚠R1720	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
R3010	AD302206	R3X181180J	R,METAL OXIDE	18 OHM 1W
R3021	BZ210134	R3X181330J	R,METAL OXIDE	33 OHM 1W
		CAPACITORS		
C321	BZ210176	E02LF3222M	CE	2200 UF 25V
C357	BZ110240	E02L05220M	CE	22 UF 50V
⚠C403	BZ110195	E02LU8220M	CE	22 UF 100V
C404	BZ110023	E62DFB470M	CE	47 UF 160V
⚠C408	AE000911	P4N8FK222H	CMPP	0.0022UF 1.5KV
⚠C409	AD301434	E02LU4101M	CE	100 UF 35V
C411	AE001467	C0J0B05L2K	CC	330 PF 500V B or
	AE001018	C0JTB05L2K	CC	330 PF 500V B
C412	AE001019	P4J7F3434J	CMPP	0.43 UF 250V PMS
⚠C417	AD301123	P3N1F5273J	CPP	0.027 UF 630V
⚠C418	BZ110211	P4N8FK133H	CMPP	0.013 UF 1.5KV
⚠C429	AD301434	E02LU4101M	CE	100 UF 35V
⚠C430	BZ110101	E5EZF3222M	CE	2200 UF 25V
⚠C434	BZ110055	E5EZF4102M	CE	1000 UF 35V
C435	BZ110057	E53FF56R8K	CE	6.8 UF 50V NP
⚠C446	AD300061	E5EZFD220M	CE	22 UF 250V
C449	BZ110202	C0PLRR713K	CC	0.001 UF 2KV RR
C808	AD300078	C0JBB0713K	CC	0.001 UF 2KV B
⚠C1701	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL
C1705	BZ110182	C03L0R713K	CC	0.001 UF 2KV R
C1707	BZ110203	C0PLRR7W2K	CC	820 PF 2KV R
⚠C1708	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B
⚠C1710	BZ110226	C0JBB07H3K	CC	0.0022UF 2KV B
⚠C1711	AD301391	CD39E0MQ3M	CC	0.0047UF 250V
⚠C1714	AE000700	E52DHC681M	CE	680 UF 200V
C1716	BZ110010	E02L03222M	CE	2200 UF 25V
⚠C1717	BZ110055	E5EZF4102M	CE	1000 UF 35V
⚠C1720	BZ110130	E62NFC221M	CE	220 UF 200V
⚠C1725	AE000074	E02L08101M	CE	100 UF 100V
⚠C1728	AD300785	E02LT1222M	CE	2200 UF 10V
C1729	AE000743	C03L0R7N2K	CC	390 PF 2KV R
C1732	BZ110032	E5EZF3102M	CE	1000 UF 25V
⚠C1733	AE000467	E02LU54R7M	CE	4.7 UF 50V
C3009	BZ110154	E02L00102M	CE	1000 UF 6.3V
C3010	AE000744	E02L00222M	CE	2200 UF 6.3V
		DIODES		
D101	AD301638	0010E00330	INFRARED LED	LTE-3271T-012A-O
D102	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D103	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D105	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D106	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
			DIODES	
D108	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D402	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D403	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D404	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D405	AD300074	D2BFRS4FS0	DIODE,SILICON	RS-4FS
⚠D406	AD300073	D2BFRU4AM0	DIODE,SILICON	RU-4AM
D407	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
⚠D408	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D410	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D411	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
⚠D412	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D413	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
D414	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77
⚠D415	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D416	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
D417	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D418	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D419	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D420	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D601	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D602	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D603	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D604	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D605	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77
D606	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2
D801	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D852	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D853	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D854	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D855	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D856	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D857	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
D858	BZ410011	D28TELS2N2	DIODE,RECTIFER	10ELS2N-TA1B2
D1501	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D1701	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1702	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1703	AE000141	D97U02R71B	DIODE,ZENER	MTZJ2.7B T-77
⚠D1704	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
⚠D1705	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1706	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1707	BZ410007	D23TGP15J0	DIODE,SILICON	RGP15J-G23
D1708	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1709	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D1710	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
⚠D1711	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1712	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77
D1713	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
⚠D1714	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1715	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D1716	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1717	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
⚠D1718	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1719	BZ410115	D2LKB340L0	DIODE,SCHOTTKY	SB340L-6737
D1720	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1721	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1722	AD300731	D2WXN49370	DIODE,SILICON	1N4937
⚠D1723	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
D1724	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
⚠D1725	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC
D1726	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1727	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D1728	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1729	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1730	AD301980	D2CF2016L0	DIODE,SILICON	FE201-6L49
⚠D1731	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D1732	AD300070	D97U01201B	DIODE,ZENER	MTZJ12B T-77

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
		DIODES		
D1733	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D1734	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D2001	BZ410120	DDARDS1210	DIODE,SILICON	KDS121RTK
D2002	BZ410121	DDARDS1200	DIODE,SILICON	KDS120RTK
D2201	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D2202	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D2204	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D2205	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2206	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D2207	BZ410087	0021E2Q140	LED	LTL-1CHEE-002A
D3001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D3002	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D3003	BZ410090	D97U04R71B	DIODE,ZENER	MTZJ4.7B T-77
D3004	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D3005	BZ410012	D28TQS04N0	DIODE,SCHOTTKY	11EQS04N-TA1B2
D3007	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D3008	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D3011	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D4201	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D4204	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D4205	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D4206	BZ410034	D97U01301B	DIODE,ZENER	MTZJ13B T-77
D4207	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D5501	BZ410123	D2W0011E10	DIODE,SILICON	11E1-B-EIC
D5502	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D8501	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8502	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8503	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8504	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8505	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8506	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
D8510	BZ410119	DDDRL41480	DIODE,SILICON	MCL4148
		ICS		
IC101	AE001468	I51F58074B	IC	OEC8074B
IC103	AD301641	I9UF032310	IC	PST3231NR
IC199	AE002076	A5I703A015	IC	S-24C04BDP-LA
IC302	AD301983	I01FF58910	IC	AN5891SA-E1V
IC352	AD302184	I0FSP7522N	IC	AN7522N
⚠IC401	AD300414	I03TD80410	IC	LA78041
IC601	AD302210	I03FC63240	IC	LA76324M
IC602	AE000143	I1KF98L100	IC	KIA78L10F-RTF
IC1501	AD300609	I05FE90A45	IC	TC90A45F
IC1502	AD301988	I0UF015010	IC	MM1501XNRE
IC1504	AD301988	I0UF015010	IC	MM1501XNRE
IC1505	AD301927	I0UF015040	IC	MM1504XNRE
⚠IC1701	AD301771	000220001W	PHOTO COUPLER	PS2561L1-1-V(W)
⚠IC1702	AD302211	I1KJ9A431A	IC	KIA431A-AT
IC2001	AD302391	I5PKL63160	IC	STM6316ATXXZ
IC2301	BZ611126	I03F065600	IC	LA6560
IC2303	AD301770	I07E00358F	IC	BA10358F-E2
IC2304	AD301770	I07E00358F	IC	BA10358F-E2
⚠IC3001	AD301931	I1KA78R050	IC	KIA278R05PI
IC3002	AD301929	I1KA78R090	IC	KIA278R09PI
IC3003	AD301931	I1KA78R050	IC	KIA278R05PI
IC3004	AD301931	I1KA78R050	IC	KIA278R05PI
IC4002	AD302392	I5PK055890	IC	STM5589AVA
IC4003	AD301774	I5CF0CU040	IC	SN74AHCU04PWR
IC4007	AE000526	IF8J064007	IC	IS42S16400-7T
IC4012	AE000527	I5PJ060ET9	IC	M29W160ET90N6
IC4501	BZ611095	I03F3205M0	IC	LA71205M-MPB
IC5501	BZ611114	I01F63FBP0	IC	AN3663FBP
IC8001	AD301988	I0UF015010	IC	MM1501XNRE
IC8002	AD301988	I0UF015010	IC	MM1501XNRE
IC8004	AE001295	I0QJ045800	IC	NJM4580M(TE1)
IC8501	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP
IC8502	AD301777	I17F0742K0	IC	PCM1742KE/2K
IC8504	BZ611130	I0GF9XZ010	IC	PQ070XZ01ZP
		TRANSISTORS		
Q101	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L
Q102	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q103	BZ410097	0000M00390	PHOTO TRANSISTOR	ST-304L

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description		
		TRANSISTORS			
Q104	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q105	BZ410106	0002700680	PHOTO COUPLER	RPI-352C40N	
Q106	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146	
Q107	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q108	BZ410107	0002700690	PHOTO COUPLER	RPI-303	
Q110	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q112	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q114	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q116	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q350	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q401	BZ510097	TCAT03227Y	TRANSISTOR,SILICON	KTC3227_Y-AT	
Q402	AD300027	TC30041590	TRANSISTOR,SILICON	2SC4159(D,E)	
⚠Q403	AD302136	TD50026380	TRANSISTOR,SILICON	2SD2638(OEC)	
Q404	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q405	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q406	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	
Q407	BZ510096	TNATB03005	COMPOUND TRANSISTOR	KRC102MAT	
Q408	AD300674	TCAT032070	TRANSISTOR,SILICON	KTC3207-AT	
Q409	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA	
Q410	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q601	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK	
Q602	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q604	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q605	BZ510025	TPYJB05001	COMPOUND TRANSISTOR	DTA114EKAT146	
Q606	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)	
⚠Q810	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
⚠Q811	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
⚠Q812	AD301032	TCATC3199Y	TRANSISTOR,SILICON	KTC3199_Y-AT	
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q853	AD300024	TCUT00752Y	TRANSISTOR,SILICON	2SC752(G)(TM)_Y	
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)	
Q858	AD300029	TAU0018370	TRANSISTOR,SILICON	2SA1837	
Q859	AD300025	TCU0047930	TRANSISTOR,SILICON	2SC4793	
Q863	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP TP	
Q864	AD300442	TCYT1740S0	TRANSISTOR,SILICON	2SC1740SP TP	
Q1501	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q1502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q1503	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q1702	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)	
⚠Q1705	BZ510098	T220033260	FET	2SK3326(2)	
⚠Q1706	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT	
Q2001	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146	
Q2002	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q2003	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2004	BZ510113	T27T030180	FET	2SK3018	
Q2005	BZ510113	T27T030180	FET	2SK3018	
Q2006	BZ510112	T67J1036K0	TRANSISTOR,SILICON	2SA1036KT146	
Q2007	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2008	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2201	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2202	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2203	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	
Q2301	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK	
Q2302	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK	
Q2303	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S	
Q2304	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146	or
	BZ510071	TNAAB05003	COMPOUND TRANSISTOR	KRC102SRTK	
Q2305	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK	
Q3001	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q3002	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT	
Q3003	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT	
Q3004	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
⚠Q3005	AD301934	TBA0013660	TRANSISTOR,SILICON	KTB1366(O,Y)	
Q3006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S	
Q3007	BZ510057	TAAT01281Y	TRANSISTOR,SILICON	KTA1281_Y	

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
		TRANSISTORS		
Q3008	BZ510081	TPYJA05001	COMPOUND TRANSISTOR	DTA143EKAT146
Q3009	BZ510020	TNYJB05001	COMPOUND TRANSISTOR	DTC114EKAT146
Q3010	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3011	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q3014	BZ510105	TCAT03209Y	TRANSISTOR,SILICON	KTC3209_Y-AT
Q3015	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4001	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4002	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4003	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q4201	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4202	BZ510026	TPYJC05001	COMPOUND TRANSISTOR	DTA124EKAT146
Q4203	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4204	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q4210	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4211	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4212	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4501	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4502	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
Q4503	BZ510026	TPYJC05001	COMPOUND TRANSISTOR	DTA124EKAT146
Q4504	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q4505	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q4506	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4507	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q4509	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q4511	BZ510001	T6YJ1037K0	TRANSISTOR,SILICON	2SA1037AKT146R,S
Q8002	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8006	BZ510002	T8YJ2412K0	TRANSISTOR,SILICON	2SC2412KT146 R,S
Q8007	BZ510021	TNYJC05001	COMPOUND TRANSISTOR	DTC124EKAT146
Q8501	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8502	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8503	BZ510108	TAAA1504SY	TRANSISTOR,SILICON	KTA1504S_Y_RTK
Q8505	BZ510109	TCAA3875SY	TRANSISTOR,SILICON	KTC3875S_Y_RTK
		COILS &TRANSFORMERS		
L001	BZ310002	021673101K	COIL	100 UH
L301	BZ310005	02167D101K	COIL	100 UH
L401	AD300117	02D1000001	COIL	ELC16B501EN
L402	AD300400	022100034A	COIL,LINEARITY	ELH5L4132N
L403	BZ310004	021679472K	COIL	4.7 MH
L601	BZ310041	02167F101J	COIL	100 UH
L602	BZ310005	02167D101K	COIL	100 UH
L603	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L802	AD300123	021673151K	COIL	150 UH
L803	AD300123	021673151K	COIL	150 UH
L804	AD300123	021673151K	COIL	150 UH
L1501	AD300612	02167F100J	COIL	10 UH
L1502	BZ310043	021LA6150K	COIL	15 UH
L1504	AD300123	021673151K	COIL	150 UH
L1505	BZ310201	0216A6101K	COIL	100 UH
L1506	BZ310201	0216A6101K	COIL	100 UH
⚠L1701	BZ310180	029T000105	COIL,LINE FILTER	2R2A752F28
⚠L1703	AD302360	028R270012	COIL,DEGAUSS	8R270012
⚠L1704	BZ310181	02A6B2E0A1	CORE,FERRITE	HF70T22*10*14
L2001	AE000529	0216S4100J	COIL	10 UH
L2002	AE000529	0216S4100J	COIL	10 UH
L2004	AE000095	02167F2R7J	COIL	2.7 UH
L3001	BZ310150	02167E220K	COIL	22 UH
L3002	AD301785	02167E100K	COIL	10 UH
L4001	BZ310039	02167F220J	COIL	22 UH
L4002	BZ310039	02167F220J	COIL	22 UH
L4003	BZ310039	02167F220J	COIL	22 UH
L4004	BZ310039	02167F220J	COIL	22 UH
L4205	BZ310041	02167F101J	COIL	100 UH
L4501	BZ310005	02167D101K	COIL	100 UH
L4502	BZ310114	031626009R	COIL,BIAS OSC	1626009
L4504	BZ310041	02167F101J	COIL	100 UH
L4505	BZ310040	02167F470J	COIL	47 UH
L4506	BZ310040	02167F470J	COIL	47 UH
L4509	BZ310005	02167D101K	COIL	100 UH
L5501	BZ310201	0216A6101K	COIL	100 UH
L5502	BZ310039	02167F220J	COIL	22 UH
L5503	BZ310039	02167F220J	COIL	22 UH

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
		COILS &TRANSFORMERS		
L5504	BZ310039	02167F220J	COIL	22 UH
L8001	BZ310041	02167F101J	COIL	100 UH
L8002	BZ310201	0216A6101K	COIL	100 UH
L8003	BZ310041	02167F101J	COIL	100 UH
L8501	BZ310191	02167F2R2J	COIL	2.2 UH
L8502	BZ310191	02167F2R2J	COIL	2.2 UH
L8503	BZ310191	02167F2R2J	COIL	2.2 UH
L8504	BZ310118	02AHB9A972	CORE,FERRITE	W5T29X7.5X19
L8507	BZ310191	02167F2R2J	COIL	2.2 UH
L8509	BZ310191	02167F2R2J	COIL	2.2 UH
T401	AD301125	0450190161	TRANS,HORIZONTAL DRIVE	ETH19Y203AY
⚠T1701	AE001021	048142066S	TRANSFORMER,SWITCHING	8142066S
		JACKS		
⚠J801	AD301936	066F130021	SOCKET,CATHODE RAY,TUBE	ISHS62S
⚠J2201	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
J2202	BZ614146	060G421016	RCA JACK	HTJ-032-05AY
J2203	BZ614147	060G421017	RCA JACK	HTJ-032-05AW
J2204	BZ614280	060G421020	RCA JACK	HTJ-032-05AR
J4201	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J4202	BZ614399	060J411018	RCA JACK	MSP-213V1-432 PBSN
J8007	BZ614400	060J401082	RCA JACK	MSP-251V-05PBSN
		SWITCHES		
SW101	BZ612016	0508S11001	SWITCH (LEAF)	LSA-1144EAU
SW2201	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2202	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2203	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2204	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2205	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2206	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2207	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2251	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2252	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2253	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2254	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2255	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2256	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2257	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW2258	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
		VARIABLE RESISTORS		
VR404	BZ210218	V1K63H3BTE	VOLUME,SEMI FIXED	NVG6TLTAB222
VR1701	AD301937	V1K6314BTE	VOLUME,SEMI FIXED	NVG6TLTAB103
		P.C.BOARD ASSEMBLIES		
PCB010	AE002077	A5I703A010	PCB ASS'Y	VMC293B
PCB080	AE001471	A5I701A080	PCB ASS'Y	TMC564B
PCB110	AE001472	A5I701A110	PCB ASS'Y	TCA391C
PCB130	AE001473	A5I701A130	PCB ASS'Y	VMC297A
PCB270	AE001474	A5I701A270	PCB ASS'Y	TECB10B
PCBD80	AE001475	A5I701AD80	PCB ASS'Y	TEAA93C
		MISCELLANEOUS		
B403	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B1703	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B1704	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2001	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2003	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2005	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B2201	BZ310129	024HT03564	CORE,BEADS	W4BRH3.5X6X1.0
B2301	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4002	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B4004	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8001	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
B8501	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8502	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8503	BZ310186	024HC31022	CORE,BEADS	FCM2012H-102T04
B8505	BZ310122	024HT03563	CORE,BEADS	W4BRH3.5X6X1.0X2
BL001	BZ310014	023C00022A	COIL,BALUN	HPN-01
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

Location No.	TSB P/N	Reference No.	Description	
		MISCELLANEOUS		
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
CD002	BZ614411	06CU011902	CORD,CONNECTOR	CU011902
CD303	BZ614424	06CU149001	CORD,CONNECTOR	CU149001
CD602	AD302218	06CU291701	CORD,CONNECTOR	CU291701
CD603	AE001028	06CU285001	CORD,CONNECTOR	CU285001
CD604	AE000132	06CU282401	CORD,CONNECTOR	CU282401
CD802	AD301042	06CU253401	CORD,CONNECTOR	CU253401
CD803	AD300094	06CP83035A	CORD,CONNECTOR	CP83035A
CD851	AD302371	06CU244701	CORD,CONNECTOR	CU244701
CD852	AD301043	06CU232001	CORD,CONNECTOR	CU232001
CP001	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP101	BZ614289	06972C0010	CONNECTOR PCB SIDE	TMC-J12P-B2
CP303	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
⚠CP404	AD300095	069X460029	CONNECTOR PCB SIDE	B06B-DVS
CP601	AD301943	069S240639	CONNECTOR PCB SIDE	A2001WR2-4P
CP602	BZ614462	067U009039	WIRE HOLDER	B2013H02-9P
CP604	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
⚠CD1702	BZ614407	120R415906	CORD,AC BUSH	0R415906
CD2251	BZ614408	06CU220701	CORD,CONNECTOR	CU220701
CD4501	BZ614373	122F061502	CORD,JUMPER	2F061502
CD8501	AE000134	122H0C2204	CORD,JUMPER	2H0C2204
CD8505	AD301946	06CU2B3301	CORD,CONNECTOR	CU2B3301
CP1702	AD301944	067U008029	WIRE HOLDER	B2013H02-8P
⚠CP1704	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP1707	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP1708	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP2001	AD302396	069JYOT099	CONNECTOR PCB SIDE	IMSA-9631S-24Y901
CP2201	BZ614416	069S220629	CONNECTOR PCB SIDE	A2001WV2-2P
CP2301	AD301858	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
CP2302	AD301795	069S230639	CONNECTOR PCB SIDE	A2001WR2-3P
CP4501	BZ614011	0697290620	CONNECTOR PCB SIDE	TOC-C09X-A1
CP4502	BZ614050	069J760029	CONNECTOR PCB SIDE	IMSA-9604S-06Z14
CP4503	AD301649	067U002019	WIRE HOLDER	B2013H02-2P
CP602B	BZ614458	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P
CP8001	BZ614214	069S2B0629	CONNECTOR PCB SIDE	A2001WV2-11P
CP8002	AD301797	069J7C0029	CONNECTOR PCB SIDE	IMSA-9604S-12Z14
CP801B	AD300752	069S250629	CONNECTOR PCB SIDE	A2001WV2-5P
CP802A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP802B	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP8502	AD301798	069J7C0019	CONNECTOR PCB SIDE	IMSA-9604S-12Z13
CP851A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP851B	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP852B	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P
CUS011	BZ710148	800WFAA007	CUSHION B	
CUS013	BZ710149	800WFAA008	CUSHION C	
EL001	BZ614044	124120301A	EYE LET	XRY20X30BD
EL002	BZ614043	124116281A	EYE LET	XRY16X28BD
EL003	BZ614044	124120301A	EYE LET	XRY20X30BD
EL004	BZ614043	124116281A	EYE LET	XRY16X28BD
⚠F1701	AD301046	081PC6R305	FUSE	51MS063L
⚠FB401	AD302315	043227012F	TRANSFORMER,FLYBACK	3227012F
FH1701	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH1702	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS2201	AD301949	0773071003	REMOTE RECEIVER	RPM7138-SH10
⚠RY1701	AD300114	0560V20115	RELAY	ALKS321
⚠SP351	BZ614381	070C546004	SPEAKER	SG04H02BRA
⚠SP352	BZ614381	070C546004	SPEAKER	SG04H02BRA
TM101	AD301950	076D0FG020	TRANSMITTER	ORV201N36010
⚠TU001	AE000273	0163300005	RF UNIT	115-V-K015AR_B
⚠TH1701	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
⚠V801	AD302375	0985270901	CRT W/DY	A68LXZ696X04
X101	BZ613006	100DA32R01	CRYSTAL	DT-26
X102	BZ613033	100CT01403	CRYSTAL	HC-49/U-S
X601	AD301951	100CT3R532	CRYSTAL	HC-49/U-S
X2001	AD301802	100BT02003	CRYSTAL	HC-49U/S
X4001	AD301803	100BT02701	CRYSTAL	HC-49U/S
X4501	BZ613017	100CT3R502	CRYSTAL	HC-49/U

ELECTRICAL REPLACEMENT PARTS LIST
(MW27FN1C(-R))

RESISTOR

RC.....	CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN